



we  clean

User Guide

Vax Service line AU: 1300 361 505

NZ: 0800 800 900

Bagged Cylinder

bliss



Get Cleaning...

What's your Vax's model number?

2 7 0 0 0

What's your serial number? (Located on the base of the machine)

- - - -

Note these down in case you need them in future. Please keep instructions for further use.


www.vax.com.au

27000

Machine Overview



- | | |
|----------------------|----------------------|
| 1 Carry handle | 5 Variable power |
| 2 Bag full indicator | 6 Cord rewind button |
| 3 On / Off button | 7 Ionizer light |
| 4 Air Intake Duct | |

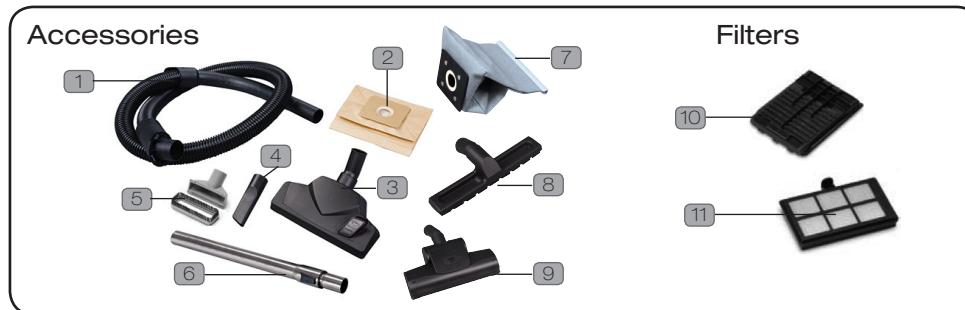

- | | |
|--|----------------------|
| 1 Hose and handle | 6 Telescopic wand |
| 2 Dust bag | 7 Cloth bag |
| 3 Combination floor head | 8 Hard floor brush |
| 4 Crevice tool | 9 Turbo brush |
| 5 2-in-1 tool (Upholstery & Dusting Brush) | 10 Pre motor filter |
| | 11 Post motor filter |

General Safety Information

FOR HOUSEHOLD USE ONLY.

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before disconnecting or connecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Use only as described in this manual. Use only Vax recommended attachments.
7. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Do not pull or carry by cord. Do not use the cord as a handle, close a door on the cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
9. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
10. Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow. Keep all openings free of dust, lint, hair or anything that might reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours.
14. Do not vacuum up harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.).
15. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
16. Do not use without ALL of the filters in place.
17. Take extra care when vacuuming on stairs.
18. Keep vacuuming area well lit.

19. Store the vacuum cleaner in a cool, dry area.

20. Turn off the on/off switch before unplugging the vacuum cleaner
21. Use only SAA approved 10 amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.
22. Damaged cord to be replaced by manufacturer or authorised Vax service agent.
23. We recommend the use of a residual current device with a residual current rating of 30mA or less.

WARNING: Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

CAUTION: The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical outlet, make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting and in use.

IMPORTANT: If the inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.

IMPORTANT: Cleaning filters improves vacuum performance. Vax recommends that your filters should be checked and cleaned periodically. If your filters are washable make sure they are completely dry before inserting back into the vacuum cleaner.

IMPORTANT: The motor is equipped with a thermal cut-out. If for any reason the unit should overheat, the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner from the electrical outlet and turn off the switch. Remove dirt container and empty. Clean filters. Allow the unit to cool for approximately one hour. To re-start, plug into an electrical outlet and switch back on.

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use. PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Operation

Keep your Vax like new



! IMPORTANT: The condition of the filters affects the performance of your machine. Please check and clean filters periodically (depending on the level of use). For full cleaning instructions, see Maintenance.

! IMPORTANT: Do not use the vacuum cleaner without all of the filters in place.

Assembling your vacuum cleaner

1. Attaching the Flexible Hose into the vacuum. (Pict. 1)
2. Connect the flexible hose into the air intake duct; push in until you hear a "click", indicating it is in its locked position.



1

3. Push the tube into the curved hose extension. (Pict. 2)
- Fit the tube into the Floor Brush by pushing. (Pict. 3)
- Adjust the tube to the desired length. (Pict. 2-3)



2



3

Operating the appliance

Once all attachments are in place

1. Unwind a sufficient length of cable and insert the plug into the wall outlet.
2. A yellow mark on the power cord shows the ideal cable length, (Pict. 4).
3. Do not pull the power cord beyond the red mark, (Pict. 5).
4. Insert the power plug into the wall outlet.

Operation



4



5

5. Press the power on/off button located on the unit to turn the vacuum cleaner "on", (Pict. 6).



6

To rewind the power cord:

1. Press the Cord Rewind Button with one hand and guide the power cord with the other hand to ensure that it does not whip around causing damage or injury, (Pict. 7).

To adjust the suction:

1. Slide the suction control button on the suction handle to increase or reduce the suction. (Pict. 8).



7



8

Operation

Carrying and moving the vacuum cleaner

The Vax BLISS has a special handling feature. The handle is in the front. There are small directional wheels at the bottom for easy movement around the house, (Pict. 9 - 10).



Motor thermostat

This motor is equipped with a protective motor thermostat. If for some reason the vacuum cleaner should overheat, the thermostat will automatically turn the unit off.

1. Should this occur unplug the vacuum from the wall out let and press the off switch, change dust bag and clean filters.
2. Allow the unit to cool for approximately 1 hour.
3. To restart, replug into the wall outlet and turn switch back on.

Ionizer function

Ionizers help to further clean the air of airborne particles working in conjunction with a HEPA filter. When the ionizer component of the unit is turned on, there is electricity or voltage applied to an internal needle that produce electrons which are subsequently discharged into the air. Once the electrons bond to air molecules, ions are produced and discharged into the room. They will then attach themselves to cigarette smoke, pollen, dust, and pet dander and will either fall to the floor to be swept later or be collected by the ionizer vacuum cleaner.

Maintenance

Clearing blockages

 **WARNING:** To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/ troubleshooting checks!

Hose blockages

The flexible hose should be disconnected from the vacuum cleaner. Carefully remove any blockages found and reconnect the hose securely.

Accessory blockages

Remove accessory from the hose/handle tube. Carefully remove the blockage and return to the cleaner.

Change dust bag

1. Open the front cover of vacuum.
2. Slide out the full dust bag.



Filters

All filters should be checked regularly for signs of damage, preferably after each cleaning task. The filters must be replaced immediately if they become damaged. Always disconnect the vacuum from the electrical outlet when checking the filters.

Removing & cleaning pre-motor filter and post-motor filter.

Pre-motor Sponge Filter

- Open the front cover of vacuum and lift out the dust bag
- Slide out the Pre-motor filter grill and clean or change filter (Pict. 4)
- Rinse under tap water and allow to dry for 24 hours by airing not near fire, radiators or other high temperature objects before refitting into the vacuum.

Post motor HEPA Filter

- Follow disassembling procedure as above (Pict.5)



WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/ troubleshooting checks.

Is there an accessory missing?

- Check the "Parts Overview" page in this guide to make sure the part is definitely included in your unit.

Why won't the vacuum cleaner pick up?

- The filter may be clogged; refer to Maintenance section.
- The dust bag is full or blocked; refer to Maintenance section.
- The dust bag may be incorrectly installed; refer to Maintenance section.

Why is there dust escaping from the vacuum?

- The filters may not be installed correctly; refer to Maintenance section.
- The dust bag may be incorrectly installed; remove the dust bag from the unit by pressing the dirt container removal and then re-attaching it to the unit, ensuring it is locked firmly back into place.
- The filters may be clogged; refer to Maintenance section.

Why won't the accessories pick up properly?

- The accessory may be blocked; refer to Maintenance section.

Why will the vacuum cleaner not run?

- It may not be plugged into the electrical outlet correctly; ensure that the plug is pushed in securely.
- The electrical outlet may not be working properly; check the fuse or breaker, or consult an electrician.
- The motor thermostat may have tripped; switch off and unplug the vacuum cleaner, and leave for one hour before switching the cleaner back on.



we  to help

Don't take your machine back to the shop, simply contact us

www.vax.com.au

AU: 1300 361 505
NZ: 0800 800 900

Other Information

Vax Service & Help

Vax Customer Careline AU: 1300 361 505 / NZ: 0800 800 900

Monday - Friday 8.30am to 5.30pm

Any queries or concerns about using the Vax, call the Vax Careline. Calls are charged at the Standard national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling. For the nearest Service Agent, please call the Vax Customer Careline or visit www.vax.com.au

Technical Specification

Voltage: 220-240V ~50Hz

Wattage: 2200W

Effective air flow: 1.8 - 2.0 m³/min

Vacuum pressure: \geq 22kPa

Suction power: \geq 320W

Cord length: 7m

Capacity: 3L

Weight: 6.1kg

Filters

Pre-motor: Washable sponge filter

Post-motor: Washable HEPA filter

Bag type: Paper bag / Cloth bag

Subject to technical change without notice.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Notes



we  clean

Distributed by Techtronic Industries Ptd. Ltd.
Level 1, 660 Doncaster Rd, Doncaster, Australia 3108.
www.vax.com.au Service Line: AU: 1300 361 505 / NZ: 0800 800 900