


**BAO6001-P/BAO6003-P  
fan built-in oven  
BAO6005-P multifunction  
built-in oven**

**Instruction manual**



**User Manual for your Baumatic  
BAO6001-P 4 function fan oven  
BAO6003-P 7 function fan oven  
BAO6005-P 9 function multifunction oven**

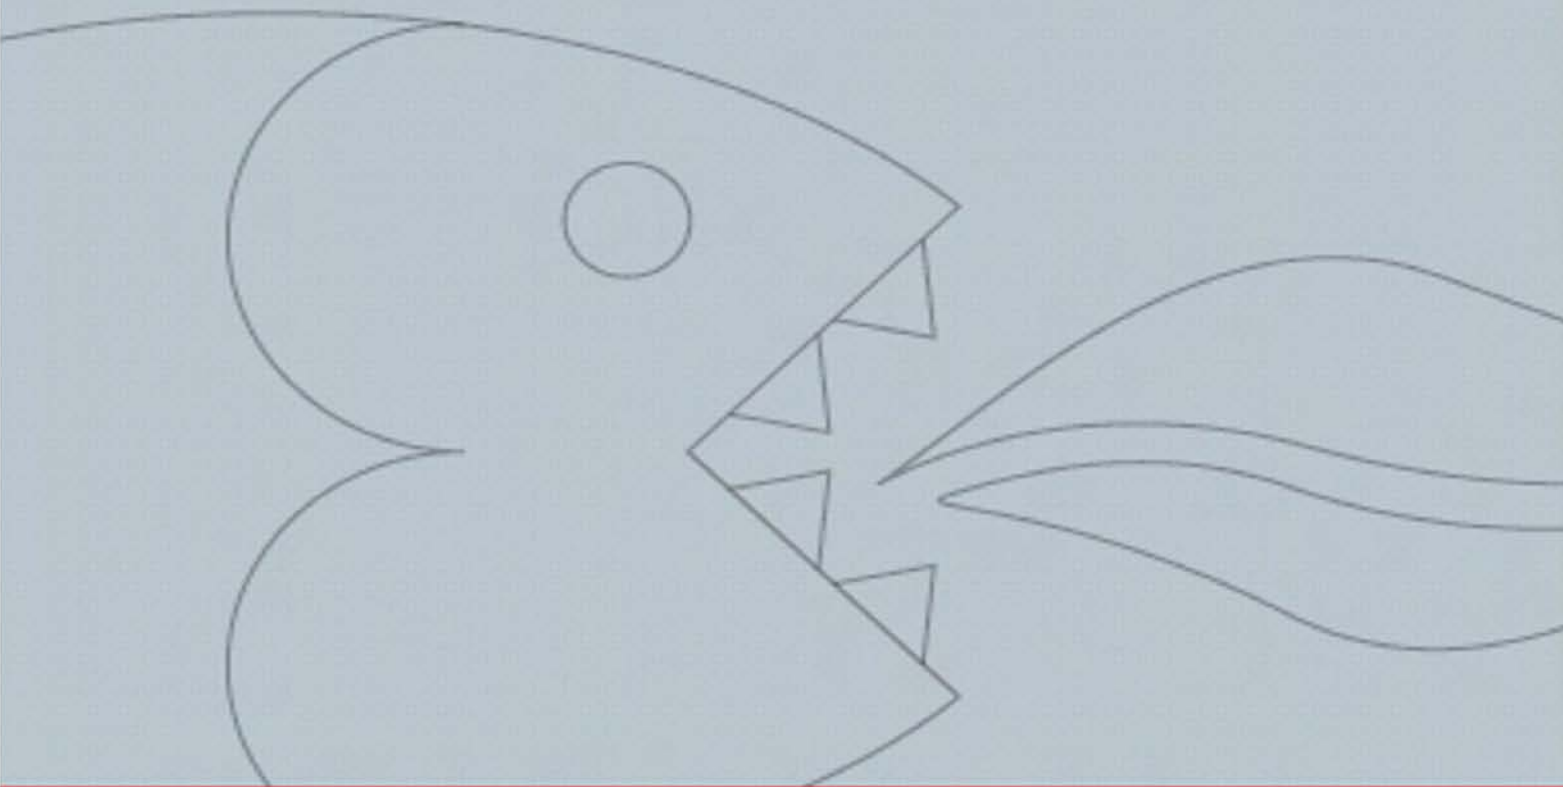

*The Smart Choice*

***NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.***

<b>Environmental note</b>	4
<b>Important safety information</b>	5-8
<b>Specifications</b>	9
Product specifications	9
Standard accessories	10
Electrical details	10
Control panel	11
Oven programmer/timer display	12
<b>Setting and using the oven programmer/timer</b> (BAO6001-P,BAO6003-P)	12
Setting the time of day	12
Setting the minute minder function	12
Setting the duration function	13
Setting the end cook function	14
Setting the start and end time function	15
Adjusting the audible signal	16
<b>Selecting a cooking function and temperature</b> (BAO6001-P,BAO6003-P)	16
Selecting manual operation mode	16
Selecting an oven function	16
BAO6001-P, BAO6003-P standard oven functions	17
BAO6001-P additional functions	17
BAO6003-P additional functions	17
Thermostat control knob	18
Oven operating light	18
BAO6005-P electronic programmer and cooking functions	19-22
<b>Cooking guidelines</b>	23
Warnings	24
<b>Cleaning and maintenance</b>	25
Removable oven roof liner (BAO6003-P only)	26
Replacing the oven bulb	26
Removing the oven door for cleaning	26-27
Removing the inner door glass for cleaning	27
<b>Installation</b>	28
Electrical connection	28
Installing the oven into the kitchen cabinet	29
Positioning the appliance	29
Ventilation requirements	30
<b>My appliance isn't working correctly</b>	31-32
<b>Contact details</b>	33

*Dear Customer,*

Congratulations on purchasing your new product from Think Appliances.

To register your parts and labour warranty (some conditions apply please refer to your warranty card for more details) please contact our Customer Care team on:

**1800 444 357**

Our Customer Care centre is there to ensure you get the most out of your appliance. For example, should you want to learn more about recommended cooking temperatures, the various cooking functions available, how to set and program your LED clock, and importantly taking care of your appliance when cleaning, please call us because we are here to help you.

It is important that you read through the following use and care manual thoroughly to familiarize yourself with the installation and operation requirements of your appliance to ensure optimum performance.

We also carry a complete range of spare parts for all Think products. For all your spare parts enquiries please contact our team at Pronto Parts on:

**1300 306 973**

Again, thank you for choosing an appliance brought to you by Think Appliances and we look forward to being of service to you.

Kind regards

*Management*

Think Appliances

## **Environmental note**

- The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- Please discard all packaging material with due regard for the environment.

## IMPORTANT SAFETY INFORMATION




Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Technical Department.

### General Information

- This appliance is designed for domestic indoor household use only and can be built into a standard kitchen cabinet or housing unit.
- **IMPORTANT:** The adjacent furniture or housing and all materials used in the installation **must** be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst in use.
- Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above.
- Any damage caused by the appliance being installed in contravention of this temperature limit, or by placing adjacent cabinet materials closer than 4mm to the appliance, **will be the liability of the owner.**
- For use in **leisure accommodation vehicles**, please refer to the appropriate information given in the installation instructions for this appliance.
- The use of this appliance for any other purpose or in any other environment without the express agreement of Baumatic Ltd. will invalidate any warranty or liability claim.
- Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions that are noted in Baumatic's Conditions Of Guarantee. The foregoing does not affect your statutory rights.
- **Repairs may only be carried out by Baumatic Service Engineers or their authorised service agent.**

## WARNING

To ensure the oven shelves operate safely, correct placement of the shelves between the side rails (items 1 to 4) is imperative. This will ensure that during removal of the shelf or tray, hot food items should not slide out completely.

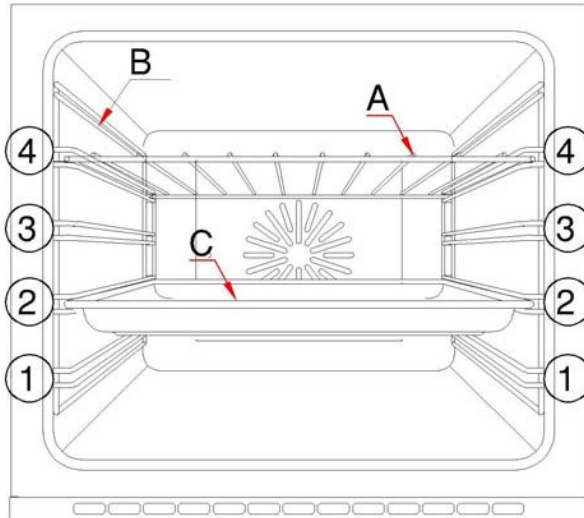

## Warning and safety instructions

- This appliance complies with all current European safety legislation. Baumatic do wish to emphasise that this compliance does not remove the fact that the appliance surfaces **will become hot during use and retain heat after operation.**

## Child Safety

- Baumatic strongly recommend that babies and young children are prevented from being near to the appliance and not allowed to touch the appliance **at any time.**
- If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.

## General Safety

- **Do not** place heavy objects on the oven door or lean on the oven door when it is open, as this can cause damage to the oven door hinges.
- **Do not** leave heated oil or fat unattended, as this is a fire risk.
- **Do not** place pans or baking trays directly on the base of the oven cavity, or line it with aluminium foil.
- **Do not** allow electrical fittings or cables to come into contact with areas on the appliance that get hot.
- **Do not** use the appliance to heat the room it is located in or to dry clothing.
- **Do not** install the appliance next to curtains or soft furnishings.
- **Do not** attempt to lift or move cooking appliances by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.

## Cleaning

- Cleaning of the oven should be carried out on a regular basis.
- Great care should be taken whilst using this appliance and when following the cleaning procedure.
- **IMPORTANT:** The appliance must be turned off before following the cleaning procedure.



## Installation



**This appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's instructions.**


- **Baumatic Ltd. declines any responsibility for injury or damage, to person or property, as a result of improper use or installation of this appliance.**
- Heat, steam and moisture will be created during use of the appliance, take care to avoid injury and ensure that the room is adequately ventilated. If the appliance is going to be used for prolonged periods of time, then additional ventilation may be required.
- Please consult with your qualified installer if you are in any doubt about the amount of ventilation that you will require.

## Declaration of conformity

- In the parts destined to come into contact with foodstuffs, this appliance is in accordance with the requirements of the EC directive 89/109 transposed in the Italian Legislative Decree No. 108 of 25/01/92.
- **CE:** Appliance conforming to the European directives 89/336/EEC, 93/68/EEC, 73/23/EEC and subsequent revisions and "RoHS" directive 2002/95/CE.\*
- The appliance conforms to Australian Standards AS/NZS60335, parts 1 and 2.6
- The manufacturer declares that the oven is built using certified materials and requires the appliance to be installed in accordance with the standards currently in force. This appliance must be used by a trained person for domestic purposes only.

\* The RoHS directive stands for "the restriction of the use of certain hazardous substances in electrical and electronic equipment". This directive bans the placing on the EU market of new electrical and electronic equipment containing more than the agreed levels of lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyl (PBB) and polybrominated diphenyl ether (PBDE) flame retardants.

# Specifications

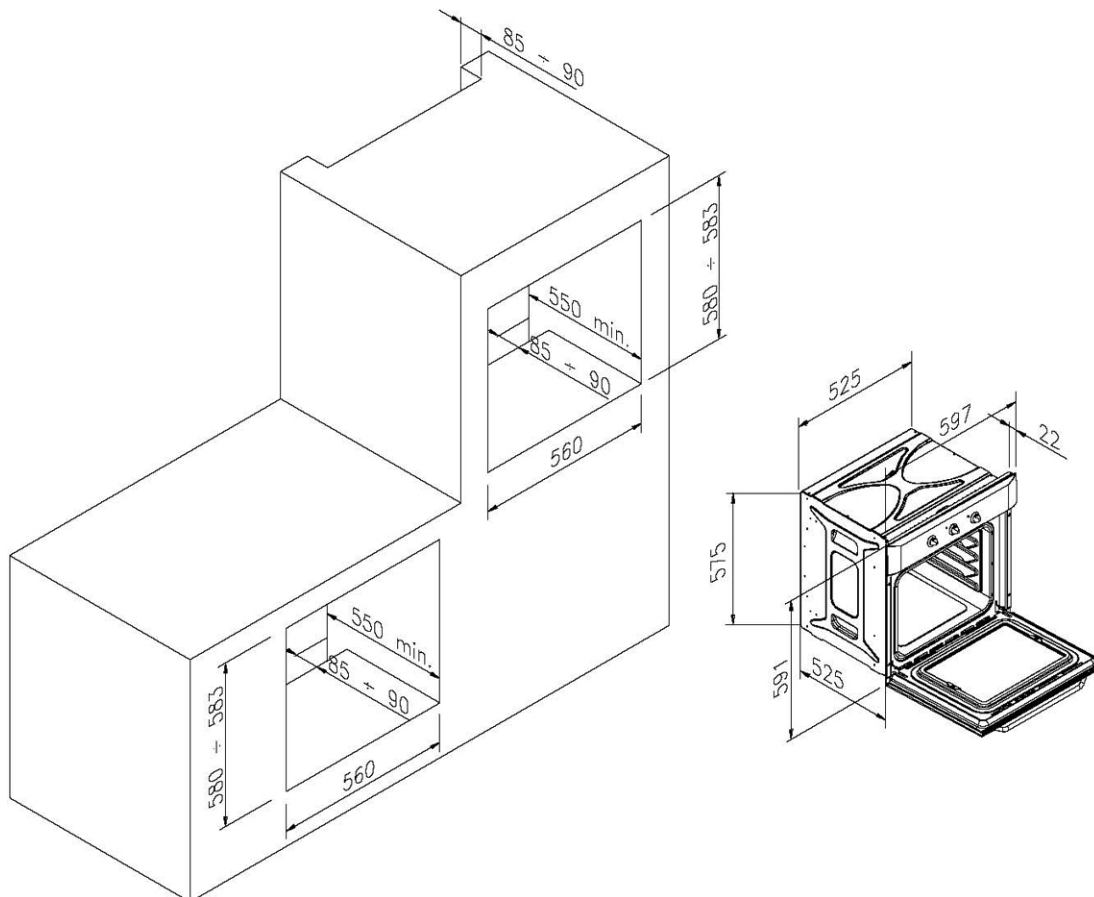

## Product Dimensions

Height: 591 mm  
Width: 597 mm  
Depth: 525 mm

## Aperture Dimensions

580 mm – 583 mm  
560 mm  
550 mm

## Cooling fan

- A tangential cooking fan is fitted inside of this appliance, to make the internal temperature of the oven stable and the external surface temperature lower.

## Product specifications

- 4 oven functions
- 7 oven functions
- 9 oven functions
- Energy efficiency class: A
- Oven capacity: 57 litres
- Oven light
- LED full programmer
- Cooling fan
- Thermostatically controlled grill
- Triple-glazed removable door

**(BAO6001-P)**  
**(BAO6003-P)**  
**(BAO6005-P)**

### Standard accessories

- Removable side racks **(BAO6005-P only)**
- Enamelled drip tray with handle
- Drip tray rack
- 2 x Safety shelves
- Removable roof liner

### Electrical details

<b>Rated Voltage:</b>	240 Vac 50 Hz
<b>Supply Connection:</b>	15 A (double pole switched fused outlet with 3mm contact gap)
<b>Max Rated Inputs:</b>	2.38 kW <b>(BAO6001-P)</b>
	2.98 kW <b>(BAO6003-P)</b>
	3.80 kW <b>(BAO6005-P)</b>
<b>Mains Supply Lead:</b>	3 x 1.5mm <sup>2</sup>
<b>Oven Light Bulb:</b>	25 W/300°C screw type pygmy

For future reference please record the following information which can be found on the Rating Plate and the date of purchase which can be found on your sales invoice. The rating plate for your oven can be located by opening the oven door and looking on the right hand side of the oven chassis.


**Model Number** .....

**Serial Number** .....


**Date of Purchase** .....

# Control Panel


## BAO6001-P

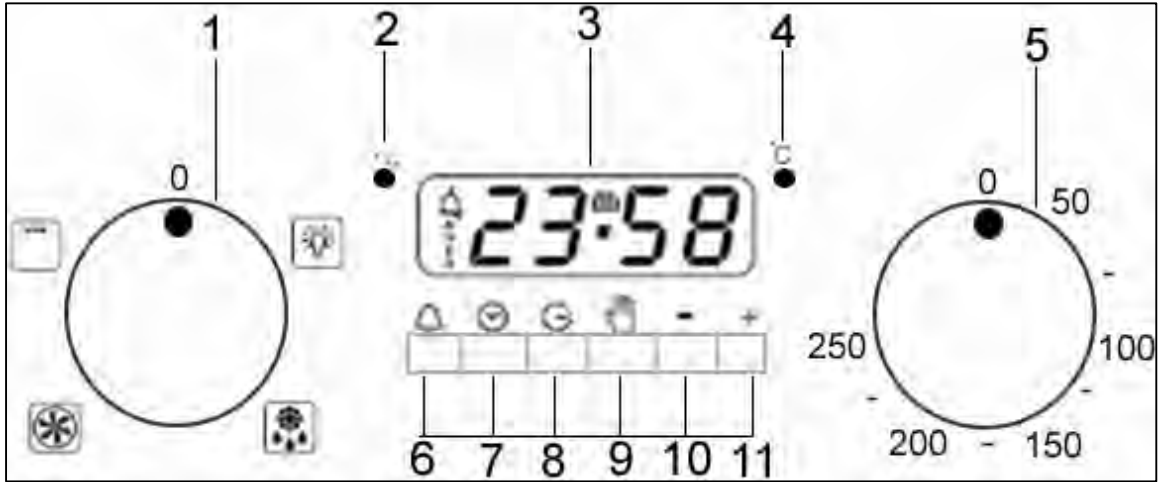

## BAO6003-P

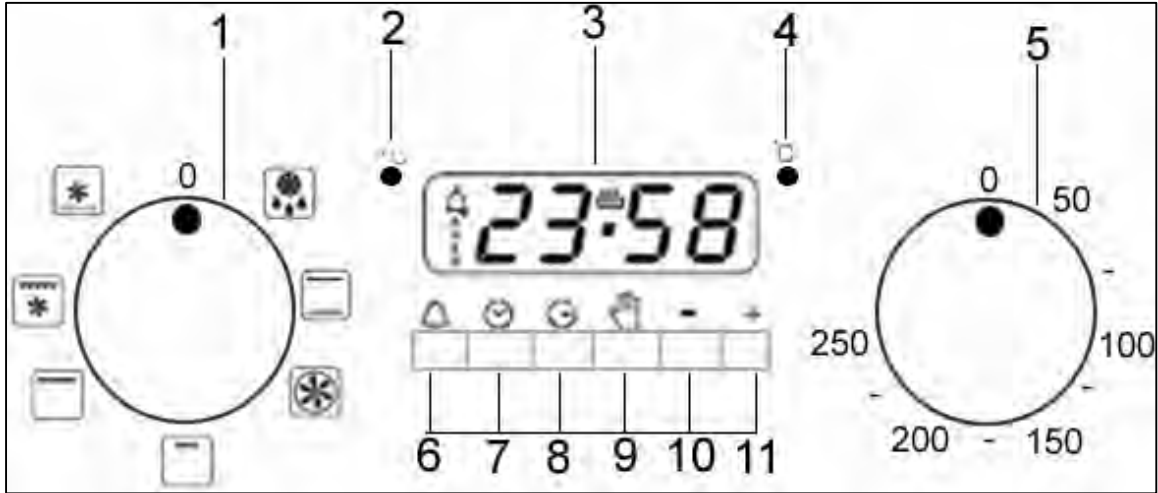


## BAO6005-P

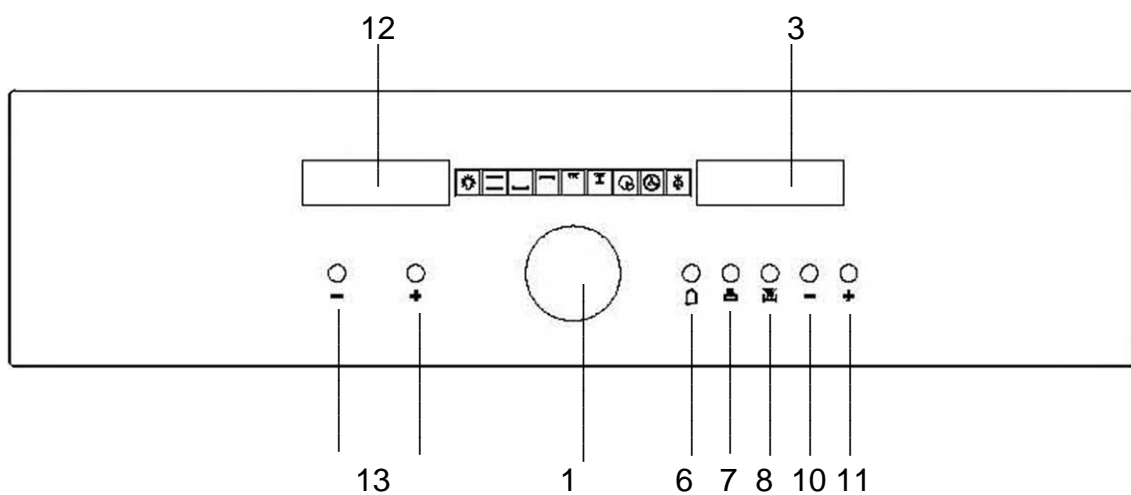

- |                                 |                                    |
|---------------------------------|------------------------------------|
| 1) Oven function selector knob  | 7) Timer "duration" button         |
| 2) Power indicator light        | 8) Timer "end cook" button         |
| 3) Oven programmer/timer        | 9) Timer "manual operation" button |
| 4) Oven operating light         | 10) Timer "minus" button           |
| 5) Thermostat control knob      | 11) Timer "plus" button            |
| 6) Timer "minute minder" button | 12) Temperature display            |
|                                 | 13) Temperature +/- buttons        |

## Oven programmer/timer display

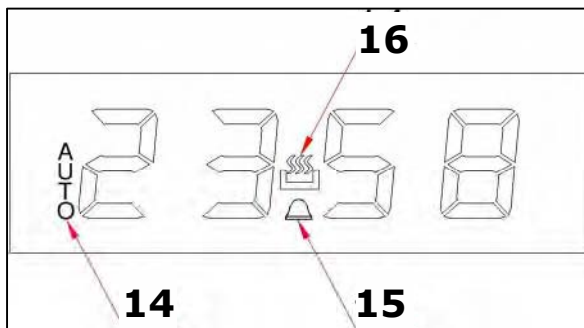

- 14) "Auto" function symbol
- 15) "Minute minder" symbol
- 16) "Manual operation" symbol.

## Setting and using the oven programmer/timer

### Selecting manual operation mode

**After your appliance is connected to your mains supply for the first time, the numbers on the timer display will flash. Before you can select a cooking function or set a temperature, you must set the appliance into "manual operation" mode.**

- To select manual operation mode, press the "manual operation" button **(9)** on the control panel.

### Setting the time of day

**After setting your oven for manual operation, you should also set the time of day.**

- Use the "minus" button **(10)** and "plus" button **(11)** to adjust the time that appears in the display. After getting the display to the correct time, release the "minus" and "plus" buttons. After five seconds the time will fix in the display and you will be able to use your oven.
- The "manual operation" symbol **(14)** will light on the oven programmer/timer display.

### Setting the minute minder function

**You are able to set the minute minder at any time, regardless of whether an oven function has been selected. You can set a period of time using the minute minder function and an alarm will sound when this period of time has elapsed.**

- Press the "minute minder" button **(6)**, the display will show a value of 00:00. Set the period of time that you wish the minute minder to countdown for, by using the "minus" **(10)** and "plus" **(11)** buttons.

- Once a countdown time has been set, it is possible to shorten or lengthen the time by using the “minus” or “plus” buttons.
- An alarm will sound when the countdown time has elapsed. The alarm can be silenced by pressing the “minute minder” button or “manual operation button”
- **Important:** The oven will continue to heat once the alarm has been silenced. If you have finished cooking, then you should turn the oven function selector and thermostat control knob to 0.

### **Setting the duration function**

***This function will allow you to set a countdown time similar to the minute minder function. However the oven will no longer continue to heat, once the countdown period has elapsed.***

- Use the thermostat control knob **(5)** to set the temperature that you require. The manual operation symbol **(14)** will appear on the display.
- Use the oven function selector knob **(1)** to select the mode of cooking that you require.
- It is then possible to set the duration of the cooking time that you require.
- Press the “duration” button **(7)** and the display will show a value of 00:00. Set the period of time that you wish the duration function to countdown for, by using the “minus” **(10)** and “plus” **(11)** buttons.
- Once the display has got to your desired countdown time, let go of the “minus” and “plus” buttons. The countdown will start immediately and the word AUTO will appear on the timer display.
- Once a countdown time has been set, it is possible to shorten or lengthen the time by using the “minus” or “plus” buttons.
- An alarm will sound when the countdown time has elapsed and the oven will switch off. The word AUTO will flash and the heating symbol will disappear.

- To silence the audible signal and return the oven to manual operation mode, once the duration function has been used. You should press the “manual operation” button, the word AUTO will disappear from the display and the manual operation symbol will appear instead.
- **Important:** If you do not turn the thermostat control knob and oven function selector knob to 0. Then the appliance will continue to operate as soon as you press the “manual operation” button.

### **Setting the end cook function**

***This function is similar to the duration function, however instead of selecting a period of time that you wish the oven to switch off after. You select the time of day that you wish the oven to switch off at.***

- Use the thermostat control knob **(5)** to set the temperature that you require. The manual operation symbol **(14)** will appear on the display.
- Use the oven function selector knob **(1)** to select the mode of cooking that you require.
- Press the “end cook” button **(8)** and the display will show a value of 00:00. Set the time of day that you wish the oven to stop cooking at by using the “minus” and “plus” buttons. The timer will calculate how long the cooking time will be, based on the time of day that you have selected and show it on the display.
- Once the display has got to the time of day that you want the oven to stop cooking at, let go of the “minus” and “plus” buttons. The countdown will start immediately and the word AUTO will appear on the timer display.
- When the time is set, it can be modified by pressing the “minus” and “plus” buttons.
- When the time of day reaches the end of cooking time that you set, the oven will switch off and an alarm will sound. The word AUTO will flash and the heating symbol will disappear.
- To silence the audible signal and return the oven to manual operation mode, once the end cook function has been used. To do this you should press the “manual operation” button, the word AUTO will disappear from the display and the manual operation symbol will appear instead.

- **Important:** If you do not turn the thermostat control knob and oven function selector knob to 0. Then the appliance will continue to operate as soon as you press the “manual operation” button.

### **Setting the start and end time function**

***This function will allow you to set a time in the future that the oven switches on at and a time that the oven will switch off at.***

- Use the thermostat control knob **(5)** to set the temperature that you require. The manual operation symbol **(14)** will appear on the display.
- Use the oven function selector knob **(1)** to select the mode of cooking that you require.
- Press the “duration” button **(7)** and the display will show a value of 00:00. Set the period of time that you wish to cook for, by using the “minus” **(10)** and “plus” **(11)** buttons. The word AUTO will appear on the timer display.
- **Immediately** press the “end cook” button **(8)** and the timer display will show the value 00:00. Set the time of day that you want the oven to switch off at, using the “minus” and “plus” buttons.
- The oven will calculate what time it needs to switch on at, so that your food will cook for the length of time that you selected. It will automatically switch itself on, once it reaches the time of day that it has calculated.
- When the time of day reaches the end of cooking time that you set, the oven will switch off and an alarm will sound. The word AUTO will flash and the heating symbol will disappear.
- To silence the audible signal and return the oven to manual operation mode, once the start and end time function has been used. To do this you should press the “manual operation” button, the word AUTO will disappear from the display and the manual operation symbol will appear instead.



## Adjusting the audible signal

- The audible signal has three different settings, low, medium and high.
- To adjust the level of the audible signal, make sure that the timer is in manual mode. Then press and hold the minus button and you will hear the current level that is set.
- Press the minus button again and the audible signal will adjust to the next level.
- When the required level of audible signal is reached, release the minus button and it will be set.

## Selecting a cooking function and temperature


### Selecting manual operation mode

**After your appliance is connected to your mains supply for the first time, the numbers on the timer display will flash. Before you can select a cooking function or set a temperature, you must set the appliance into “manual operation” mode.**


- To select manual operation mode, press the “manual operation” button **(9)** on the control panel.

### Selecting an oven function

#### BAO6001-P

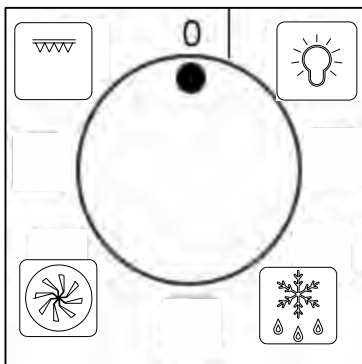

#### BAO6003-P

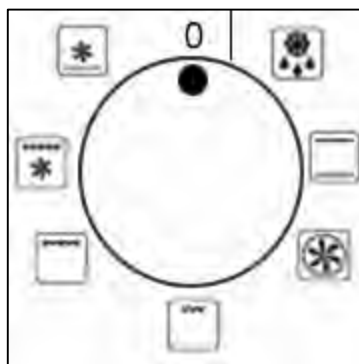

The oven function selector knob should be used to select the particular mode of cooking that you require. The appliance will utilise different elements within the oven cavity, depending on the oven function that you select. When a function is selected, the power indicator light will come on.

## BAO6001-P, BAO6003-P standard oven functions



**DEFROST:** The fan runs without heat to reduce the defrosting time of frozen foods. The time required to defrost the food will depend on the room temperature, the quantity and type of food. Remove frozen portions of meat completely from packaging and place over the grill rack to allow proper circulation.



**FAN FORCED:** This method of cooking uses the circular element located around the fan, while the heat is distributed evenly, resulting in a faster more efficient operation. Cooking with the fan on allows different kinds of food to be cooked simultaneously on different shelves, preventing the transmission of smells and tastes from one dish to another.



**CENTRE GRILL:** This cooking method is static grilling utilising the inner part of the top element, which directs heat downward onto the food. Suitable for grilling small portions of meat or for toasted sandwiches.

### BAO6001-P additional functions



**LIGHT:** The separate light function will illuminate the oven cavity. Useful when cleaning the oven interior. Also will give a low heat suitable for proving dough.

### BAO6003-P additional functions



**CONVECTION OVEN (top and lower element):** This method of cooking provides traditional cooking with heat from the outer top and lower elements. Particularly suitable for traditional roasting and baking on the centre shelf only.



**FULL GRILL:** This cooking method is normal static grilling utilising the full top elements, which directs heat downwards onto the food. Suitable for grilling medium to large portions of sausages, bacon, steaks, fish etc.




**FAN AND LOWER ELEMENT:** This method of cooking uses the bottom element with the fan to circulate the heat upward for delicate dishes and heating pre-cooked food. Suitable for patisserie, baking foods that require concentration of heat on the base.



**FULL GRILL & FAN:** This method of grilling uses the full top element in conjunction with the fan, to grill meat without the need to turn. Suitable for steaks such as hamburgers and large fillets.

For the BAO6003-P the oven light will switch on automatically when an oven function is selected.

### **Thermostat control knob**

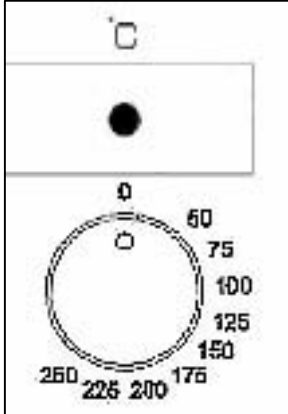

The oven thermostat control knob sets the required temperature of the oven. It is possible to regulate the temperature within a range of 50 - 250°C.


**Turn the control knob clockwise.**






### **Oven operating light**

This light will come on to indicate that the oven's heating elements are in operation. The light will turn off when the temperature set on the thermostat control knob has been reached. It will cycle on and off throughout the cooking time.

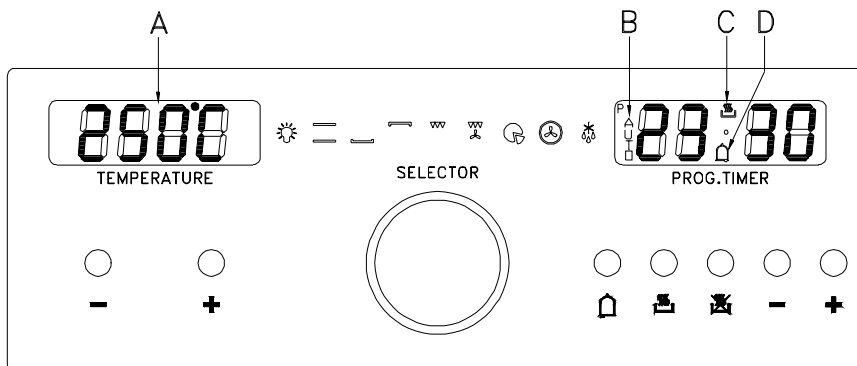

**You should not place food inside the cavity, until the correct cooking temperature has been reached.**

## USING THE ELECTRONIC PROGRAMMER (BAO6005-P)





- A Temperature
  - B Automatic programme
  - C Duration and manual mode
  - D Minute minder
- |                                                                                   |          |                       |
|-----------------------------------------------------------------------------------|----------|-----------------------|
|  | FUNCTION | Timer                 |
|  |          | Cooking duration time |
|  |          | Cooking end time      |
|  |          | Minus setting         |
|  |          | Plus setting          |


### Setting the clock

Switch the oven on; 00.00 will appear in blinking mode on the display. To set the clock, simultaneously press the duration  and end of cooking  keys together. Using the +/- keys on the right, select the time of day required. With the key “+” the time increases, with the key “-” the time decreases at a speed directly proportional to the duration of the pressure exerted on the key. When the time is stored, the point between the hours and the minutes will stop blinking approximately 7 seconds after the last operation. To update the time, repeat the operation.


### Manual operation

Press duration  and end time button  together. If an automatic program is on the “AUTO” symbol (B) will be erased, the pot symbol (C) is illuminated. Any programme which has been previously set is cancelled.



### **Semiautomatic operation with cooking duration**

Select cooking duration function  and set required duration with the +/- keys on the right. “AUTO” (B) and cookpot (C) symbols appear. If time of day = cooking end time the relay output and the cookpot symbol (C) are switched off. The audible signal sounds. The symbol “AUTO” (B) blinks. The cooking will be finished.

### **Semiautomatic operation with cooking end time**



Select cooking end time function  and set required end time using the +/- keys on the right. The “AUTO” (B) and cookpot (C) symbols appear. Turn the switch knob and the thermostat knob to the cooking function and to the desired temperature. If time of day = cooking end time the oven doesn't heat any longer and the cookpot symbol (C) are switched off. The audible signal sounds and “AUTO” (B) blinks.

### **Fully automatic operation**

- 1) Set the length of cooking time by pushing the  button and the +/- keys on the right.
- 2) Set the end of cooking time by pushing the  button and the +/- keys on the right.
- 3) Set temperature and cooking program by using the thermostat knob and the selector knob.

After this setting the symbol “AUTO” (B) will appear, this means the oven has been programmed. When the time in the display is the same of the cooking start time the cookpot symbol (C) will appear and the oven will start to work.

Cooking Start Time = Cooking End Time – Cooking Duration Time  
An example: cooking lasts 45 minutes and is expected to stop at 14.00.




- Push  and “+” key on the right until having set 0.45.
- Push  and “+” key on the right until having set 14.00.

After having finished the setting, the clock hour will appear on the panel and “AUTO” symbol (B) will flash permanently. This means the cooking program has been memorized.



At 13.15 h. (14.00 h. minus 45 minutes ) the oven turns on automatically. During cooking time the cookpot button (C) and “AUTO” (B) switch on.

At 14.00 h. the oven turns off automatically, “AUTO” (B) flashes. The cookpot button (C) switches off and a buzzer goes on until it is stopped.

### **Minute counter**



Select the minute counter function  . The fixed time is set at 5 min.; to change it, press the keys +/- on the right. When the point between the hours and minutes and the symbol  begin to blink, it means that the countdown has begun. The display shows the hour and the minutes of the countdown; by pressing the symbol  you can choose whether to display the countdown or the time.

### **Audible signal**

The audible signal sounds at the end of a minute counter cycle  or of a cooking programme  for a period of 7 minutes. To turn it off just press any program input key (the first three on the left ).

You can also regulate the sound level of the audio signal, selecting a more pleasing level, by pressing the symbol “-” on the right for about 2 seconds when you see the time on the display.



### **Program start and control**

Press the cooking duration key  or the end-of-cooking time key  to know the remaining time period.

### **Input error signal**

When a data input is mistaken the audio signal sounds and the symbol “AUTO” (B) flashes.

### **Cancelling a program**

A program can be cancelled pushing at the same time the button  and  .

## Switch functions

The following functions can be set by turning the switch knob.

### The following will be shown on the display:



Light



190°C



50°C



190°C



250°C



165°C



165°C



165°C



Defrost

The temperature shown on the display can be changed via the keys +/- on the left. Increase or decrease is in 5°C steps, from a minimum of 40°C to a maximum of 250°C. The symbol °C will blink until the required temperature is reached.

## **Cooking guidelines**

- Please refer to the information given on food packaging for guidance on cooking temperatures and times. Once familiar with the performance of your appliance, temperatures and times can be varied to suit personal preference.
- If you are using the fan oven function, then you should follow the information given on the food packaging for this particular mode of cooking.
- Make sure that frozen foods are thoroughly thawed before cooking, unless the instructions on the food packaging advise that you can “cook from frozen”.
- You should pre-heat the oven and not place food inside of it until the oven operating light has gone off. You can choose not to preheat when using the fan oven mode; however you should extend the cooking time given on the food packaging by approximately ten minutes.
- Before cooking, check that any unused accessories are removed from the oven.
- Place cooking trays in the centre of the oven and leave gaps between the trays to allow air to circulate.
- Try to open the door as little as possible to view the dishes.
- The oven light will remain on during cooking.



## Warnings

- Keep the oven door closed when using a grill function.
- Do not use aluminium foil to cover the grill pan or heat items wrapped in aluminium foil under the grill. The high reflectivity of the foil could potentially damage the grill element.
- You should also never line the base of your oven with aluminium foil.
- During cooking, never place pans or cookware directly onto the bottom of your oven. They should always be placed on the shelves provided.
- The grill heating element becomes extremely hot during operation, avoid touching it inadvertently when handling the food which you are grilling.
- **Important:** Be careful when opening the door, to avoid contact with hot parts and steam.
- The drip tray handle should only be used to reposition the drip tray and **NOT** for removing it from the oven cavity. When removing the drip tray, you should **ALWAYS** use an oven glove.
- The drip tray handle should not be left in position when the appliance is switched on.

## Cleaning and maintenance



**Cleaning operations must only be carried out when the oven is cool.**

**The appliance should be disconnected from your mains supply before commencing any cleaning process.**

- The oven should be thoroughly cleaned before it is operated for the first time and after each use. This will avoid residual food stuffs becoming baked on the oven cavity. After residues have been baked on several times, they are far more difficult to remove.
- **Never** clean the oven surfaces by steam cleaning.
- The oven cavity should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- Any stains that may appear on the bottom of the oven will have originated from food splashes or spilt food, these splashes occur during the cooking process. These could possibly be a result of the food being cooked at an excessively high temperature or being placed in cookware that is too small.
- You should make sure that the cooking temperature that is selected is appropriate for the food that you are cooking. You should also ensure that the food is placed in an adequately sized dish and you the drip tray where appropriate.
- THE MARK FREE COATING ON YOUR OVEN HAS BEEN DESIGNED TO LAST THE LIFETIME OF THE OVEN.

Outer parts of the oven should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.

- If you use any form of oven cleaner on your appliance, you must check with Think Appliances of the cleaner that it is suitable for use on your appliance.
- **Any damage that is caused to the appliance by an unauthorised cleaning product will not be fixed by Baumatic free of charge, even if the appliance is within the guarantee period.**


## Removable oven roof liner

- Your appliance is supplied with a roof liner, which should be slid over the top of the grill element.
- Once you have finished cooking, the liner should be removed and thoroughly cleaned after each use of the appliance.
- **Do not** allow fat and grease to build up on the oven liner, as this could cause a fire hazard.

## Replacing the oven bulb




**IMPORTANT: The oven must be disconnected from your mains supply before you attempt to either remove or replace the oven bulb.**

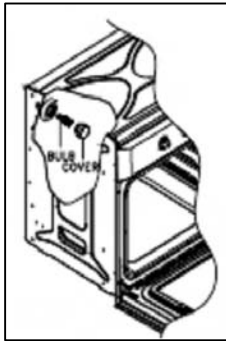

- Remove all oven shelves, the drip tray and the side rack that is on the same side as the oven light.
- Remove the light cover by turning it anti-clockwise.
- Unscrew the bulb clockwise and remove it from its holder.
- Replace the bulb with a 25 W/300°C, screw type pigmy.
- **Do not** use any other type of bulb.
- Place the lamp cover back into position.

## Removing the oven door for cleaning

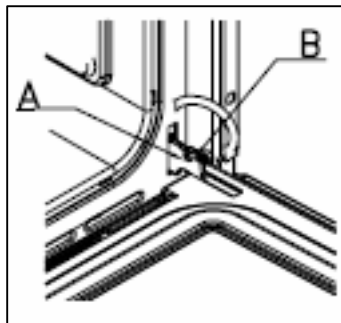

To facilitate the cleaning of the inside of the oven and the outer frame of the oven, the door can be removed as follows: -

- The hinges **(A)** have two movable bolts on them **(B)**.
- If you raise both of the movable bolts **(B)**, then the hinges **(A)** are released from the oven housing.

- You should grip the sides of the door at the centre and then incline it slightly towards the oven cavity and then by pulling it gently away from the oven cavity.
- **IMPORTANT:** You should make sure that the door is supported at all times and that you place the door on some padded material whilst cleaning it.
- The oven door and door glass should only be cleaned using a damp cloth and a small amount of detergent. The cloth **MUST NOT** have come into contact with any form of cleaning product or chemical previously.
- To refit the door you should slide the hinges back into their slots and open the door fully.
- **IMPORTANT:** The movable bolts (**B**) must be closed back into their original positions before closing the door.



- **Take care not to dislodge the hinge locking system when removing the door, as the hinge mechanism has a strong spring.**
- **Do not immerse the door in water at any time.**

### **Removing the inner door glass for cleaning**

- Do not use any abrasive cleaner that could cause damage.
- Remember that if the surface of the glass panel becomes scratched, this could lead to a dangerous failure.
- To facilitate cleaning, the door glass can be lifted out after removing the fixing screws and turning the metal stoppers that hold the glass in position.
- When refitting, make sure that the glass is correctly seated in the door recess and the correct way round, before turning the metal stoppers back to their original position and fully tightening the fixing screws.

## INSTALLATION



**The installation must be carried out by a suitably qualified person, in accordance with the current version of the following.**

- UK Regulations and Safety Standards or their European Norm Replacements.
- **Building Regulations** (issued by the Department of the Environment).
- **Building Standards** (issued by the Scottish Development Department).
- **IEE Wiring Regulations.**
- **Electricity At Work Regulations.**

Before connecting the appliance, make sure that the supply voltage marked on the Rating Plate corresponds with your mains supply voltage.


### **WARNING: THIS APPLIANCE MUST BE EARTHED.**

- This appliance should be wired into a 13 A double pole switched fused spur outlet, having 3 mm contact separation and placed in an easily accessible position adjacent to the appliance. The spur outlet must still be accessible even when your oven is located in its housing.



- To connect the oven power cord, loosen and remove the cover on the terminal block, in order to gain access to the contacts inside. Make the connection, securing the cord in place with the cable clamp provided and then immediately close the terminal block cover again.
- If you have to change the oven power cord, the earthing (yellow/green) conductor must always be 10 mm longer than the line conductors.
- Care must be taken to ensure that the temperature of the mains supply cable does not exceed 50°C.
- If the mains supply cable is damaged, then it must be replaced by an appropriate replacement which can be obtained from the Baumatic Spares Department.


## Installing the oven into the kitchen cabinet

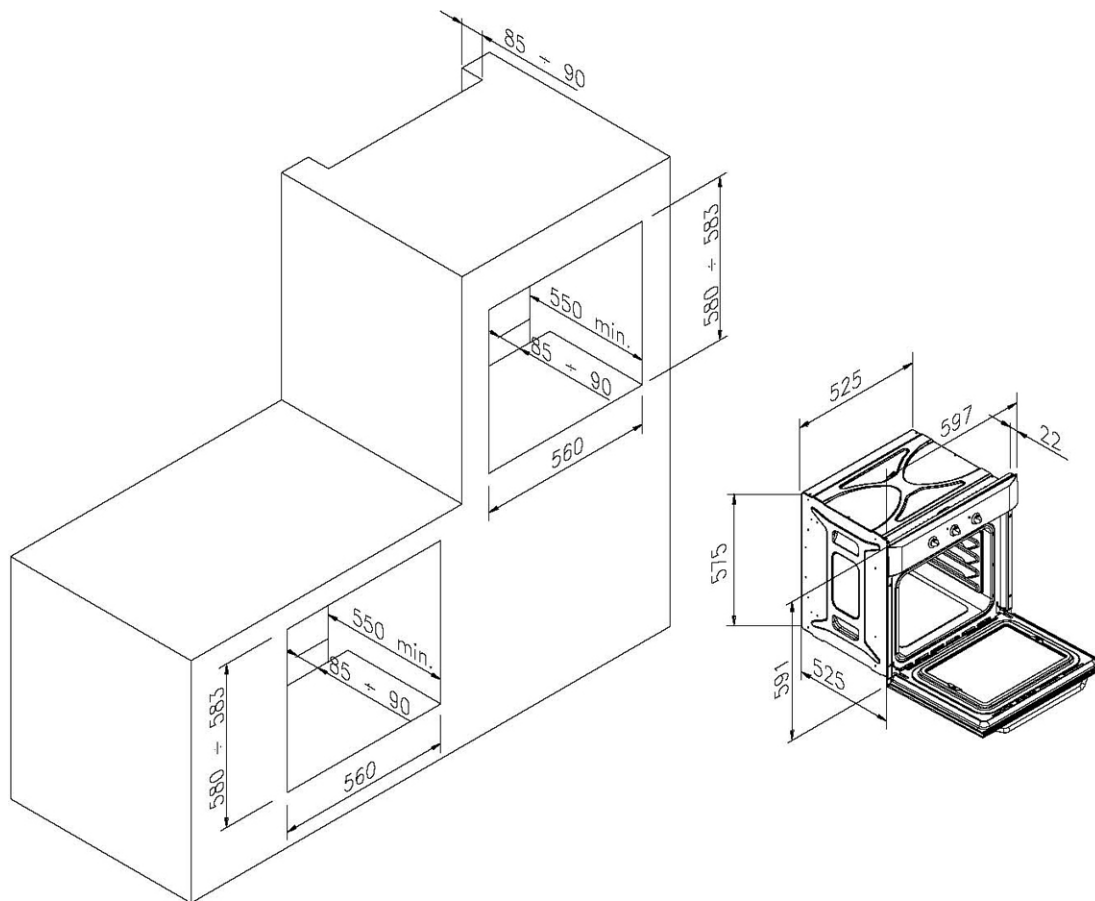


### Positioning the appliance

- Ensure that the aperture that you will be fitting the oven into is of the size given in the above diagram.
- The oven must be fitted into an oven housing with the ventilation cut-outs shown in the "Ventilation requirements" section on the next page.
- Ensure that the rear panel of the furniture housing unit has been removed.


## Ventilation requirements

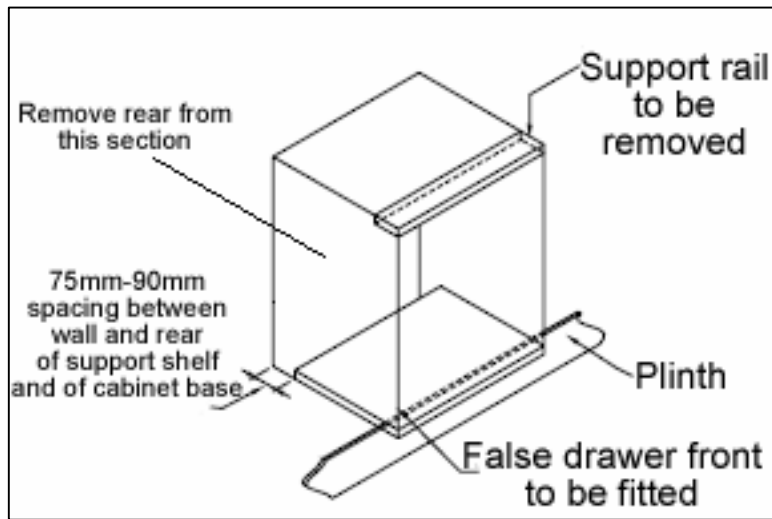

(Figure shows the ventilation and cut-out requirements for the installation of the appliance into a standard kitchen unit).

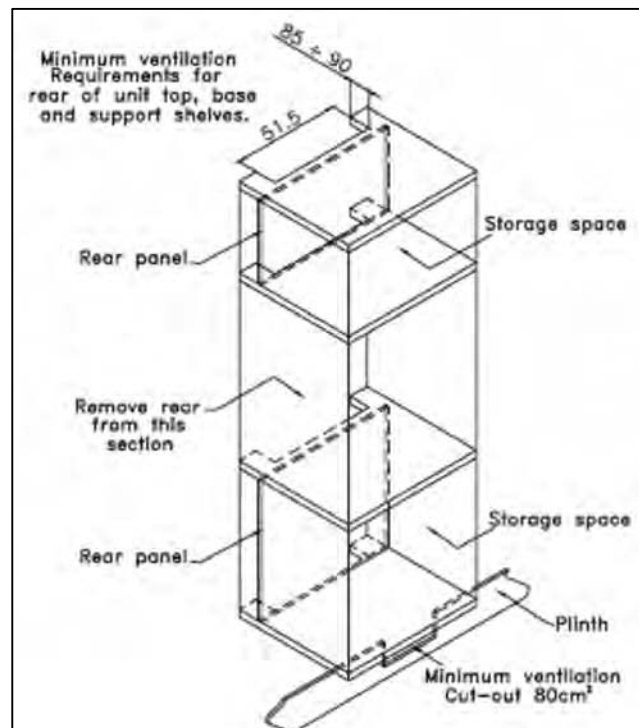

(Figure shows the ventilation and cut-out requirements for the installation of the appliance into a tall housing unit).

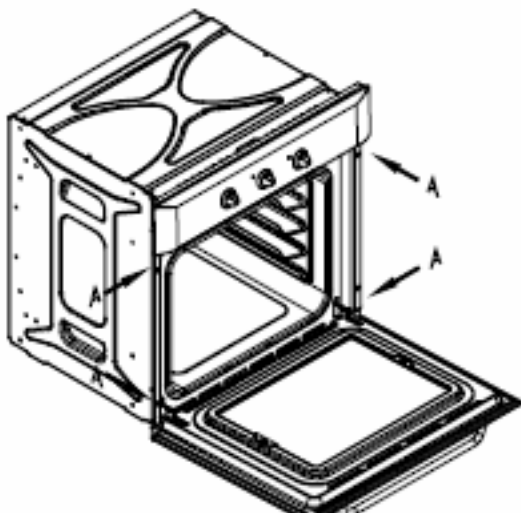

- Ensure that the oven has been securely fixed into the housing unit. The fixing of the oven into the housing is made by using four screws. These should be screwed through the oven cabinet and into the housing unit.

## **My appliance isn't working correctly**

- **The oven isn't coming on.**
  - \* Check that the oven is in manual operation mode.
  - \* Check that you have selected a cooking function and a cooking temperature.
- **There appears to be no power to the oven and grill.**
  - \* Check that the appliance has been connected to the electrical mains supply correctly.
  - \* Check that the mains fuses are in working order.
  - \* Check that the operating instructions for setting the time of day and putting the appliance into manual operation mode have been followed.
- **The grill function works but the main oven does not.**
  - \* Check that you have selected the correct cooking function.
- **The grill and top oven element is not working, or cuts out for long periods of time during use.**
  - \* Allow the oven to cool for approximately 2 hours. Once cool, check whether the appliance is again working properly.
- **My food is not cooking properly**
  - \* Ensure that you are selecting the correct temperature and the correct cooking function for the food that you are cooking. It may be appropriate to adjust your cooking temperature by plus or minus 10°C, to achieve the best cooking results.
- **My food is not cooking evenly**
  - \* Check that the oven has been installed correctly and is level.
  - \* Check that the correct temperatures and shelf positions are being used.



- **The oven light is not working**

- \* Refer to page 20 and follow the “Replacing the oven bulb” section.

- **I am getting condensation in my oven**

- \* Steam and condensation is a natural by product of cooking any food with high water content, such as frozen food, chicken etc.

- \* You may get condensation in the oven cavity and forming between the oven door glasses. This is not necessarily a sign that the oven is not working correctly.

- \* Do not leave food in the oven to cool after it has been cooked and the oven has been switched off.

- \* Use a covered container, where practical, when cooking to reduce the amount of condensation that forms.



**IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact the Baumatic Service Department.**

**DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.**

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

**The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.**

**This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by Baumatic Ltd. has been completed.**

