

Sunbeam

Safe & Sound

Machine Washable Electric Blankets with SleepPerfect® Technology

Instruction Booklet

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Safety Precautions for your Electric Blanket	2
Sunbeam's SleepPerfect® Technology	3
Features of your electric blanket	
Safe & Sound Fitted	4
Safe & Sound Waterproof	5
Safe & Sound Antibacterial	6
Safe & Sound Plush	8
Safe & Sound Quilted	9
Safe & Sound Pillow Top	10
Safe & Sound Fleecy	11
Fitting your electric blanket	13
Using your electric blanket	15
Troubleshooting	18
Care and cleaning	19

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Safety Precautions for your Electric Blanket

- Do not use your electric blanket on or under a waterbed.
- Do not use on an adjustable bed or futon.
- Do not switch the blanket on if moist or wet.
- Do not allow the blanket heating wires to lie over the edge of the mattress.
- Do not use pins, needles, safety pins or other sharp items on your electric blanket.
- Do not dry clean your electric blanket.
- Use only as an underblanket.
- Examine periodically for signs of wear or damage on the blanket cords. If there are such signs, or the blanket has been misused, return it to an authorised service agent for inspection.
- Each day check that the electric blanket is smooth, flat and properly secured on the mattress. Do not use if the blanket is folded, rucked or creased.
- Only use your electric blanket with the controls supplied or marked equivalent.
- Do not use with infants, infirm persons, or persons insensitive to heat.
- Parents or guardians must preset the controls for young children, unless the child has been adequately instructed on how to operate the control safely.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- This electric blanket is not intended for use in hospitals.

Important instructions – retain for future use.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Sunbeam's SleepPerfect® Technology

Temperature sensitive, fast-heating elements

All Sunbeam Safe & Sound electric blankets feature our exclusive SleepPerfect® Technology. This technology uses a unique heating element that adjusts the power supplied to your electric blanket to maintain your selected setting.

A built-in microprocessor continually senses changes in room and body temperature and adjusts the power input accordingly, to provide a constant level of comfort.

On double/queen and king size electric blankets each side adjusts independently to maintain individual comfort levels. So you'll always sleep soundly, even on the coldest nights.

This unique element also heats to your selected temperature in just 10 minutes, so there's no need for hours of preheating before bedtime.

Nine levels of safety protection

Nine levels of safety protection make Sunbeam's Safe & Sound range safer than any other electric blanket. A built-in microprocessor senses any rise in temperature and reduces the power supply to prevent overheating.

In the unlikely event of a fault, the microprocessor senses the abnormal operation and automatically cuts off power to the blanket.

A second microprocessor acts as a back up should the first fail.

For additional safety protection, all Safe & Sound electric blankets contain a thermal back up fuse that is independent of the blanket control. It detects any abnormal temperature variations in the heating element and automatically switches the blanket off to prevent overheating.

Safe & Sound Fitted

BL3421 Single

BL3431 King Single

BL3441 Double

BL3451 Queen

BL3471 King

Your Safe & Sound Fitted electric blanket has the following features:

SleepPerfect® Technology

Sunbeam's exclusive SleepPerfect® Technology continually senses and adjusts to changes in your room and body temperature to maintain your selected heat setting. So when the temperature drops outside, you'll stay safe and warm.

Cosy feet heating

The heating wires are concentrated at the base of the blanket to deliver extra heat around your feet, while keeping the rest of your body comfortably warm.

Fitted design

The fitted skirt and extra strong elastic cord keep the blanket flat and taut on the mattress, and make it easier to fit and remove from the bed.

For instructions on how to fit your Safe & Sound Fitted electric blanket, see the section titled Fitted Electric Blankets on page 14.

Machine washable

The detachable controls and waterproof element make your electric blanket safe to machine wash and tumble dry.

For instructions on how to launder your Safe & Sound Fitted electric blanket, see the Care and Cleaning section on page 19.

9 heat timer control

A choice of 9 heat settings allows you to select the desired temperature to keep you comfortable all night. The setting dial is illuminated to enable easy adjustment in the dark.

Ideal for preheating the bed before hopping in, the 75 minute setting automatically switches the blanket off after 75 minutes. The 12 hour setting automatically switches the blanket off after 12 hours in case you forget.

Detachable controls

Remove the controls when laundering your blanket. Store the controls during the summer months while your blanket remains on the bed as a comfortable underblanket.

Dual controls

Your Double, Queen or King size electric blanket features two controls for individual comfort.

Safe & Sound Waterproof

BL3321 Single

BL3331 King Single

Your Safe & Sound Waterproof electric blanket has the following features:

SleepPerfect® Technology

Sunbeam's exclusive SleepPerfect® Technology continually senses and adjusts to changes in your room and body temperature to maintain your selected heat setting. So when the temperature drops outside, you'll stay safe and warm.

Waterproof inner layer

Your Safe & Sound Waterproof electric blanket contains a special waterproof membrane that prevents any liquids from reaching the heating wires or soaking through to the mattress.

Cosy feet heating

The heating wires are concentrated at the base of the blanket to deliver extra heat around your feet, while keeping the rest of your body comfortably warm.

Polar fleece fabric

Topped with a soft layer of plush polar fleece fabric, your Safe & Sound Waterproof electric blanket will keep you cosy all night long.

Fitted design

The fitted skirt and extra strong elastic cord keep the blanket flat and taut on the mattress, and make it easier to fit and remove from the bed.

For instructions on how to fit your Safe & Sound Waterproof electric blanket, see the section titled Fitted Electric Blankets on page 14.

Machine washable

The detachable controls and waterproof element make your electric blanket safe to machine wash and tumble dry.

For instructions on how to launder your Safe & Sound Waterproof electric blanket, see the Care and cleaning section on page 19.

9 heat timer control

A choice of 9 heat settings allows you to select the desired temperature to keep you comfortable all night. The setting dial is illuminated to enable easy adjustment in the dark.

Ideal for preheating the bed before hopping in, 75 minute setting automatically switches the blanket off after 75 minutes.

The 12 hour setting automatically switches the blanket off after 12 hours in case you forget.

Detachable control

Remove the control when laundering your blanket. Store the control during the summer months while your blanket remains on the bed as a year round mattress protector and comfortable underblanket.

Safe & Sound Antibacterial

BL3521 Single

BL3531 King Single

BL3541 Double

BL3551 Queen

BL3571 King

Your Safe & Sound Antibacterial electric blanket has the following features:

SleepPerfect® Technology

Sunbeam's exclusive SleepPerfect® Technology continually senses and adjusts to changes in your room and body temperature to maintain your selected heat setting. So when the temperature drops outside, you'll stay safe and warm.

Antibacterial fibre

Your Safe & Sound Antibacterial electric blanket is made using antibacterial fibre treated with Bactekiller® to keep it fresher and more hygienic, and inhibit the growth of bacteria and mould. Bactekiller® is incorporated into the fibre, so it won't wash out, even when subjected to the regular hot water laundering that is recommended for allergen control.

Cosy feet heating

The heating wires are concentrated at the base of the blanket to deliver extra heat around your feet, while keeping the rest of your body comfortably warm.

Fitted design

The fitted skirt and extra strong elastic cord keep the blanket flat and taut on the mattress, and make it easier to fit and remove from the bed.

For instructions on how to fit your Safe & Sound Antibacterial electric blanket, see the section titled Fitted Electric Blankets on page 14.

Machine washable

The detachable controls and waterproof element make your electric blanket safe to machine wash and tumble dry.

For instructions on how to launder your Safe & Sound Antibacterial electric blanket, see the Care and cleaning section on page 19.

9 heat timer control

A choice of 9 heat settings allows you to select the desired temperature to keep you comfortable all night. The setting dial is illuminated to enable easy adjustment in the dark.

Ideal for preheating the bed before hopping in, the 75 minute setting automatically switches the blanket off after 75 minutes. The 12 hour setting automatically switches the blanket off after 12 hours in case you forget.

Safe & Sound Antibacterial continued

Detachable controls

Remove the controls when laundering your blanket. Store the controls during the summer months while your blanket remains on the bed as a comfortable underblanket.

Dual Controls

Your Double, Queen or King size electric blanket features two controls for individual comfort.

Safe & Sound Plush

BL3828 Single

BL3858 Double/Queen

Your Safe & Sound Plush electric blanket has the following features:

SleepPerfect® Technology

Sunbeam's exclusive SleepPerfect® Technology continually senses and adjusts to changes in your room and body temperature to maintain your selected heat setting. So when the temperature drops outside, you'll stay safe and warm.

Polar fleece fabric

Topped with a soft layer of polar fleece fabric, the Safe & Sound Plush will keep you cosy all night long.

Cosy feet heating

The heating wires are concentrated at the base of the blanket to deliver extra heat around your feet, while keeping the rest of your body comfortably warm.

Fitted design

The fitted skirt and extra strong elastic cord keep the blanket flat and taut on the mattress, and make it easier to fit and remove from the bed.

For instructions on how to fit your Safe & Sound Plush electric blanket, see the section titled Fitted Electric Blankets on page 14.

Machine washable

The detachable controls and waterproof element make your electric blanket safe to machine wash and tumble dry.

For instructions on how to launder your Safe & Sound Plush electric blanket, see the Care and cleaning section on page 19.

9 heat timer control

A choice of 9 heat settings allows you to select the desired temperature to keep you comfortable all night. The setting dial is illuminated to enable easy adjustment in the dark.

Ideal for preheating the bed before hopping in, the 75 minute setting automatically switches the blanket off after 75 minutes.

The 12 hour setting automatically switches the blanket off after 12 hours in case you forget.

Detachable controls

Remove the controls when laundering your blanket. Store the controls during summer months while your blanket remains on the bed as a year round mattress protector and comfortable underblanket.

Dual controls

Your Double, Queen or King size electric blanket features two controls for individual comfort.

Safe & Sound Quilted

BL4725 Single

BL4755 Queen

BL4775 King

BL4785 Super King (New Zealand only)

Your Safe & Sound Quilted electric blanket has the following features:

SleepPerfect® Technology

Sunbeam's exclusive SleepPerfect® Technology continually senses and adjusts to changes in your room and body temperature to maintain your selected heat setting. So when the temperature drops outside, you'll stay safe and warm.

Quilted fabric

This soft quilted electric blanket adds an extra layer of comfort to your bed. It is designed to remain on the bed all year round as a comfortable underquilt, with the added benefit of protecting your mattress.

Cosy feet heating

The heating wires are concentrated at the base of the blanket to deliver extra heat around your feet, while keeping the rest of your body comfortably warm.

Fitted design

The fitted skirt and extra strong elastic cord keep the blanket flat and taut on the mattress, and make it easier to fit and remove from the bed.

For instructions on how to fit your Safe & Sound Quilted electric blanket, see the section titled Fitted Electric Blankets on page 14.

Machine washable

The detachable controls and waterproof element make your electric blanket safe to machine wash and tumble dry.

For instructions on how to launder your Safe & Sound Quilted electric blanket, see the Care and cleaning section on page 19.

9 heat digital timer control

A choice of 9 heat settings allows you to select the desired temperature to keep you comfortable all night. The selected setting is displayed on the LCD screen for easy adjustment in the dark.

A choice of three timer settings enables you to set the blanket to switch off automatically after 1, 3 or 12 hours.

Detachable controls

Remove the controls when laundering your blanket. Store the controls during summer months while your blanket remains on the bed as a year round mattress protector and comfortable underblanket.

Dual controls

Your Queen or King size electric blanket features two controls for individual comfort.

Safe & Sound Pillow Top

BL4655 Queen

Your Safe & Sound Pillow Top electric blanket has the following features:

SleepPerfect® Technology

Sunbeam's exclusive SleepPerfect® Technology continually senses and adjusts to changes in your room and body temperature to maintain your selected heat setting. So when the temperature drops outside, you'll stay safe and warm.

Quilted pillow top fabric

This comfortable quilted electric blanket is filled with a thick layer of pillow-like filling to add an extra layer of comfort to your bed. It is designed to remain on the bed all year round as a comfortable underquilt, adding a cosy pillow top layer to your mattress.

Cosy feet heating

The heating wires are concentrated at the base of the blanket to deliver extra heat around your feet, while keeping the rest of your body comfortably warm.

Fitted design

The fitted skirt and extra strong elastic cord keep the blanket flat and taut on the mattress, and make it easier to fit and remove from the bed.

For instructions on how to fit your Safe & Sound Pillow Top electric blanket, see the section titled Fitted Electric Blankets on page 14.

Machine washable

The detachable controls and waterproof element make your electric blanket safe to machine wash and tumble dry.

For instructions on how to launder your Safe & Sound Pillow Top electric blanket, see the Care and cleaning section on page 19.

6 heat digital timer control

A choice of 6 heat settings allows you to select the desired temperature to keep you comfortable all night. Setting 6 is a fast preheat setting that heats the blanket in just 10 minutes. The selected setting is illuminated for easy adjustment in the dark. A choice of two timer settings enables you to set the blanket to switch off automatically after 1 or 9 hours.

Detachable controls

Remove the controls when laundering your blanket. Store the controls during summer months while your blanket remains on the bed as a year round mattress protector and comfortable underblanket.

Dual controls

Your Queen size electric blanket features two controls for individual comfort.

Safe & Sound Fleecy

BL4928 Single

BL4958 Queen

BL4978 King

BL4988 Super King (New Zealand only)

Your Safe & Sound Quilted electric blanket has the following features:

SleepPerfect® Technology

Sunbeam's exclusive SleepPerfect® Technology continually senses and adjusts to changes in your room and body temperature to maintain your selected heat setting. So when the temperature drops outside, you'll stay safe and warm.

Fleecy wool

Topped with 100% Australian wool pile, your Safe & Sound Fleecy is perfect on the bed all year round as a comfortable underlay. The wool pile allows the air to circulate around your body, keeping you warm in winter and cool in summer. Simply detach the controls and store when not in use.

Cosy feet heating

The heating wires are concentrated at the base of the blanket to deliver extra heat around your feet, while keeping the rest of your body comfortably warm.

Fitted design

The fitted skirt and extra strong elastic cord keep the blanket flat and taut on the mattress, and make it easier to fit and remove from the bed.

For instructions on how to fit your Safe & Sound Fleecy electric blanket, see page 14.

Machine washable

The detachable controls and waterproof element make your electric blanket safe to machine wash and tumble dry.

Boost function

The boost function is ideal for preheating the bed, or for a burst of heat during the night. Pressing the boost button heats the blanket to maximum temperature (setting H) for 30 minutes, then returns to heat the previously selected heat setting.

Safe & Sound Fleecy continued

9 heat digital timer control

A choice of 9 heat settings allows you to select the desired temperature to keep you comfortable all night. The selected setting is displayed on the LCD screen for easy adjustment in the dark.

A choice of three timer settings enables you to set the blanket to switch off automatically after 1,3 or 12 hours.

Detachable controls

Remove the controls when laundering your blanket. Store the controls during summer months while your blanket remains on the bed as a year round mattress protector and comfortable underblanket.

For instructions on how to launder your Safe & Sound Fleecy electric blanket, see the Care and Cleaning section on page 19.

Dual controls

Your Queen, King or Super King size electric blanket features two controls for individual comfort.

Fitting your electric blanket

Follow the instructions below for the type of electric blanket you have purchased.

A double/queen size electric blanket can safely be used on a double bed, providing the heating wires do not overhang the edge of the mattress. Do not tuck in.

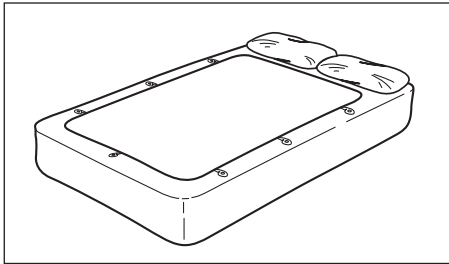


Figure 1.

Tie tape electric blankets

Place the electric blanket on your mattress towards the foot of the bed. The control sockets should be under the blanket near the head of the bed. Ensure that the heating wires do not extend under the pillows, or hang over the sides of the mattress (see Figure 1). Smooth any folds or wrinkles.

A single electric blanket can be turned over so that the control is on the preferred side of the bed if desired. Please note that this may result in the control facing towards the bed once the bed is made.

Pull the tip of each tie tape and unroll. As shown in Figure 2, pass the tape from (A) under the corner of the mattress and through the loop at the base of the bed (B), then under the other corner and through the loop (C). Secure the tie tape firmly with a knot. Repeat at the head of the bed.

Pass the tie tape in the middle of the blanket underneath the mattress and through the corresponding loop on the other side. Secure firmly with a knot. Avoid tying small, tight knots, which may make it difficult to remove the blanket.

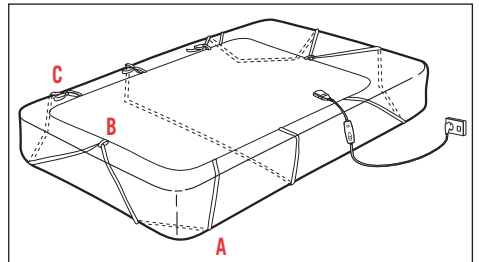


Figure 2.

Fitting your electric blanket (continued)

Fitted electric blankets

Place the electric blanket on your mattress with the control sockets on the underside of the blanket near the head of the bed (see Figure 3). Ensure the heating wires do not extend under the pillows.

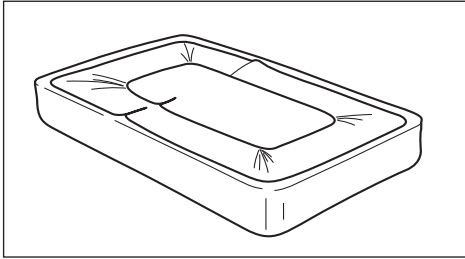


Figure 3.

A single or king single Fitted or Antibacterial electric blanket can be turned over so that the control is on the preferred side of the bed if desired. Please note that this may result in the control facing towards the bed once the bed is made.

Pull the elastic cord inside the fitted skirt over the top corners of the mattress. To fit the foot of the bed, pull from the centre of the blanket to the foot of the bed, and fit one corner at a time while holding the centre (see Figure 4).

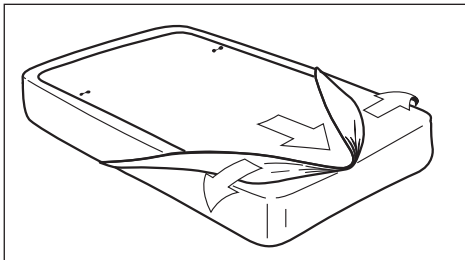


Figure 4.

Ensure the fitted skirt and elastic cord go completely under the mattress. Pull on the edges of the blanket to ensure that it is flat and square on the mattress.

Connecting the controls

To connect the controls, lift one corner of the blanket near the head of the bed to expose the connector socket. With the control set to the off position, pass the control cord through the triangular hole in the fitted skirt and insert the connector plug into the socket. Ensure it is firmly clicked into position. Repeat on the other side if required. Plug the controls into a 230-240V power outlet and turn the power on.

Note: Ensure that the controls are connected to the blanket before inserting the power cord into the power outlet. Connecting the power before attaching the controls to the blanket will replicate a power interruption and activate the safety system, preventing your blanket from heating.

Caution: The cord and controls must be kept outside the bed and away from external

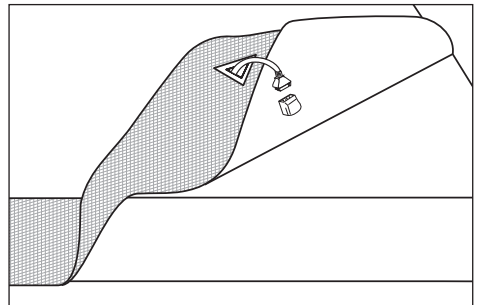


Figure 5.

heating sources such as heaters and lamps. Do not cover the control.

Using your electric blanket

Before first use

Before using your electric blanket for the first time, Sunbeam recommends that you switch the blanket to maximum heat (setting 9) for two to three hours to evaporate any moisture in the mattress. Repeat this process every few months to maintain a dry, healthy bed. Your electric blanket control has nine heat settings, which are recommended for use as follows:

- 1-3 Low, gentle heat for all night use
- 4-6 Medium heat
- 7-9 High heat, for preheating only

Use the high heat settings to preheat your bed only. Do not sleep with your blanket on these settings for more than 30 minutes.

Using your 9 heat control with timer

Your timer control features a slide switch to select the desired operating mode, plus an easy to use dial to select the temperature setting (see Figure 6). The heat setting dial is illuminated for easy adjustment in the dark.

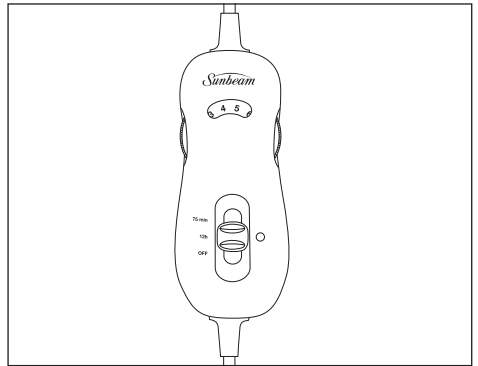


Figure 6.

75 minute setting

Use the 75 minute setting to preheat your bed before hopping in. Move the slide switch to the 75min position. The temperature dial will then illuminate enabling you to turn the dial to your desired heat setting. The timer indicator light (positioned next to the slide switch) will go out, indicating that the blanket is on and heating.

Your electric blanket will automatically switch off after 75 minutes. The timer indicator light will illuminate and the light in the temperature dial will go out, indicating that the timer period has elapsed and the blanket is no longer heating.

To restart the timer, move the slide switch to the OFF position and then return it to the desired timer position.

Using your electric blanket (continued)

12 hour setting

Ideal for colder nights or those who like warmth all through the night, the 12 hour setting automatically switches your electric blanket off after 12 hours. Move the slide switch to the 12 hour position. The temperature dial will then illuminate enabling you to turn the dial to your desired heat setting. The timer indicator light (positioned next to the side switch) will go out, indicating that the blanket is on and heating. Sunbeam recommends that you use only settings 1, 2 or 3 for all night use.

Your electric blanket will automatically switch off after 12 hours. At the end of the timer period, the timer indicator light will illuminate and the light in the temperature dial will go out, indicating that the timer period has elapsed and the blanket is no longer heating.

To restart the timer, move the slide switch to the OFF position and then return it to the desired timer position.

Using your 6 heat digital timer control

Ensure that the control is connected to the blanket properly. Move the slide switch on the rear of the control to the on position (I). The blue standby light (Ⓛ) will illuminate to indicate that the blanket is connected to the power outlet but is not heating.

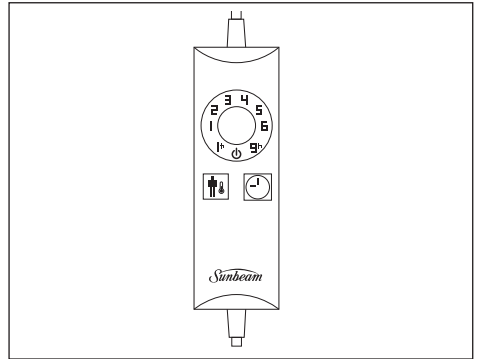


Figure 7.

Press the timer button (⌚) to turn the control on. Heat setting 1 will illuminate. Select the desired temperature using the temperature (🌡️) button. The selected temperature setting will illuminate. Pressing the temperature button cycles through the various temperature settings, from 1 through to 6, then back to 1.

Sunbeam recommends that you use only settings 1-5 for all night use. Use setting 6 for fast preheating only.

To change the timer period, press the timer button (⌚). Pressing the timer button will cycle through the two timer options, 1 hour or 9 hours, and standby mode. If the timer setting is changed during the timer period, the timer will restart.

At the end of the selected timer period, the blanket will switch off and the blue standby light will illuminate. To switch the blanket on again, press the timer button to select a timer period. The control will default to the previous temperature setting. You can adjust the temperature at any time during the timer period.

Using your electric blanket (continued)

Using your 9 heat digital timer control

Move the slide switch to the on position to turn the control on. Select the desired temperature using the up/down temperature buttons (▼▲). The selected setting will be displayed on the LCD screen.

Press the timer button to cycle through the timer settings: 1 (1H), 3 (3H) or 12 hours (12H). The selected timer setting is also displayed on the LCD screen. At the end of the timer period, the LCD display will flash showing heat setting 0 and the elapsed timer setting. To reset the timer, move the slide switch to the off position and back to on.

Pressing the timer button before the timer has elapsed will change it to the next timer setting and restart the timer for the new period.

You can adjust the temperature setting at any time during the timer period.

Using the boost feature

Pressing the boost button heats the blanket to maximum (setting H) for 30 minutes and then returns to the previously selected setting.

The temperature cannot be adjusted using the up/down buttons (▼▲) during the boost period. To cancel the boost function, move the on/off switch to the off position.

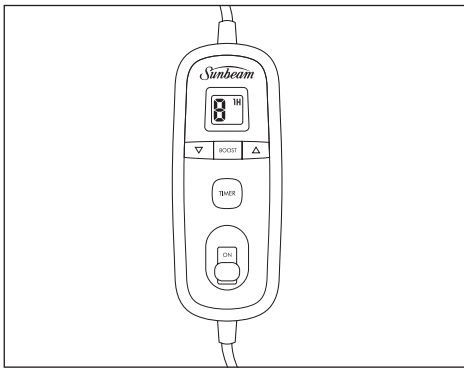


Figure 8.

Troubleshooting

Should your electric blanket fail to heat, check the following:

1. Check that the controls are properly connected to the blanket and clicked securely into position. If you find the control connector plug is not properly fitted to the blanket, switch the power off at the power outlet, securely attach the control connector plug to the blanket, and then switch the power back on. The timer indicator light should not flash once the power is reconnected. If the timer light flashes once the power is reconnected, the control connector plug is not properly fitted.
2. Check that the power cord is connected to the power outlet and the power is switched on.
3. Check that the control slide switch is in either the 75 minute or 12 hour position.

9 heat digital timer control

Should an error alarm code appear on the LCD screen follow the relevant corrective action as outlined below.

1. Alarm code $E2$, represented by E and 2 flashing alternately on the LCD screen, indicates that the control is not connected to the blanket correctly. Check that the plug is correctly inserted into the blanket, then switch the control off and on again to reset. The flashing alarm code should disappear.
- 2 Alarm code $E3$ indicates that the blanket is damaged or too hot. Switch the control off and allow the blanket to cool down before turning on again. If the alarm code persists, the blanket is damaged and should be replaced.

Troubleshooting - 6 heat digital timer control

If the control detects a fault within the blanket, the standby light (⏻) will flash. If the standby light flashes twice, followed by a long pause, the control may not be connected to the blanket correctly. Turn the control off at the main power switch (located on the rear of the control). Check that the control is properly connected to the blanket and the connector is not damaged. Switch the control on again. If the standby light continues to flash, please contact Sunbeam Customer Service (see the back page for contact details).

If the standby light flashes three times, followed by a long pause, the blanket is too hot or may be damaged. Turn the control off at the main power switch (located on the rear of the control). Switch the control on again. If the standby light continues to flash, please contact Sunbeam Customer Service (see the back page for contact details).

Care and cleaning

All Safe & Sound electric blankets feature waterproof heating elements, making them fully immersible and safe to wash by hand or machine.

Before cleaning your electric blanket, ensure that the controls are unplugged from the blanket.

Spot cleaning

Sponge the affected area using a neutral wool detergent or mild soap flakes mixed with lukewarm water. Sponge twice with clean water to remove detergent. Remove excess water by compressing the wet area between two towels.

Hand washing

Wash the blanket in lukewarm water with a neutral wool detergent or mild soap flakes. Soak for five minutes, then gently squeeze the soapy water through the fabric. Rinse thoroughly in clean, lukewarm water then drain excess water from the blanket. Do not wring.

Machine washing

Take your electric blanket to a commercial laundry or wash in a domestic washing machine (size permitting). Wash on WOOL or DELICATES cycle with a neutral wool detergent or mild soap flakes, below 40°C. Do not use high speed or extra spin cycles.

Line drying

Drape the blanket across several lines of your clothesline. Do not use pegs on the wired areas. Do not dry with a hairdryer or heater. Ensure that the blanket and control sockets are completely dry before using again.

Machine drying

Tumble dry your blanket on LOW setting for 15 minutes MAXIMUM. Smooth the blanket by gently pulling any creases out of the fabric. Line dry to ensure the blanket and control sockets are completely dry before use. Do not dry with a hairdryer or heater.

Storing your blanket

Your blanket can remain on the bed all year round as a comfortable underblanket. Simply remove the controls and store until winter.

If you wish to remove the blanket from your bed when not in use, roll or fold it loosely and store in a blanket bag or the bag it was supplied in. Avoid pressing sharp creases into the blanket.

Do not place heavy items on top of your electric blanket when storing.

When storing the electric blanket, allow it to cool down before folding.

Notes

3 Year Replacement Guarantee

In the unlikely event that this appliance develops any malfunction within 3 years of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you free of charge.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand. Alternatively, you can send a written claim to Sunbeam at the address listed below. On receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the appliance is defective, advise you on how to obtain a replacement or refund.

Your Sunbeam 3 Year Replacement Guarantee naturally does not cover misuse or negligent handling and normal wear and tear.

Similarly your 3 Year Replacement Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase.

The benefits given to you by this guarantee are in addition to your other rights and remedies under any laws which relate to the appliance.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law and under the New Zealand Consumer Guarantees Act.

In Australia you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your appliance require repair or service after the guarantee period, contact your nearest Sunbeam service centre.

For a complete list of Sunbeam's authorised service centres visit our website or call:

Australia

www.sunbeam.com.au

1300 881 861

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

New Zealand

www.sunbeam.co.nz

0800 786 232

26 Vestey Drive, Mt Wellington
Auckland, New Zealand

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

In Australia


Visit www.sunbeam.com.au

Or call 1300 881 861

In New Zealand

Visit www.sunbeam.co.nz

Or call 0800 786 232

 is a registered trademark.

'Safe & Sound' and 'SleepPerfect' are registered trademarks of Sunbeam Corporation.

Made in China.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2005-2012.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

Unit 3, Building D

26 Vestey Drive

Mt Wellington Auckland

New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.