



*Thinking of you*

 **Electrolux**

user manual

Intuition –  
Advanced Drying System  
Condenser Dryer

EDC 66150W



**We were thinking of you**  
when we made this product

## Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!



## Contents

Safety information.....	5
Installation .....	7-8
Product description .....	9
Control panel.....	9
Use.....	10
Drying hints .....	14-15
Drying programme .....	16-17
Programme information .....	18
Care and cleaning .....	19
Something not working .....	22-24
Technical data .....	25
Environment concerns.....	26
Guarantee conditions .....	27
Customer service centres.....	28

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information



# Safety Information



**In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.**

## General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- Items containing foam rubber (also known as latex foam) or similiary textured rubber like materials, including shower caps, babies waterproof napkin covers, rubber backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber coated tennis shoes etc. should not be dried in a tumble drier. Foam rubber materials can, when heated, produce fire by spontaneous combustion
- Always unplug the appliance after use, cleaning and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- If the supply cord is damaged, it must be replaced by an authorised Electrolux service agent.
- To minimise the risk of a fire in the tumble dryer, the following should be observed: - Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer. Oil- affected items can ignite spontaneously, especially when exposed to a heat source such as is in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat, and if the heat can't escape, the items become hot enough to catch fire. Piling, stacking or storing of oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil, or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent – this will reduce but not eliminate the hazard.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/gasoline, dry cleaning solvents or other flammable or explosive substances should not be placed in the tumble dryer.

## 6 electrolux **safety information**

- Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot removers (some brands), turpentine, waxes and wax removers.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance

### **Installation**

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged. Items should not be removed from the tumble dryer or piled or stacked while hot before the end of the cool down cycle
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, or drain hose.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

### **Use**

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.

### **WARNING:**

**Clean the lint filters after every use.**

### **WARNING:**

**Never stop a tumble dry before the end of the drying cycle.**

### **Child safety**


- This machine is not intended for use by young children or infirm persons without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.

# Installation

## Unpacking



Slide out the polythene bag with the polystyrene stuffing before using the appliance. Pull off adhesive strips from inside machine on top of drum.

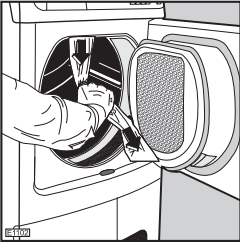

**Should the appliance be moved, it must be transported vertically.**



**The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that the full opening of the tumble dryer door is restricted.**

## Positioning

It is recommended that, for your convenience, the machine is positioned close to your washing machine.

The tumble dryer must be installed in a clean place, where dirt does not build up.

Lint must not be allowed to accumulate around the tumble dryer.

Adequate ventilation has to be provided to avoid the back flow of gasses into the room from appliances burning other fuels, including open fires.

Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine.

To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.



The feet must never be removed. Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.

## Important

The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.


When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.



### Stacking kit

A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm.

Read carefully the instructions supplied with the kit.

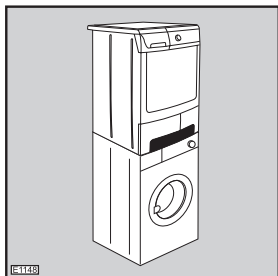

### Electrical connection

This machine is designed to operate on a 230-240 V, single-phase, 50 Hz supply. Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use.

Connect the machine to an earthed socket, in accordance with current wiring regulations.

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Machine description" section).

**CAUTION:** If the appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.



**The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.**




**Important!**

The power supply cable must be accessible after installing the machine.




## Product description

- 1** Control panel
- 2** Fluff filters
- 3** Rating Plate
- 4** Condenser unit
- 5** Water reservoir
- 6** Adjustable feet

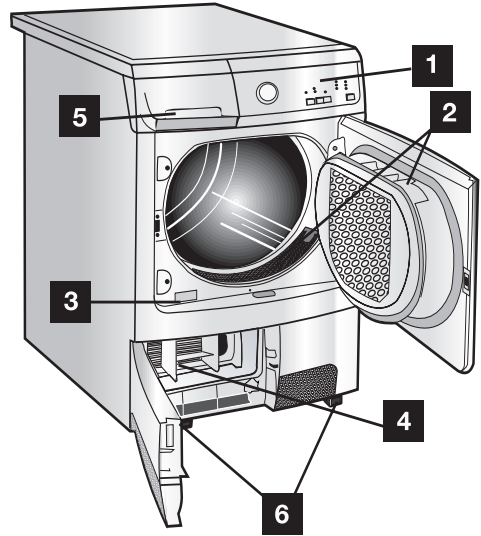

## Control panel

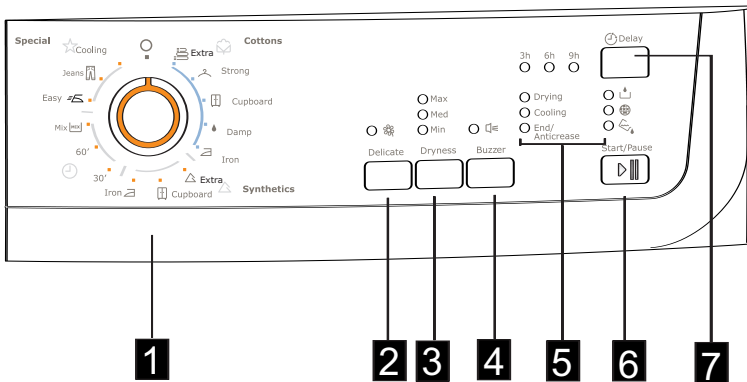

- 1** Programme selector dial
- 2** Delicate button
- 3** Dryness button
- 4** Buzzer button
- 5** Indicator lights
- 6** Start/Pause button
- 7** Delay button

## Use

### First Use



- Ensure that the electrical connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes.

There may be dust inside a brand new tumble dryer.

### Daily Use

#### Load the laundry



- Connect the appliance.
- Open the door (see picture).




Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door.

Please check the laundry does not get caught between the door and filter.



#### Select the required programme

Turn the programme selector dial to the required programme. The light Start/Pause starts to flash.

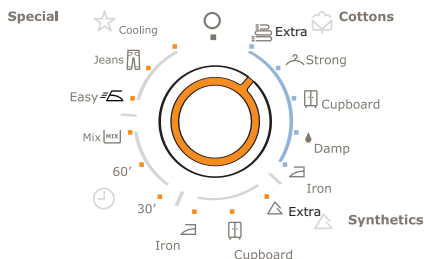

The selector dial is divided into following sections:

- Cottons ☼
- Synthetics ▲
- Time ⌚
- Special ☆

Allows you to select electronically controlled or time controlled drying.

Turn the dial to the required programme or time.

#### Electronically controlled drying (automatic)

The appliance runs these programmes with the help of probes which detect the degree of dampness of the laundry. Simply select the programme according to the type of laundry and degree of drying required.

The selector dial can be turned either clockwise or anticlockwise. The lights Drying, Cooling and End/Anticrease come on.

**At the end of the programme the selector dial must be turned to position O, to switch the machine off.**

### Attention!

If you turn the programme selector dial to another programme when the machine is working, the lights of the programme progress display start to flash. The machine will not perform the new selected programme.

### Programme Option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button.

When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

### Select Delicate

Pressing this button allows drying to be performed at a lower temperature, for delicate items.

Min

Dryness



The corresponding pilot light comes on. This option can also be used for time controlled drying. DELICATE is only suitable for use with loads of up to 3kg!

When the programme has finished the pilot lights End is on.

### Select the Dryness

Press the Dryness button repeatedly, to select the desired option. The relevant light will light up. Laundry becomes dryer from MIN to MAX.

Press the Dryness button as many

times as necessary until the small light at the level of residual dampness required is illuminated.

Max

Med

Min

Dryness



When the programme has finished the pilot lights End is on.

### Select the Buzzer

When the drying cycle has finished, an intermittent audible signal will sound.



Buzzer



 
By depressing button  the acoustic signal is switched off in the following cases:

- when selecting the programme
- when depressing the buttons
- when the programme selector dial is turned to another position during the programme or when you depress an option button during the cycle
- at the end of the programme.

The corresponding light comes on

### Select the Start/Pause

Start/Pause



Press this button to start the dryer after having selected the programme and the options.



The relevant light will stop flashing.

If the programme selector dial is turned to another position, when the machine is running, the buzzer will sound and the programme phase indicator lights will flash.


The drum turns alternately in both directions during drying.

All drying programmes end with a 10 minute cooling phase (Cooling light is on).

You may remove the laundry after this phase.


The lights End/Antcrease,  and  illuminate and the buzzer sounds

**If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.**

**This button must be depressed also after a power failure and after having re-inserted the water reservoir, if it has been emptied in the middle of a programme after lighting up of light .**

In both cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

## Select the Delay Start

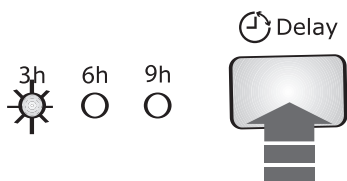

This button allows you to delay the starting of the programme by 3, 6 or 9 hours.

Press the button until the light relevant to the desired delay lights up. This option must be selected **after** having selected the programme and **before**

pressing START/PAUSE to start the programme.

The machine begins the countdown, which is shown by the pilot lights. For example, if you have chosen a 9-hour delay (pilot light 9h lit), after 3 hours, 9h goes out and 6h lights up; after 3 more hours, 6h goes out and 3h lights up.

When the 9 hours are over (pilot light 3h off), the drying cycle begins. During the delayed start period, it is not possible to change the programme or the selected delay. If you wish to do so, you must first cancel everything by rotating the programme selector dial to position "O".

Select the new programme, the options and the delayed start, then press START/PAUSE. If you wish to change only the options, this can be done on condition that the new option(s) is(are) compatible with the programme. Set the machine to PAUSE by depressing the relevant button, select the new option(s) and depress START/PAUSE button again.

If you wish to add some laundry while the machine is performing the countdown, after having done so and having closed the door, press START/PAUSE again, in order to allow the machine to complete the remaining countdown time.

## Indicator lights

These lights indicate the following functions:

### "Drying" light

This light indicates that the appliance is in the drying phase.

### "Cooling" light

This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 10 minute cooling phase to cool the laundry.

### “End of programme” light

This light is on at the end of the cooling phase, during the anti-creasing phase and at the end of the programme.

### “Water reservoir full” light

This light indicates that the appliance is in the drying phase.

This light comes on at the end of the programme to remind you that the water reservoir must be emptied out. If this light illuminates during a programme this means that the water reservoir is full. The buzzer sounds, the programme stops, the light of the Start/Pause button flashes. This light comes on also when the water reservoir is not inserted correctly.

### “Filter cleaning” light

This light illuminates at the end of the programme to remind you that the filters must be cleaned.

### “Condenser cleaning” light

It comes on every 80 cycles to remind you that the condenser must be cleaned.



## Cancelling a programme

Turn the selector dial to “O” to cancel a programme which is running. Now you can select a new programme.

## At the end of the programme

If the laundry is not removed at the end of the cycle, the dryer performs an **anti-creasing** phase (duration: 30 minutes maximum).

If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase.

Lights End/Antcrease,  and  remain lit and the buzzer sounds for 2 minutes.

Turn the programme selector dial to “O” to switch the machine off. Remove the

laundry from the drum and carefully check that the drum is empty.

Leave the door open to prevent the formation of mildew and unpleasant smells.

Turn the programme selector dial to “O”; all the lights go out. The appliance is switched off.



Remove the laundry.

**If you open and then close the door before turning the selector dial to “O” all the lights corresponding to the phases making up the performed programme come on.**

## After each use

- Clean the filters.
- Empty the water reservoir.

## Important!

If the drying programme has to be stopped before it reaches the end, we recommend that you turn the programme selector dial to position Cooling  and wait until the end of this cooling phase before removing the laundry. This will avoid a build-up of heat inside the appliance. To do this first turn the dial to “O” and then to Cooling  and depress Start button.

## Modifying the programme

To change a programme which is running, first cancel it by turning the programme selector dial to “O”. Select the new programme and press the Start button .

## Drying hints



### Before loading the laundry

Never tumble dry the following:  
Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:



may be tumble dried



normal drying (high temperature)



delicate drying (low temperature)



do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings.
- Sort laundry according to type and degree of drying required.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Do not over-dry laundry, this avoids creasing and saves energy.

- Undergarments that contain metal reinforcements should not be placed in a tumble dryer.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- **Easy-care items**, too, e.g. shirts, should be briefly pre-spun before drying (depending on crease resistance approx. 30 seconds or using the special brief spin programme of your washing machine).
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, of **at least 30 minutes**. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.).

### **Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).**

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

To avoid laundry becoming tangled: close zips, button up duvet covers and

tie loose ties or ribbons (e.g. of aprons).

Turn items with double-layered fabrics inside out (e.g. with cottonlined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

### Maximum loads

Recommended loads are indicated in the programme charts.

General rules:

**Cotton, linen:** drum full but not too tightly packed;

**Synthetics:** drum no more than half full;

**Delicate fabrics and woollens:** drum no more than one third full.

Try to load to the maximum capacity of the machine as small loads are uneconomical.

### Laundry weights














 















The following weights are indicative:

bathrobe	1200 g
napkin	100 g
quilt cover	700 g
sheet	500 g
pillow case	200 g
tablecloth	250 g
towelling towel	200 g
tea cloth	100 g
night dress	200 g
ladies' briefs	100 g
man's work shirt	600 g
man's shirt	200 g
man's pyjamas	500 g
blouse	100 g
men's underpants	100 g





 



 





 


## Drying programmes

Programme	Type of laundry	Options	Description of programme
 <b>Extra</b>	Cotton and linen	<b>Dryness</b>   	Drying thick or multi-layered textiles, e.g. terry towelling items Max load: 6 kg
 <b>Strong*</b>	Cotton and linen	<b>Dryness</b>   	Drying thick textiles, e.g. terry towelling items, towels.
 <b>Cupboard</b>	Cotton and linen	<b>Dryness</b>   	Drying textiles of even thicknesses, e.g. terry towelling items, knitted items, towels.
 <b>Damp</b>	Cotton and linen	<b>Dryness</b>   	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.
 <b>Iron</b>	Cotton and linen	<b>Dryness</b>   	For cotton or linen laundry which are still to be put through a machine, e.g. bedding, table linen.
 <b>Extra</b>	Synthetics	<b>Dryness</b>   	Drying thick or multi-layered textiles, e.g. pullovers, bedding, table linen.
 <b>Cupboard</b>	Synthetics	<b>Dryness</b>   	For thin textiles which are not ironed, e.g. easy care shirts, table linen, baby's clothes, socks, underwear.
 <b>Iron</b>	Synthetics	<b>Dryness</b>   	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.
 <b>Time</b> <b>30 min</b> <b>60 min</b>	Synthetics Cotton	  	Drying thick or multi-layered textiles, e.g. terry towelling items. For drying individual items of laundry or for small volumes of less than 1kg.

\*Cotton, Strong cycle with Max dryness option selected is the reference programme used for energy rating program, when tested in accordance with AS/NZS 2442.2.

## Drying programmes













Programme	Type of laundry	Options	Description of programme
<b>Special</b>  <b>Mix</b>	Cotton Cupboard dry Synthetics	<b>Dryness</b>  	Special programme for cotton and easy care, which can drying together in the same time.
<b>Special</b>  <b>Easy</b>	Synthetics	  	Special programme with anti-crease mechanism for easy care textiles such shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 4 to 5 shirts.) Recommendation: Place textiles in the dryer straight after spinning. Once dried, immediately remove textiles and place on clothes hanger.
<b>Special</b>  <b>Jeans</b>	Cotton Cupboard dry	<b>Dryness</b>   	Special programme for leisure clothing, such as jeans, sweat-shirts, etc., of different material thicknesses (e.g. at the cuffs and seams).
<b>Special</b>  <b>Cooling</b>	Cotton and linen Synthetics		Special programme, lasting around 10 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning sets. (Only use those products which are declared as suitable for the drier by the manufacturer; please observe the manufacturer's instructions for use.)



Max Cottons load:	6 kg
Max Synthetics load:	3 kg
Max Time load:	1 kg
Max Special Mix load:	3 kg
Max Special Jeans load:	6 kg

## Programme information



Objective	Implementation												
<p><b>Adjusting the level of conductivity</b></p>	<p>Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values. Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle. Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water by using the following procedure.</p> <p><b>To access adjustment mode:</b></p> <ol style="list-style-type: none"> <li>1. Turn the programme selector dial to switch on the appliance.</li> <li>2. In selection mode,press simultaneously the buttons DRYNESS and START.</li> </ol> <p>Press the buttons down until the pilot lights above each ones begin to flash and one of the pilot lights indicating the drying phase lights ,  and  remains it.</p> <p><b>Adjusting the level of conductivity:</b></p> <p>Press the START/PAUSE button sequentially: the level of conductivity is indicated by the phase pilot lights, which light in various combinations as follows:</p> <table border="1" data-bbox="364 989 1024 1141"> <thead> <tr> <th>LED lit</th> <th>Conductivity</th> <th>Approximate value <math>\mu\text{S/cm}</math></th> </tr> </thead> <tbody> <tr> <td></td> <td>Low</td> <td>&lt; 300</td> </tr> <tr> <td></td> <td>Medium</td> <td>300-600</td> </tr> <tr> <td></td> <td>High</td> <td>&gt;600</td> </tr> </tbody> </table> <p>Normally, the appliance is factory-set to the highest level; however, certain models may be configured differently.</p> <p><b>Memorizing the new setting:</b></p> <p>Simultaneously press the buttons DRYNESS and START. Press the buttons down until the pilot lights above each ones stop flashing and the buzzer sounds.</p> <p>To reset a programme and to switch off the machine turn the selector dial to <b>O</b>. Now a new programme can be selected.</p>	LED lit	Conductivity	Approximate value $\mu\text{S/cm}$		Low	< 300		Medium	300-600		High	>600
LED lit	Conductivity	Approximate value $\mu\text{S/cm}$											
	Low	< 300											
	Medium	300-600											
	High	>600											
<p><b>O = Cancelling/OFF</b></p>													

## Care and cleaning



You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

### External cleaning

Use only soap and water and then dry thoroughly.

**Important:** do not use methylated spirit, diluents or similar products..

### Cleaning the door


Clean periodically the interior part of the door to remove any fluff from the seals around the filter. Accurate cleaning ensures correct drying.




### Cleaning the filters


Your dryer will only function well if the filters are clean.

The filters collect all the fluff which accumulates during drying and they must therefore be cleaned **at the end of each programme**, before removing the laundry, with a damp cloth.

The light  is on to remind you of this operation.

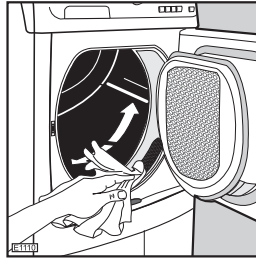

The filter in the inner door must be removed for cleaning.

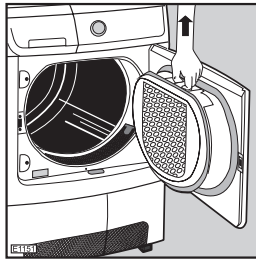

Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer.


All fabric loses fluff when drying but it goes un-noticed in the air. In a tumble dryer it simply collects in the filter.

After a while, a white powder due to detergent residue on laundry may form on the filters. When this occurs, clean the filters with warm water using a brush. Remove the filter in the door opening as per picture (it can be positioned with the tooth facing to the left or to the right).






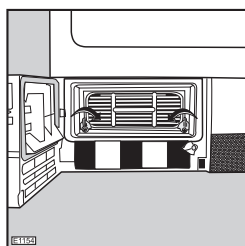
Do not use the appliance without filters.

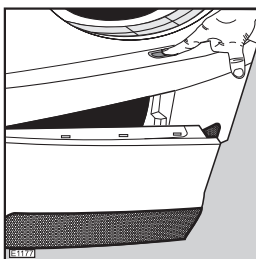



### Cleaning the condenser unit

Clean the condenser when light  comes on.

The condenser is situated at the lower part of the cabinet behind a small door. To open the door, push the catch as per picture. During the drying cycle or at the end, it is normal for water to be present on the surface of the condenser insertion.



To pull out the condenser, first turn the two red stops downwards and then remove the condenser unit holding it at the handle.

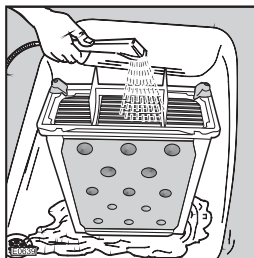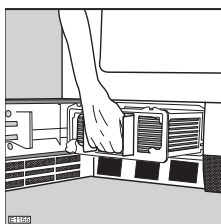

Clean it with a brush and rinse it under the shower if necessary.

Also clean the outside, removing all fluff.

Clean the rubber seal round the condenser cabinet and in the inner part of the small door with a damp cloth.



**Important!** Do not use pointed objects or utensils to clean the spaces between the plates, as this could damage the condenser.


Re-fit the condenser, turn the red stops upwards and close the door.



**Do not use this appliance if the condenser has not been fitted.**



### Emptying the water reservoir

Water extracted from the laundry condenses inside the machine and is collected in a reservoir.


The reservoir must be emptied **after each drying cycle** to ensure efficient operation when the machine is next used. The pilot light  reminds you this operation.

Proceed as follows:

- Pull out the reservoir
- Turn it upside down and let water flow down
- Re-fit the reservoir

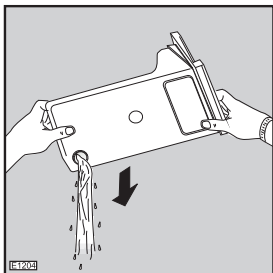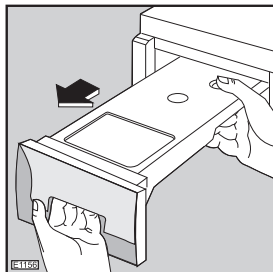

**The reservoir must be re-inserted correctly.**

After emptying and inserting the reservoir the START/PAUSE  has to be depressed again to allow the programme to continue.

**Handy tip:** The condensed water may be used in a steam iron or to top up a battery, etc. In this case it must be filtered (e.g. through a coffee filter).

## Cleaning the air intake grille

Using a vacuum cleaner remove the fluff from the air intake grille at the back of the appliance.



## Cleaning the drum

When your laundry does not reach the desired degree of dryness, in other words, when it turns out either too dry or too damp, we advise you to clean the inside of the drum with a cloth soaked with vinegar.

This will eliminate any detergent residue build up that has formed in the drum (due to residues of detergent and softeners used in the washing, and to the lime contained in the water), which prevents the probes from detecting the correct degree of dryness.



## Something not working

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the **red** Start/Pause pilot light flashes to indicate that the machine is not working.

Once the problem has been eliminated, press the **Start/Pause** button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

**IMPORTANT:** if you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

Malfunction	Possible cause	Solution
Dryer does not work.	<ul style="list-style-type: none"> <li>● Mains plug is not plugged in or fuse is not working correctly.</li> <li>● Loading door is open.</li> <li>● Have you pressed the START/ PAUSE button?</li> </ul>	<ul style="list-style-type: none"> <li>● Plug in at mains socket. Check fuse in fuse box (domestic installation).</li> <li>● Close loading door.</li> <li>● Press the START/PAUSE button again.</li> </ul>
Drying results unsatisfactory.	<ul style="list-style-type: none"> <li>● Wrong programme selected.</li> <li>● Lint filter clogged.</li> <li>● Heat exchanger clogged with lint.</li> <li>● Incorrect volume of laundry.</li> <li>● Ventilation slots in base area covered up.</li> <li>● Residue on inside surface of drum or drum ribs.</li> <li>● Conductance of water at installation site differs from standard setting of machine.</li> </ul>	<ul style="list-style-type: none"> <li>● Select a different programme the next time you dry (see "Overview of programmes" section).</li> <li>● Clean lint filter.</li> <li>● Clean heat exchanger.</li> <li>● Observe recommended loading volumes.</li> <li>● Uncover ventilation slots in base area.</li> <li>● Clean inside surface of drum and drum ribs</li> <li>● Re-programme standard setting for degree of drying (see 'Programming options' section).</li> </ul>




Malfunction	Possible cause	Solution
Loading door does not close.	<ul style="list-style-type: none"> <li>● Fine strainer not in place and/or large mesh filter not locked in place.</li> </ul>	<ul style="list-style-type: none"> <li>● Install fine strainer and/or snap large mesh filter into place.</li> </ul>
When pressing a button, the corresponding button flashes several times.	<ul style="list-style-type: none"> <li>● Washing protection. After the start of the programme, the option can no longer be set.</li> </ul>	<ul style="list-style-type: none"> <li>● Turn the programme knob to OFF. Set the programme again</li> </ul>
Programme inactive, <b>Water reservoir full</b> light illuminated.:	<ul style="list-style-type: none"> <li>● Condensate tank is full.</li> </ul>	<ul style="list-style-type: none"> <li>● Empty condensate tank, then start programme with START/PAUSE button.</li> </ul>
Drying cycle ends shortly after programme starts. END light illuminated.	<ul style="list-style-type: none"> <li>● Not enough washing loaded or washing loaded is too dry for selected programme.</li> </ul>	<ul style="list-style-type: none"> <li>● Select time programme or higher drying level (e.g. EXTRA DRY instead of CUPBOARD).</li> </ul>
Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends automatically (see „Drying cycle complete“)	<ul style="list-style-type: none"> <li>● Lint filter clogged.</li> <li>● Heat exchanger clogged with lint.</li> <li>● DELICATE button pressed and load volume too big.</li> <li>● Load volume too big.</li> <li>● Laundry insufficiently predrained.</li> </ul>	<ul style="list-style-type: none"> <li>● Clean lint filter</li> <li>● Clean heat exchanger.</li> <li>● DELICATE is only suitable for use with loads of up to 3 kg!</li> <li>● Reduce load volume.</li> <li>● Laundry must be adequately pre-drained.</li> </ul>



## 24 electrolux something not working

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

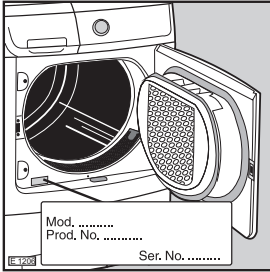

## Technical data

Dimensions	Width	60 cm
	Height	85 cm
	Depth	58 cm
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the appliance door	
Depth with loading door open		109 cm
Maximum Load	Cotton	6 kg
	Synthetics	3 kg
Use	Domestic + 5°C + 35°C	

- CE** This appliance conforms with the following EU Directives:
- 2006/95/EC Low Voltage Directive
  - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
  - 93/68/EEC dated 22.07.1993 CE Marking Directive


AUS



## Environment concerns

### Packaging materials



The materials marked with the symbol  are recyclable.

>PE<=polyethylene

>PS<=polystyrene


>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

### Old machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## Ecological hints



To save energy and to help protect the environment, we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are uneconomical.
- Always load well spun laundry. The higher the spinspeed, the lower the electricity consumption and the shorter the drying times.
- Do not over-dry laundry, this avoids creasing and saves energy. Select the drying programme according to the type of laundry and the required degree of dryness.
- To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the programme for iron-dry, remove the iron-dry items at the end of the programme and then finish-dry the rest of the load.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during drying.


## Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section “What to do if...”).

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)  
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

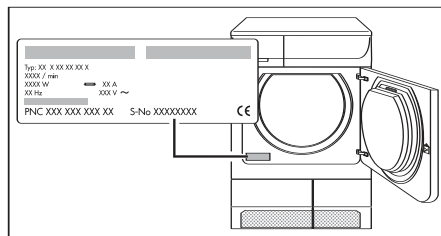

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description: .....  
PNC: .....  
S No: .....



## Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND  
APPLIANCE: "CONDEANSER DRYER"

This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance.

### General Terms and Conditions

1. In this warranty
  - (a) 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
  - (b) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
  - (c) 'Warranty Period' means
    - (i) where you use the Appliance for personal, domestic or household purposes in Australia the period of 24 months and in New Zealand the period of 24 months;
    - (ii) where you use the Appliance for commercial purposes, in Australia the period of 3 months and in New Zealand the period of 3 months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
  - (d) 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use reconditioned parts to repair your appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
7. Proof of purchase is required before you can make a claim under this warranty.
8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or

workmanship. Electrolux is not liable in the following situations (which are not exhaustive):

- (a) The Appliance is damaged by:
    - (i) accident
    - (ii) misuse or abuse, including failure to properly maintain or service
    - (iii) normal wear and tear
    - (iv) power surges, electrical storm damage or incorrect power supply
    - (v) incomplete or improper installation
    - (vi) incorrect, improper or inappropriate operation
    - (vii) insect or vermin infestation.
  - (b) The Appliance is modified without authority from Electrolux in writing.
  - (c) The Appliance's serial number or warranty seal has been removed or defaced.
  - (d) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
9. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

### Limitation of Liability

10. To the extent permitted by law:
  - (a) Electrolux excludes all warranties other than as contained in this document;
  - (b) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.
11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):
  - (a) in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
  - (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied;

and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

### Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

### Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

<p><b>FOR SERVICE</b> OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SERVICE CENTRE IN AUSTRALIA <b>Please call 13 13 49</b> <small>For the cost of a local call (Australia only)</small></p>	<p><b>SERVICE AUSTRALIA</b></p>  <p><b>ELECTROLUX HOME PRODUCTS</b></p>	<p><b>FOR SPARE PARTS</b> OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SPARE PARTS CENTRE IN AUSTRALIA <b>Please call 13 13 50</b> <small>For the cost of a local call (Australia only)</small></p>
<p><b>FOR SERVICE</b> OR TO FIND THE ADDRESS OF YOUR NEAREST AUTHORISED SERVICE CENTRE IN NEW ZEALAND <b>Free call 0800 10 66 10</b></p>	<p><b>SERVICE NEW ZEALAND</b></p>  <p><b>ELECTROLUX HOME PRODUCTS</b></p>	<p><b>FOR SPARE PARTS</b> OR TO FIND THE ADDRESS OF YOUR NEAREST SPARE PARTS CENTRE IN NEW ZEALAND <b>Free call 0800 10 66 20</b></p>





[www.electrolux.com](http://www.electrolux.com)

