


Glass ceramic hob

Induction

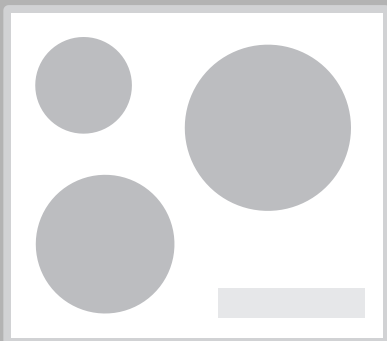

Operating instructions

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Validity

The model number corresponds to the first 3 digits on the identification plate. These operating instructions apply to the models:

Type	Model no.
GK36TI/C/F	969
GK46TI/C/F	971

Variations depending on the model are noted in the text.

Contents

1	Safety precautions	4
1.1	Symbols used	4
1.2	General safety precautions	5
1.3	Appliance-specific safety precautions	6
1.4	Disclaimer	8
1.5	Instructions for use	8
1.6	Disposal	10
2	Using for the first time	11
2.1	Where is the identification plate?	11
3	Your appliance	12
3.1	Appliance overview	12
3.2	Operating and display elements	13
3.3	How induction hobs function	15
3.4	Pan detection	15
3.5	Cookware	16
4	Use	18
4.1	Switching the appliance on and off	18
4.2	Selecting a cooking zone	18
4.3	Overview of power levels	19
4.4	Switching a cooking zone off	19
4.5	Keep warm setting	19
4.6	PowerPlus	20
4.7	Automatic boost	23
4.8	Operating time	24
4.9	Timer	26
4.10	Childproof lock	27
4.11	Pause cooking	28
4.12	Acoustic signal	29
5	Care and maintenance	30
5.1	Cleaning	30
6	Trouble-shooting and error messages	31
6.1	What to do if ...	31
7	Index	34
8	Repair service	35

1 Safety precautions

1.1 Symbols used



Denotes important safety precautions. Failure to observe said precautions can result in injury or damage to the appliance or fittings!



Information and precautions to observe.



Information and precautions to observe.



Tips for ease of use.



Read the operating instructions before using the appliance for the first time!

- Indicates step-by-step instructions.
- Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time!



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, unless they are supervised or have been given instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **WARNING:** If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions



- **WARNING:** If the surface is cracked, switch the appliance off and disconnect it from the mains to avoid possible electric shock.
- **WARNING:** The appliance and its accessible parts get hot during use. Be careful not to touch the heating elements. Children under 8 must be kept away unless constantly supervised.
- Do not use a steam cleaner.
- Do not place metal objects such as knives, forks, spoons, lids and aluminium foil on the hob as they can get hot.

- **WARNING:** It can be dangerous to leave the hob unattended when cooking with fat or oil, as this can lead to fires. **NEVER** attempt to extinguish a fire with water. Instead, switch the appliance off and then carefully smother the flames with a lid or a fire blanket.
- **WARNING:** Never store objects on top of the hob because of fire hazard.
- Do not operate the appliance using an external time switch or a separate remote control system.
- After use, switch the hob off using the controls and do not rely on the pan detector.

1.4 Disclaimer

- Any repairs, modifications or manipulations to the appliance, especially any live parts, may only be carried out by the manufacturer, its Customer Services or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the **REPAIR SERVICE** section. If necessary, please contact Customer Services.
- Make sure no water gets inside the appliance: Do not spray the appliance with water. If water gets inside it can damage the appliance.
- Retain these operating instructions for future reference. If you sell or pass the appliance on to a third party, please ensure these operating instructions accompany the appliance, together with the instructions on installation.
- The appliance is designed for use in the home for preparing food. No liability is assumed for any damage caused by improper or incorrect use.

1.5 Instructions for use

- The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is however essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.
- The heated surface remains hot for some time after it is switched off and cools down only slowly to room temperature. Please allow sufficient time for the appliance to cool down before, for instance, cleaning it.
- In case of overheating, switch the appliance off and allow it to cool down completely. Under no circumstances use cold water to cool it down quickly!
- If the appliance can no longer be operated, remove the fuse or switch the circuit breaker off.

- Do not climb onto the appliance.
- Do not put hot cookware on the hob frame in order not to damage the silicon joints.
- Always ensure that the base of the cookware and the surface of the hob are clean and dry before use.
- Do not cut or prepare food on the surface. Avoid impact with hard objects. Do not drag cookware across the surface.
- Take particular care that sugary foods or juices do not get onto the hot cooking zones as they can damage the surface. If sugary foods or juices do get onto hot cooking zones, clean away immediately (while still hot) with a scraper for glass ceramic hobs.
- Do not leave the appliance unattended when in use.
- Keep animals away from the appliance.
- Induction hobs produce a high frequency magnetic field around the cooking zones. Standing near the cooking zones can under unfavourable circumstances have an adverse effect on or affect the working of pacemakers, hearing aids or metallic implants.
- Tests have shown that under normal circumstances there is no risk to cardiac pacemaker users. If, as the user of a cardiac pacemaker (or a hearing aid or another type of implant), you would like to be reassured that using the appliance does not pose a risk, you are advised to consult a competent medical authority.

1.6 Disposal

Packaging



Danger of suffocation! Packaging materials (e.g. plastic, polystyrene) can be dangerous for children. Keep packaging materials away from children.




All packaging material is marked and should be collected for recycling and disposed of in an environmentally friendly way.

Disconnection

- ▶ Pull the plug out of the mains socket or have the appliance disconnected from the mains supply by an electrician. Then cut off the mains cable.
- ▶ Disable the appliance after disconnecting it.

Appliance disposal




- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

2 Using for the first time

- The appliance must be installed and connected to the mains supply in accordance with the separate installation instructions. Have a qualified fitter/electrician carry out the necessary work.
- A cooking zone can give off an unpleasant smell during the first few hours of use. This is normal for brand new appliances. Ensure that the room is well ventilated.

2.1 Where is the identification plate?

The identification plate and the connection plate are located on the underside of the hob element.

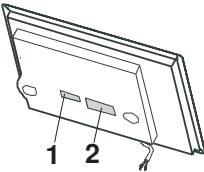

1	Identification plate with serial number (FN)
2	Connection plate

A second identification plate is supplied and should be affixed in the fitted unit underneath the hob.


Note down the serial number (FN) of your appliance on the back page of these operating instructions.

3 Your appliance

3.1 Appliance overview


GK36TI, GK36TIC, GK36TIF

- 1 cooking zone ø 250 mm
- 1 cooking zone ø 210 mm
- 1 cooking zone ø 145 mm

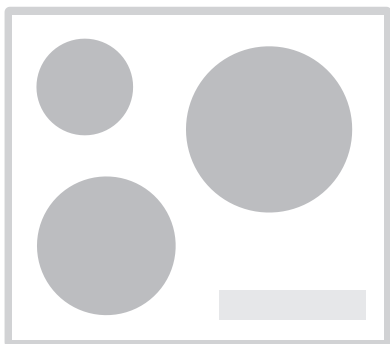


GK46TI, GK46TIC, GK46TIF

- 1 cooking zone ø 210 mm
- 2 cooking zones ø 180 mm
- 1 cooking zone ø 145 mm

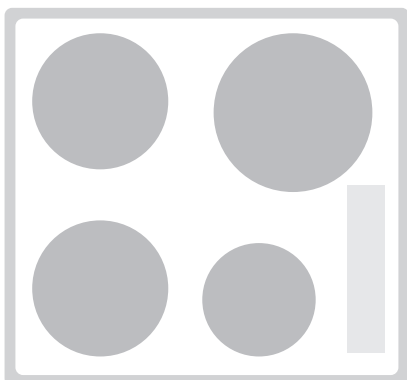

3.2 Operating and display elements

GK36TI...

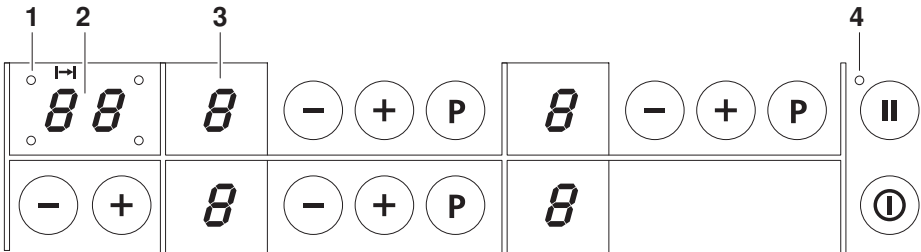

Touch buttons

- ⓘ Appliance ON/OFF
- ⊕ Increase power level/operating time
- ⊖ Reduce power level/operating time
- Ⓟ PowerPlus ON/OFF
- ⏸ Pause cooking ON/OFF

Displays

- 1 Cooking zone indicator lights for the operating time
- 2 Operating time/timer
- 3 Cooking zone power level
- 4 Pause activated


GK46TI...

Touch buttons

- ⓘ Appliance ON/OFF
- ⊕ Increase power level/operating time
- ⊖ Reduce power level/operating time
- P PowerPlus ON/OFF
- ⏸ Pause cooking ON/OFF

Displays

- 1 Cooking zone indicator lights for the operating time
- 2 Operating time/timer
- 3 Cooking zone power level
- 4 Pause activated

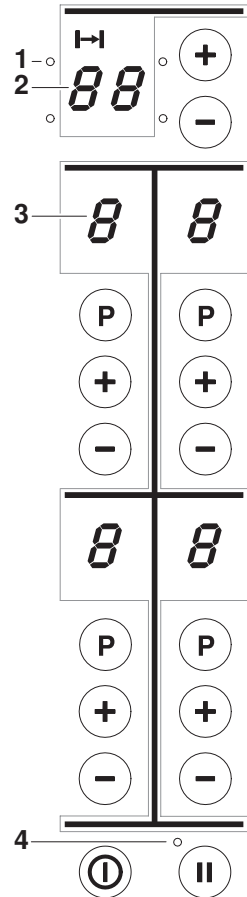

3.3 How induction hobs function

Induction hobs work very differently from conventional hobs or hot plates. The induction coils under the glass ceramic plate produce a rapidly changing magnetic field which directly heats up the magnetic base of the cookware.

The glass ceramic plate is only warmed by the hot cookware.

Removing the cookware from the cooking zone immediately interrupts the supply of energy.

Induction hobs are:

- quick reacting
- finely adjustable
- powerful
- energy-efficient
- safe.






Induction hobs can only be used with cookware with a magnetic base.

3.4 Pan detection

Each cooking zone is equipped with pan detection.

This detects suitable induction compatible cookware with a magnetic base.

- If the cookware is removed during operation or if the cookware used is unsuitable,
 -  illuminates in the power level display.
- If no suitable cookware is placed on the cooking zone before the pan detection time (10 minutes) elapses,
 - the cooking zone switches off
 - the display changes from  to 
 - If no other cooking zone is in use, the appliance switches off automatically after 10 seconds.

3.5 Cookware

Suitable cookware

Only cookware with a magnetic base is suitable for use with the induction hob.

This can be tested in the following ways:

- A magnet sticks anywhere on the base of the cookware.
- On the hob, the power level set illuminates and not **4**.



Do not heat any unsuitable cookware using aids such as metal rings and the like. This can damage the hob.

Energy-efficient cooking

For maximum energy efficiency and even heat distribution note the following:

- The base of the cookware must be clean, dry and smooth.
- The diameter of the base of the cookware should as far as possible correspond to the diameter of the cooking zone.
- Centre the cookware in the middle of the cooking zone.
- Use a well-fitting lid.
- Match the diameter of the cookware to the quantity of food to be cooked.

Coated cookware

- Coated cookware when empty may never be heated at a higher power level than **7**.
 - The coating may otherwise become overheated and damaged.
- For frying, do not use a higher power level than 9.



Never use PowerPlus with coated frying pans.

Noise during cooking

Cookware can make noise during cooking. This does not indicate any malfunction, nor does it affect the functioning of the appliance in any way.






Noise depends on the cookware used. If the noise causes considerable disturbance, it can help to change the cookware.









4 Operating the appliance




The individual cooking zones are all operated in the same way. When the appliance is switched off, all the displays are dark (stand-by mode), except for the residual heat indicator **H** should any cooking zone still be hot.

4.1 Switching the appliance on and off

- ▶ Switch the appliance on: Press and hold the  touch button for about 1 second.
 -  flashes in all the power level displays.
 - If no other entry is made, the appliance switches off after about 10 seconds for safety reasons.
- ▶ Switch the appliance off: Press the  touch button.

4.2 Selecting a cooking zone



- ▶ Press the  or  touch button for the required cooking zone.
 - The first time  is pressed, the cooking zone selected switches on at power level .
 - The first time  is pressed, the cooking zone selected switches on at power level .
- ▶ Using the  or  touch button, set the required power level.

 To change the power level, press and hold the  or  touch button.


4.3 Overview of power levels

Power level	Cooking method	Use
L	Keep warm	Sauces, keeps food ready for serving at 65 °C
1	Melting, gentle warming	Butter, chocolate, gelatine, sauces
2		
3	Swelling	Rice
4	Simmering, reducing, stewing	Vegetables, potatoes, sauces, fruit, fish
5		
6	Simmering, braising	Pasta, soup, braised meat
7	Gentle frying	Rösti (hash browns), omelettes, breaded food, sausages
8	Frying, deep frying	Meat, chips
9	Flash frying	Steak
P	Fast heating	Boiling water




4.4 Switching a cooking zone off

- ▶ Press the  touch button for the required cooking zone repeatedly until  illuminates in the corresponding display.
 - If no other entry is made and the other cooking zones are switched off, the appliance switches off automatically after 10 seconds.

Residual heat indicator

After the cooking zone is switched off,  remains illuminated in the display as long as a burn hazard exists.

4.5 Keep warm setting

The keep warm setting  keeps food that has been cooked warm at approximately 65 °C. This is between power levels  and .

4.6 PowerPlus

All the cooking zones are equipped with the PowerPlus booster. When PowerPlus is switched on, the cooking zone selected works at extra high power for 10 minutes. PowerPlus can be used, for instance, to heat a large quantity of water.

Switching PowerPlus on

- ▶ Press the **(P)** touch button for the required cooking zone.
 - **P** illuminates in the display.
 - After 10 minutes it automatically switches back to power level **9**.




Removing the cookware interrupts PowerPlus. PowerPlus is resumed as soon as the cookware is returned to the cooking zone.

Switching PowerPlus off before time

- ▶ Using the **(-)** touch button, set the required power level.

Power management

GK36TI, GK36TIC, GK36TIF

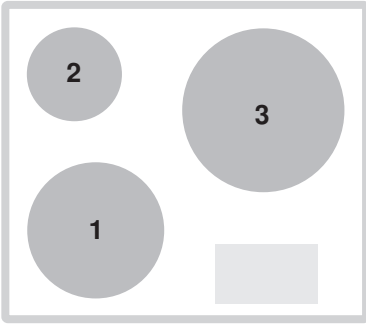

PowerPlus cannot be used with cooking zones **1** and **2** at the same time. If PowerPlus is activated with both cooking zones, then the power output is reduced for the cooking zone that was first selected.


Cooking zone **3** can be operated with PowerPlus independently of cooking zones **1** and **2**.

PowerPlus with cooking zone	Maximum available power level with cooking zone	
	1	2
1	<i>P</i>	<i>6</i>
2	<i>8</i>	<i>P</i>



If the power level is increased above these levels, PowerPlus switches off.

GK46TI, GK46TIC, GK46TIF, GK46TIU

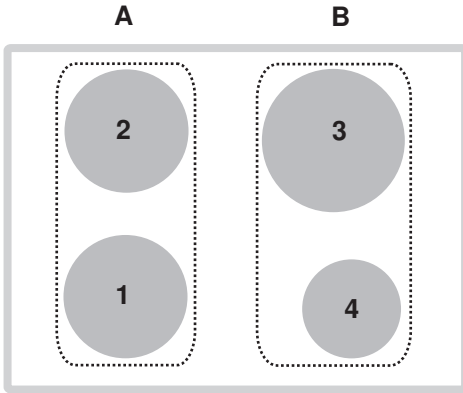

PowerPlus cannot be used with both cooking zones of a group (**A** or **B**) at the same time. If PowerPlus is activated with both cooking zones of a group, then the power output is reduced for the cooking zone that was first selected.

PowerPlus with cooking zone	Group A *	
	1	2
1	<i>P</i>	<i>6</i>
2	<i>6</i>	<i>P</i>

PowerPlus with cooking zone	Group B *	
	3	4
3	<i>P</i>	<i>6</i>
4	<i>6</i>	<i>P</i>

* Maximum available power level with cooking zone



If the power level is increased above these levels, PowerPlus switches off.

4.7 Automatic boost



Do not leave the hob unattended while using the automatic boost. Risk of boiling over, burning on and igniting!

All the cooking zones are equipped with a selectable automatic boost. With this function, a cooking zone works at power level 9 for a certain length of time (see table). Then it automatically goes back to the power level set.



Whenever a cooking zone is switched on, the automatic boost must be activated anew.

Power level	1	2	3	4	5	6	7	8
Boost in mins:secs	0:40	1:15	2:00	3:00	4:15	7:15	2:00	3:15



If during the automatic boost a higher power level is selected, the duration of the boost will change automatically.

Switching the automatic boost on

- Using the **(+)** touch button, set the power level for the required cooking zone to **9**.
- Press the **(+)** touch button again.
 - **A** and **9** illuminate alternately in the display.
- Using the **(-)** touch button, set the required power level at which to continue cooking after the automatic boost.
 - **A** and the power level selected illuminate alternately in the display while the automatic boost is activated.
 - When the automatic boost is over, the heat output is reduced again to the power level selected.

Switching the automatic boost off before time

- Using the **(-)** touch button, set a lower power level.

4.8 Operating time



Do not leave the hob unattended during the operating time. Risk of boiling over, burning on and igniting!

With the operating time function, the cooking zone switches off automatically after a set time (1–99 minutes).

This function cannot be used at the same time with several cooking zones.

Setting the operating time

- Select the required cooking zone.
- Using the **+** or **-** touch button for the operating time/timer, set the required operating time.
 - The first time the **+** touch button is pressed, **01** illuminates in the display.
 - The first time the **-** touch button is pressed, **99** illuminates in the display.
 - The cooking zone indicator lights flash.






To change the operating time, press and hold the **+** or **-** touch button.

- While the indicator lights flash, press the **+** or **-** touch button for the required cooking zone.
 - The operating time is assigned to this cooking zone.
 - The indicator light for the relevant cooking zone illuminates.
 - The power level of the cooking zone is not changed.

Changing the operating time



- Using the **+** or **-** touch button for the operating time/timer, change the operating time.

Switching the operating time off before time

- Simultaneously press the  and  touch buttons for the operating time/timer.
 -  flashes in the display.
 - The cooking zone remains on.

End of the operating time

When the operating time is up,


- the relevant cooking zone switches off
 - an acoustic signal is emitted
 -  and the power level  flash.
- Press any touch button to switch off the acoustic signal and the displays.

4.9 Timer

The timer functions like an egg timer (1–99 minutes). It can only be used if no operating time has been set.

Setting the timer

- ▶ Switch the appliance on.
- ▶ Using the **+** or **-** touch button for the operating time/timer, set the required duration of the timer.
 - The first time the **+** touch button is pressed, **01** illuminates in the display.
 - The first time the **-** touch button is pressed, **99** illuminates in the display.
 - As soon as the indicator lights stop flashing, the timer starts.

 To change the duration of the timer, press and hold the **+** or **-** touch button.

Changing the timer

- ▶ Using the **+** or **-** touch button for the operating time/timer, change the duration of the timer.

Switching the timer off before time

- ▶ Simultaneously press the **+** and **-** touch buttons for the operating time/timer.
 - **00** flashes in the display.



 
4.10 Childproof lock

The childproof lock is to prevent the appliance from being accidentally switched on.




Switching the childproof lock on

- Switch the appliance on.

Ensure all cooking zones are switched off.

- Hold the  and  touch buttons depressed at the same time for about 2 seconds.
 - An acoustic signal is emitted.
 -  illuminates in all the power level displays for 10 seconds.

Operating the appliance with the childproof lock activated




- Switch the appliance on.
- Simultaneously press the  touch button and the  and  touch buttons for any cooking zone or for the operating time/timer.
 - An acoustic signal is emitted.
 - The childproof lock is overridden. The appliance can now be used as normal.

10 minutes after switching off the hob, the childproof lock is automatically activated again.


Switching the childproof lock off






- Switch the appliance on.

Ensure all cooking zones are switched off.

- Hold the  and  touch buttons depressed at the same time for about 2 seconds.
 - A double acoustic signal is emitted.
 -  flashes in all the power level displays for 10 seconds.


4.11 Pause cooking

With this function, all cooking zones that are switched on can be temporarily changed to power level  for up to 10 minutes. The appliance can continue to be operated after pause cooking using the previous settings.

- ▶ Press the  touch button.
 - The indicator light for the  touch button flashes.
 - The power levels of the cooking zones that are switched on change to .
 - The operating time is paused.
 - The timer continues to run.
 - Except for  and , all touch buttons are inactive.



If the pause cooking function is not turned off within 10 minutes, the appliance switches off completely.

- ▶ To resume cooking, press the  touch button again.
 - The cooking zones are operated using the previous settings.

4.12 Acoustic signal


An acoustic signal is emitted as confirmation whenever a touch button is pressed (factory setting). This acoustic signal can be switched off.




When the appliance is switched off, the last acoustic signal setting is retained.

The acoustic signal cannot be switched on or off if the childproof lock is activated.

Switching the acoustic signal on

- Switch the appliance on.
- Hold the  touch button depressed for about 3 seconds.
 - An acoustic signal is emitted.

Switching the acoustic signal off

- Switch the appliance on.
- Hold the  touch button depressed for about 3 seconds.
 - A double acoustic signal is emitted.

5 Care and maintenance



Clean the appliance when it has cooled down, as otherwise it could be a burn hazard.

5.1 Cleaning

Always clean the hob after use. This prevents food residues from burning on. Dried-on or burned-on food residue is harder to clean off.

Use of improper cleaning techniques can result in damage to the markings or surface.



Avoid cleaning the surface of the glass ceramic hob with abrasive cleaning agents, scouring pads, wire wool, etc. which can damage the surface.

- ▶ Use only a soft cloth or sponge with water and a suitable detergent for cleaning everyday soiling. Always follow the detergent manufacturer's instructions for use. Using a detergent with a protective additive is recommended.
- ▶ Remove stubborn soiling, e.g. boiled-over milk, while still warm using a glass ceramic hob scraper.
Always follow the scraper manufacturer's instructions for use.
- ▶ Foods with a high sugar content, e.g. marmalade, that boil over should be removed while still hot using a glass ceramic hob scraper. The surface of the glass ceramic hob could otherwise become damaged.
- ▶ Remove melted plastic while still warm using a glass ceramic hob scraper. The surface of the glass ceramic hob could otherwise become damaged.
- ▶ Remove limescale stains when cool with a small amount of limescale remover (e.g. vinegar, lemon juice, descaler). Then wipe clean with a damp cloth.

6 Troubleshooting and error messages

6.1 What to do if ...

... the appliance is not working and the displays are not illuminated

Possible cause	Solution
<ul style="list-style-type: none">• The fuse or circuit breaker for electrical installations in the home is defective.	<ul style="list-style-type: none">➤ Change the fuse.➤ Reset the circuit breaker.
<ul style="list-style-type: none">• The fuse or circuit breaker keeps blowing.	<ul style="list-style-type: none">➤ Call Customer Services.
<ul style="list-style-type: none">• An interruption in the power supply.	<ul style="list-style-type: none">➤ Check the power supply.

... illuminates in the display

Possible cause	Solution
<ul style="list-style-type: none">• Cookware is not suitable for use with induction hobs.	<ul style="list-style-type: none">➤ Use suitable magnetic cookware. See COOKWARE section.
<ul style="list-style-type: none">• Cookware is too small for the cooking zone selected.	<ul style="list-style-type: none">➤ Ensure cookware corresponds to the size of the cooking zone.

... – illuminates in the displays

Possible cause	Solution
<ul style="list-style-type: none">• The childproof lock is activated.	<ul style="list-style-type: none">➤ For operating the appliance with the childproof lock activated, see the section on OPERATING THE APPLIANCE.➤ Switch the childproof lock off.

... a continuous acoustic signal is emitted, **E** flashes and the appliance switches off

Possible cause	Solution
<ul style="list-style-type: none"> • A touch button was touched for longer than 10 seconds. 	<ul style="list-style-type: none"> ▶ Remove object or food that has boiled over. ▶ The appliance can be used again as normal.
<ul style="list-style-type: none"> • Object (e.g. pan, dish) on the control panel. 	
<ul style="list-style-type: none"> • Food boiled over onto the control panel. 	

... **H** and **O** flash alternately in the display

Possible cause	Solution
<ul style="list-style-type: none"> • The automatic safety shut-off was triggered. 	<ul style="list-style-type: none"> ▶ Switch the cooking zone back on again if required.



If a cooking zone has been running for longer without any settings being changed, the appliance switches the cooking zone off automatically. It is switched off irrespective of the power level set.

Power level	L	1	2	3	4	5	6	7	8	9
Safety shut-off after hrs:mins	2:00	10:00	10:00	5:00	4:00	3:00	3:00	2:00	2:00	1:00

... **H** flashes in the display

Possible cause	Solution
<ul style="list-style-type: none"> The excess temperature protection of a cooking zone was triggered. 	<ul style="list-style-type: none"> ➤ Allow the cooking zone to cool down. ➤ Resume cooking on a different cooking zone. ➤ Check the cookware.

... **U0** flashes in the display

Possible cause	Solution
<ul style="list-style-type: none"> An interruption in the power supply. 	<ul style="list-style-type: none"> ➤ Press any touch button to cancel the error message. ➤ The appliance can be used again as normal.

... **Er** or **E** and a number illuminate in the display

Possible cause	Solution
<ul style="list-style-type: none"> Internal error occurred. 	<ul style="list-style-type: none"> ➤ Note down the error number. ➤ Note down the serial number (FN) of the appliance. See the identification plate for this. ➤ Call Customer Services.

7 Index

- A**
Acoustic signal 29
Appliance
 Switching off 18, 36
 Switching on 18, 36
Appliance overview 12
Automatic boost 23
- C**
Care 30
Childproof lock 27
Cleaning 30
Cooking zone 18, 36
Cookware 16
- D**
Disclaimer 8
Displays 13, 14
Disposal
 Appliance disposal 10
 Disconnection 10
 Packaging 10
- E**
Energy-efficient cooking 16
Error messages 31
- H**
How induction hobs function 15
- I**
Identification plate 11, 35
Instructions for use 8
- K**
Keep warm setting 19
- L**
«L» 19
- M**
Maintenance 30
Malfunctions 32
Model no. 2
- N**
Noise during cooking 17
- O**
Operating elements 13, 14
Operating time 24
- P**
«P» 20
Pan detection 15
Pause cooking 28
Power levels
 «L» 19
 «P» 20
 Overview 19
Power management 21, 22
PowerPlus 20
- Q**
Quick instructions 36
- R**
Repair service 35
Residual heat indicator 18, 19
- S**
Safety precautions 4
 Appliance-specific 6
 General 5
Safety shut-off
 Overview 32
Serial number (FN) 11, 35
Symbols 4
- T**
Timer 26
Touch buttons 13, 14
Trouble-shooting 31
Type 2
- U**
Operating the appliance 18
Using for the first time 11
- V**
Validity 2

8 Repair service



The TROUBLE-SHOOTING AND ERROR MESSAGES section will help you to carry out small repairs yourself, saving you the time and trouble of calling out a service technician and the cost that goes along with it.

Whether you contact us about a malfunction or an order, please always state the serial number (FN) and the model type of your appliance. Enter these details below and also on the service sticker which comes with the appliance. Stick it in a conspicuous place or in your telephone or address book.

FN

Appliance

You will also find the same details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance.





Quick instructions

Please first read the safety precautions in the operating instructions!

To switch appliance on

- Hold the  touch button depressed for about 1 second.



To select cooking zone

- Press the  or  touch button for the required cooking zone.
- Using the  or  touch button, set the required power level.

Or

- Press  to heat a large amount of water quickly.

To switch cooking zone off

- Press the  touch button for the required cooking zone repeatedly until  illuminates in the corresponding display.

To switch appliance off

- Press the  touch button.

V-ZUG Ltd

Industriestrasse 66, CH-6301 Zug
vzug@vzug.ch, www.vzug.com



J969.352-1