 


# KAMBROOK

THE SMARTER CHOICE

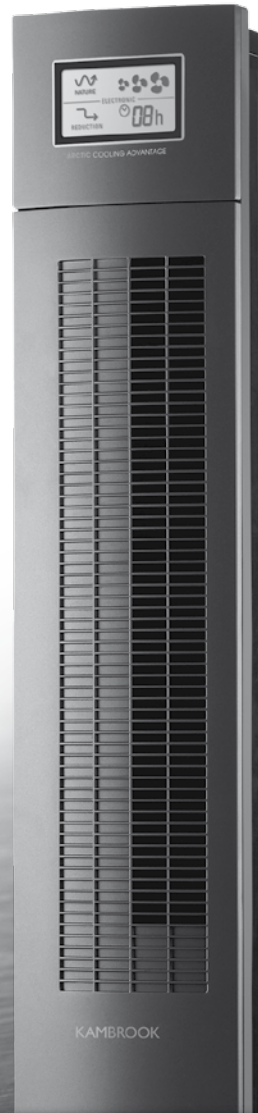

**Arctic**  
**Remote Controlled**  
**Tower Fan**

KFA835

**Instruction Booklet**

# Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on our website at [www.kambrook.com.au](http://www.kambrook.com.au)

# Contents

Kambrook Recommends Safety First	p4
Your Kambrook Arctic Remote Controlled Tower Fan	p6
Using Your Kambrook Arctic Remote Controlled Tower Fan	p7
Care and Maintenance	p10
Warranty	p12

# IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

## Important Safeguards For Your Kambrook Arctic Remote Controlled Tower Fan

- Carefully read all instructions before operating the Kambrook Arctic Remote Controlled Tower Fan for the first time and save for future reference.
- To protect against electric shock, do not immerse the fan, cord or plug in water or any other liquid
- This fan is intended for household use only and not for commercial or industrial use.
- Disconnect the power plug before dismantling, assembling or before cleaning.
- Avoid touching mobile parts of the fan.
- Ensure the fan is on a dry and even surface.
- Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, in particular while the fan is switched on.
- The fan must not be used if the guards are not fastened correctly, according to these instructions.
- Do not operate in the presence of explosives and/or flammable fumes or liquids.
- Do not unplug the fan by pulling on the cord.
- Never carry the fan by the cord or yank to disconnect from an outlet; instead, grasp the cord and pull to disconnect. Do not pull the cord around sharp edges or corners.

## Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or housing in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

# Your Kambrook Arctic Remote Controlled Tower Fan

1. Tower fan body
2. Choice of 3 speed settings, nature and reduction mode
3. 60° oscillation to disperse the air throughout the room
4. Eight hour auto-off timer
5. Convenient carry handle for easy portability
6. LCD screen
7. Small footprint
8. Remote control

## Parts List

- Tower body
- 2 piece base
- Remote control

## Not Shown

- Fastening screws attached in the base of the tower



# Using Your Kambrook Arctic Remote Controlled Tower Fan

## Before First Use

Remove any promotional material from the fan.




**IMPORTANT:** When unpacking the fan, check to see you have received all the items listed in the Parts List, before discarding the packaging.

## Assembling Your Arctic Remote Controlled Tower Fan


### Base Assembly

1. Turn the Tower body upside down, and remove the fastening screws from the bottom of the tower.
2. Thread the power cord through the half base (a) square opening. Position the half base (a) onto the support posts, located on the bottom of the tower body.

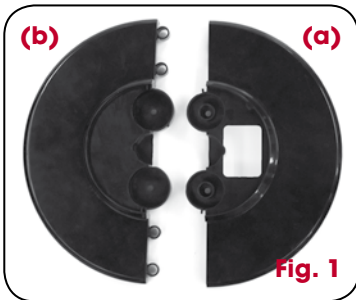 

**Fig. 1**

3. Pull and place the power cord across the already positioned half base (a), positioning it into the cord track. Then align the other half base (b) over the support posts, and slightly over the already positioned half base (a). Firmly push down on the half base (b) until the bases are locked in place and flush. (Fig. 2)

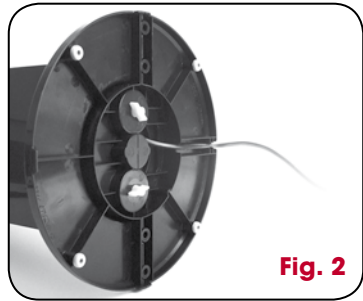 

**Fig. 2**

4. Secure the joint base to the Tower Body with the fastening screws.
5. Check the power cord is still located in the cord track.
6. Turn the tower over to the upright position, it is now ready for use.

# Using Your Kambrook Arctic Remote Controlled Tower Fan continued

## To Operate the Arctic Remote Controlled Tower Fan

Plug the cord into a 230V or 240V power point and switch on.

**NOTE:** To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your fan, when it is in use.

To turn the fan on simply press the POWER button.

The Arctic Tower Fan has three fan speed settings:  (LOW),  (MED) and  (HIGH).

Press the Fan Speed button once for LOW speed, a second time for MED and a third time for HIGH. The fan speed selected will be displayed on the LCD screen.

To turn the fan off, simply press the POWER button.

Your Arctic Tower Fan also features a NATURE and REDUCTION setting.



## Setting the Oscillation

The oscillation function works in all air flow settings.

Press down the Swing button to activate. The fan will begin to oscillate from side to side.

Press the Swing button again to stop the fan from oscillating.

## Setting the Timer

The Arctic Tower Fan incorporates an eight hour, count down timer, which allows you to set the fan to turn off after 1, 2, 4 or 8 hours.

Press the Timer button once to activate the timer setting. The timer will then be set to turn off in 1 hour and 1h will appear on the LCD screen.

Press the Timer button again, to have the fan switch off after 2 hours, and 2h will appear on the LCD screen.

Similarly, pressing the Timer button a 3rd or 4th time will set the fan to switch off after 4 or 8 hours, and the relevant setting will appear on the LCD screen.



## Using the Nature and Reduction Settings

Both the NATURE and REDUCTION settings can be used on any fan speed. The LCD screen will indicate what mode the fan has been set in.

The NATURE mode simulates the natural rise and fall of the wind over time.



Once a fan speed setting is selected, press the MODE button once to activate the NATURE setting. The fan will now alternate between the pre-selected setting, all lower settings and OFF.

To switch the NATURE mode off, press the MODE button twice, until the indicator light disappears.

The REDUCTION mode allows you to decrease the fan speed over time.

Once a fan speed setting is selected, press the MODE button twice to activate the REDUCTION setting. After 30 minutes, the selected setting will drop to the next lowest setting. For example if the fan speed is set at

 
MED, after 30 mins it will drop down to LOW, and remain on LOW until the unit is turned off.

To switch the REDUCTION mode off, press the MODE button once. The fan will now be in normal operation.

## Using the Remote Control

The remote control buttons operate in the same way as those on the fan control panel.

Your remote control takes 2xAAA batteries, and can be conveniently stored in the compartment on the rear housing of the unit.

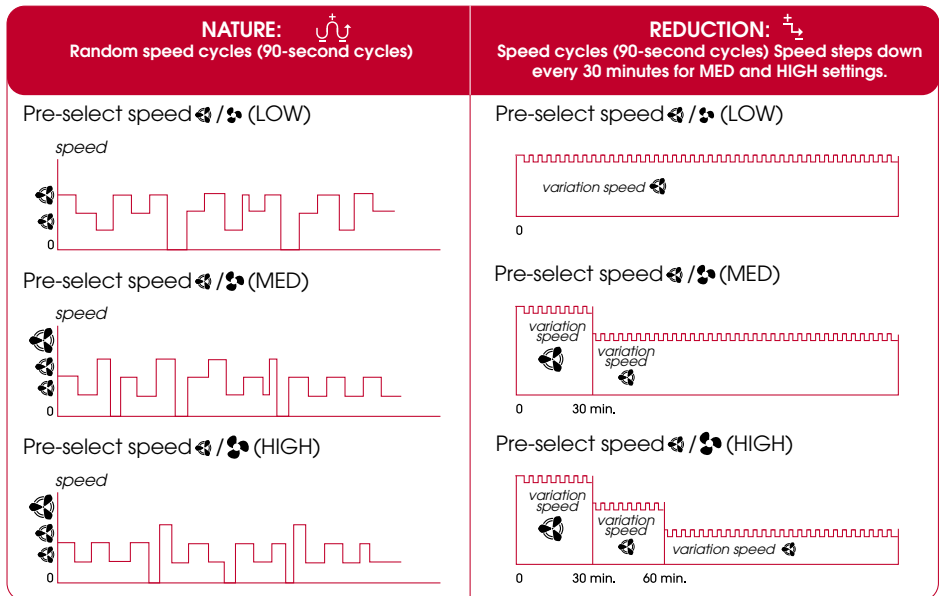

## Care and Maintenance

Always switch the Arctic Remote Controlled Tower Fan off, prior to cleaning the housing.

To clean the outside of the fan, wipe the exterior with a soft, damp cloth. Never use an abrasive cleaner.

When not in use, store the fan (preferably in its original box) in a cool, clean and dry location.



## Kambrook 12 Month Replacement Warranty

In Australia, this Kambrook Replacement Warranty does not affect the mandatory statutory rights implied under the Trade Practices Act 1974 and other similar State and Territory legislation relating to the appliance. It applies in addition to the conditions and warranties implied by that legislation.

In New Zealand, this Kambrook Replacement Warranty does not affect your mandatory statutory rights implied under the Consumer Guarantees Act 1993 in relation to the appliance. It applies in addition to the conditions and guarantees implied by that legislation.

This Kambrook Replacement Warranty is valid only in the country of purchase, but other statutory warranties may still apply.

This Warranty card and the purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook Replacement Warranty. Please note that under any applicable statutory warranty you are not required to produce these documents, but may be required to provide a proof of purchase.

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months domestic use from the date of purchase (or 3 months commercial use).

The Kambrook Replacement Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of, misuse or abuse, negligent handling or if the product has been used other than in accordance with the instructions. The Kambrook Replacement Warranty excludes breakables such as glass and ceramic items, consumable items and normal wear and tear.

This Kambrook Replacement Warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. Subject to your statutory rights, in the event of Kambrook choosing to replace the appliance, the Kambrook Replacement Warranty will expire at the original date, i.e. 12 months from the original date of purchase.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on the website at [www.kambrook.com.au](http://www.kambrook.com.au)

### Kambrook 12 Month Replacement Warranty

Your Purchase Record (Please Complete)

Attach a copy of the purchase receipt here.

Date Of Purchase \_\_\_\_\_

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Purchased From \_\_\_\_\_

(Please don't return purchase record until you are making a claim)

### Register your warranty at [www.kambrook.com.au/service.asp](http://www.kambrook.com.au/service.asp)

Kambrook - Australia  
Building 2, Port Air Industrial Estate  
1A Hale Street  
Botany NSW 2019  
Australia  
Customer Service Line 1300 139 798  
Customer Service Fax 1800 621 337

Kambrook - New Zealand  
Private Bag 94411  
Botany, Manukau  
Auckland 2141  
New Zealand  
Customer Service Line/Spare Parts  
0800 273 845 or 09 271 3980  
Customer Service Fax 0800 288 513