

# Quantum Evo Stainless

1.7 litre cordless kettle with hinged locking lid

Instruction Booklet KE6300

Please read these instructions carefully and retain for future reference.



# Contents

Sunbeam's Safety Precautions	1
eatures of your Quantum Evo Stainless	2
Jsing your Quantum Evo Stainless	4
Sunbeam's 3-Way Safety System	5
Care and Cleaning	6

# Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید که احتیاطهای بالا حتماً درك بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions


# SAFETY PRECAUTIONS FOR YOUR SUNBEAM KETTLE.


- Boiling water will scald. Do not leave a boiling or hot kettle near or where children may touch it.
- Boiling water may be ejected, if overfilled.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.
  - Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:
- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.

- Do not move kettle while switched on.
- Always turn the power off and unplug the cord while the kettle is NOT in use.
- Do not operate the kettle without water.
- Your Quantum Evo Stainless kettle must only be used with the power base supplied.
- Always operate the kettle on a flat, level surface.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

# Features of your Quantum Evo Stainless

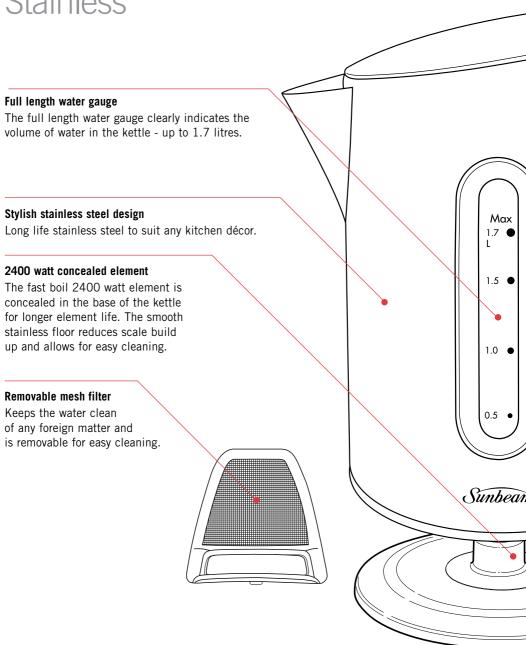

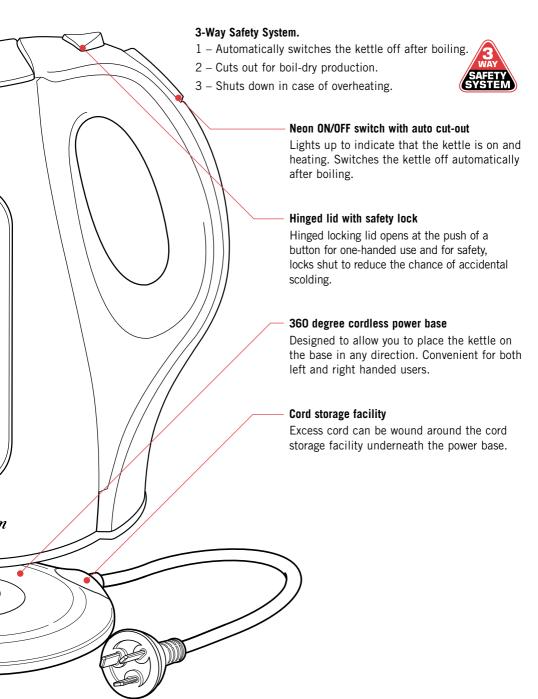

# Using your Quantum Evo Stainless

#### Before using your kettle.

It is recommended that you clean your kettle before use by filling the kettle with water, up to the maximum level indicator, boil and discard.

### Using your kettle.

- 1.To fill the kettle, remove it from the power base and lift the lid, by pressing the button on the handle. Alternatively, the kettle may be filled through the pouring spout.
- 2. Fill the kettle with the desired amount of water. Always fill the kettle between the minimum and maximum marks. Too little water will result in the kettle switching off before the water has boiled.

**NOTE:** Do not fill the kettle over the maximum level, as water may spill out of the spout when boiling.

- 3. Push the lid closed firmly until it locks into position.
- 4. Place the kettle on the power base and connect the plug into a 230/240 Volt AC power outlet. Turn the power ON.
- 5. Press the ON/OFF button downwards at the top of the handgrip. The power indicator light will illuminate to indicate the kettle is heating. The kettle will switch off automatically once the water has boiled.

**NOTE:** Ensure that the ON/OFF switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the ON/OFF switch is constrained or if the lid is left open. Do not remove the kettle from the power base while in use.

6. Lift the kettle from the power base and pour the water.

**NOTE:** Use caution when pouring the water from your kettle, as boiling water will scald.


7.The kettle may be stored on the power base while not in use. The kettle will not re-boil until the ON/OFF switch is pressed downward.

**NOTE:** Ensure the power is turned off at the power outlet when the kettle is not in use.

Should you accidentally allow the kettle to operate without water, boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

## **Cord Storage Facility.**

Excess cord can be stored by winding the cord around the storage facility underneath the power base.

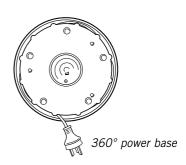

# Sunbeam's 3-Way Safety System

Safety is a major consideration in the design of a Sunbeam kettle. This is why we have developed our 3-Way Safety System, which ensures that your kettle will:

### 1. Automatically switch off after boiling.

For convenience, safety and energy efficiency, your Sunbeam kettle will automatically switch off after boiling.

### 2. Cut-out for boil-dry protection.

If the kettle is operated without water, it will automatically cut-out, preventing any damage to the element.

If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

### 3. Shut-down in case of overheating.

In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to a Sunbeam Service Centre or Appointed Service Agent.

# Care and Cleaning

Always disconnect the kettle from the power outlet before cleaning.

Never immerse the kettle switch area, cord or power base in water, or allow moisture to come into contact with these parts.

### Removal of mineral deposits.

Mineral deposits in tap water may cause the interior of the water gauge to discolour. To remove this build-up, use Sunbeam Liquid Descaler, a simple to use, non-toxic cleaner available from Sunbeam Appointed Service Agents.

## Alternatively:

- Fill the kettle with 3 cups of white vinegar and the remainder with water and allow to stand overnight. DO NOT BOIL.
- 2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

#### To clean the stainless exterior

The stainless steel surface may be wiped over with a damp cloth and polished with a soft dry cloth.

**CAUTION:** Do not use chemicals, steelwool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the stainless steel surface.

#### To clean the mesh filter

Press the button on the handle to open the hinged lid. Grasp the top of the mesh filter and pull upwards to remove. Wash in warm soapy water and dry thoroughly before replacing in the kettle.

### Cleaning the concealed heating element

This kettle features a non-corrosive stainless steel heating element. Over time, scale may build up on the concealed element inside the kettle, causing discolouration that may have the appearance of rust. Be assured this is not rust. If this occurs clean with a green Scotchbrite® scourer or similar and a suitable abrasive cleaning cream. Rinse and clean thoroughly with tap water before using your kettle again.



# Quantum Toasters

Instruction Booklet

This book covers the use and care of the following Sunbeam Toasters:

TA3220 Quantum 2 – 2 Slice Chrome cool-touch toaster

TA3220B Quantum 2 – 2 Slice brushed stainless cool-touch toaster

TA3420 Quantum 4 – 4 Slice Chrome cool-touch toaster

TA3420B Quantum 4 – 4 Slice brushed stainless cool-touch toaster

Please read these instructions carefully and retain for future reference.



# Contents

Sunbeam's Safety Precautions	1
Features of your Quantum Toaster	2
Using your Quantum Toaster	4
Toaster functions	5
Care and cleaning	6

# Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید که احتیاطهای بالا حتماً درك بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

# SAFETY PRECAUTIONS FOR YOUR SUNBEAM TOASTER.

- Do not place any objects such as toast, bread or similar on top of your toaster when in use.
- Operate the toaster on a flat level surface.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Do not leave your toaster unattended when in use.

- Clean crumb tray regularly.
- Do not allow crumbs to accumulate in the crumb tray.
- Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.
- WARNING: Never attempt to extract jammed toast, crumpets or muffins with a knife or any metal object, as contact with the live element may cause electrocution.

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.

- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

# Features of your Quantum Toaster

#### Extra wide bread slots

Enables you to toast a large variety of breads both thick and thin, bagels, crumpets and muffins.

## Self-centring bread slots

Whether you are toasting thick or thin bread, your bread will always be held in the centre of the slot to ensure even toasting.

### Cool touch exterior


Remains cool to touch preventing burns and plastic wrappers clinging to the side of your toaster.


### Removable crumb tray

Pulls out from underneath your toaster for easy removal of crumbs.

### **Cord storage**

The cord can be wrapped underneath for safe and convenient storage.

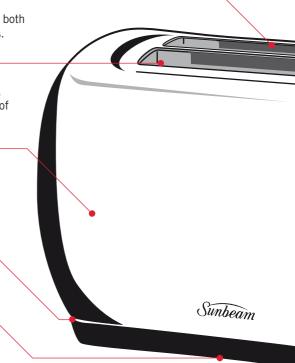

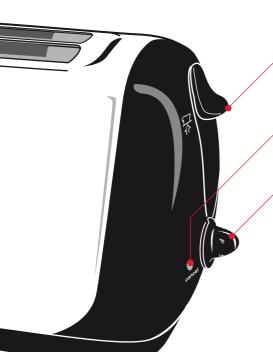

# High-lift and toasting lever

Raises the toast above the starting position so you can remove the toast from the toaster without burning your fingers. Ideal for crumpets and muffins.

### Cancel button

Immediately interrupts any toasting cycle and pops the toast up.

# **Electronic browning control**

Variable toast settings from 1 - 6, toasts the bread to your desired colour everytime.



Quantum 4 Slice Toaster - TA3420 & TA3420B

# Using your Quantum toaster

Plug the toaster into a 230-240 volt AC power outlet and switch the power on.

### **Toasting Bread**

- 1. Position the bread into the bread slot.
- 2. Select the desired colour setting using the Electronic Browning Control.

**Important:** Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.

3. Push the Toasting Lever down to commence the toasting cycle.

- 4. When the desired browning is achieved, the toaster will automatically turn off and pop the toast up. If you need to remove the toast before the cycle is complete, then press the Cancel button. The Cancel button will immediately interrupt the toasting cycle and pop the toast up.
- 5. To remove small pieces of toast or bagels, use the High-lift Lever to lift the toast above the starting position. This will prevent burning your fingers as you remove the toast.

# Toaster functions

#### Cancel button

The Cancel button immediately stops any of the toasting cycles. As a consequence of this, the toast will pop up.

### High-lift lever

When toasting small pieces of bread, crumpets or muffins we recommend using the High-lift Lever to prevent you from burning your fingers.

### Toasting frozen bread

Turn the Electronic Browning control dial to the Frozen setting. This function will toast your frozen bread. The colour of your toast on the Frozen setting will brown to setting 3 or 4.

#### Reheat feature

Turn the Electronic Browning control dial to the 'MIN' setting. This feature allows toast to be reheated once already toasted.

### Toasting one or two pieces of bread in your Quantum 4 Slice Toaster

Position the bread in the middle of the bread slot. When toasting two pieces, position one piece in the centre of each bread slot. If your bread jams in the toaster, switch power off, remove the plug from the power outlet and ease the bread out of the toaster

### Toasting in your toaster

If your bread jams in the toaster, switch power off, remove the plug from the power outlet and ease the bread out of the toaster. Ensure muffins or bagels are cut into even halves and fit freely into the bread slot. Do not force them into the toaster.

WARNING: Never attempt to extract jammed toast, muffins, bagels or crumpets with a knife or any other metal object, as contact with the live element may cause electrocution.

# Care and cleaning

Always turn the power OFF and remove the plug from the power outlet after use and before cleaning your toaster.

#### To clean the exterior.

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.

Do not use metal scourers or abrasives as this may scratch the exterior surface.

### Removable Crumb Tray.

To remove the crumbs, simply slide out the tray, empty and place it back in the toaster. **Important:** Clean the crumb tray regularly. Do not allow crumbs to accumulate, as they may cause a potential fire hazard.

#### To clean the toaster interior.

Clean inside the toaster regularly. To do this, unplug the appliance, turn it upside down over the sink and gently shake all the crumbs out.



# 12 Month Replacement Guarantee

In the unlikely event that this appliance develops any malfunction within 12 months of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you free of charge.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand. Alternatively, you can send a written claim to Sunbeam at the address listed below. On receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the appliance is defective, advise you on how to obtain a replacement or refund.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling and normal wear and tear.

Similarly your 12 Month Replacement Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase.

The benefits given to you by this guarantee are in addition to your other rights and remedies under any laws which relate to the appliance.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law and under the New Zealand Consumer Guarantees Act.

In Australia you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your appliance require repair or service <u>after</u> the guarantee period, contact your nearest Sunbeam service centre.

For a complete list of Sunbeam's authorised service centres visit our website or call:

#### Australia

www.sunbeam.com.au

1300 881 861

Units 5 & 6, 13 Lord Street Botany NSW 2019 Australia

#### **New Zealand**

www.sunbeam.co.nz

0800 786 232

26 Vestey Drive, Mt Wellington Auckland, New Zealand



# Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

### In Australia

Visit www.sunbeam.com.au Or call 1300 881 861

#### In New Zealand

Visit www.sunbeam.co.nz Or call 0800 786 232



Sunbeam is a registered trademark.

'Quantum' is a trademark of Sunbeam Corporation.

Made in China.

Due to minor changes in design or otherwise,

the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2006.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street Botany NSW 2019 Australia

Unit 3, Building D

26 Vestey Drive

Mt Wellington Auckland

New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.