

# Vacuum Cleaner

## user manual

- \* Before operating this unit, please read the instructions carefully.
- \* For indoor use only.

ENGLISH

imagine the possibilities

Thank you for purchasing a Samsung product.  
To receive a more complete service,  
please register your product at  
[www.samsung.com/register](http://www.samsung.com/register)

**SAMSUNG**

# safety information

---

## SAFETY INFORMATION

---



- Before operating the appliance, please read this manual thoroughly and retain it for your reference.





- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.







- This vacuum cleaner is designed for household use only. Do not use this vacuum cleaner to clean building waste or debris. Do not use this vacuum cleaner with any of the filters removed as this could cause damage to the internal components and void your warranty.

## CAUTION/WARNING SYMBOLS USED

	Indicates that a danger of death or serious injury exists.
	Indicates that a risk of personal injury or material damage exists.

## OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must NOT touch.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.

# safety information

---

## IMPORTANT SAFETY INSTRUCTIONS

---

When using an electrical appliance, basic precautions should be observed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING YOUR STICK VACUUM CLEANER.**

Unplug from outlet when not in use and before conducting maintenance.

### **WARNING : to reduce the risk of fire, electric shock, or injury:**

#### **GENERAL**

- Use only as described in this manual.
- Do not operate the STICK vacuum cleaner or charger if it has been damaged in any way.
- If the cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped in water, return it to a customer care center.
- Do not handle the charger or STICK vacuum cleaner with wet hands.
- Use only on dry, indoor surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

#### **BATTERY CHARGER**

- Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- Do not use outdoors or on wet surfaces.
- Unplug the charger from the outlet when not in use and before servicing.
- Use only the charger supplied by the manufacturer to recharge.
- Do not use with a damaged cord or plug.
- Do not pull or carry by the cord, use the cord as a handle, close the door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not mutilate or incinerate batteries as they will explode at high temperatures.
- Do not attempt to open the charger. Repairs should only be carried out by a qualified customer care centre.
- Do not expose the charger to high temperatures or allow moisture or humidity of any kind to come into contact with the charger.

#### **STICK VACUUM CLEANER**

- Do not pick up hard or sharp objects such as glass, nails, screws, coins, and etc.
- Do not use without a filter in place. When servicing the unit, never put fingers or other objects into the fan chamber in case the unit accidentally turns on.
- Do not put any objects into openings. Do not use with any openings blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Do not pick up toxic materials (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoke, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids such as gasoline, nor use on areas where they may be present.
- Do not use STICK vacuum cleaner in an enclosed space filled with vapours given off by oil based paint, paint thinner, moth proofing substances, flammable dust, or other explosive or toxic vapours.
- Leaks from battery cells can occur under extreme usage or temperature conditions. If the liquid gets on skin, wash quickly with water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.

# contents

---

## **ASSEMBLING THE CLEANER**

05

- 05 Assembling the cleaner
- 07 Assembling the handle and the main body
- 07 Assembling the main body and the power brush
- 07 Assembling the main body and the handy cleaner
- 08 Charging
- 09 About the battery

## **OPERATING THE CLEANER**

10

- 10 Using the stick cleaner
- 10 Using the power brush
- 10 Using the handy cleaner
- 11 Using the crevice / dusting
- 11 Emptying the dust bin

## **MAINTAIN TOOLS AND FILTER**

13

- 13 Cleaning the filter
- 14 Countermeasure to remove anything clogging the cleaner

 
## **TROUBLESHOOTING**

16


# assembling the cleaner

## ASSEMBLING THE CLEANER


Front view

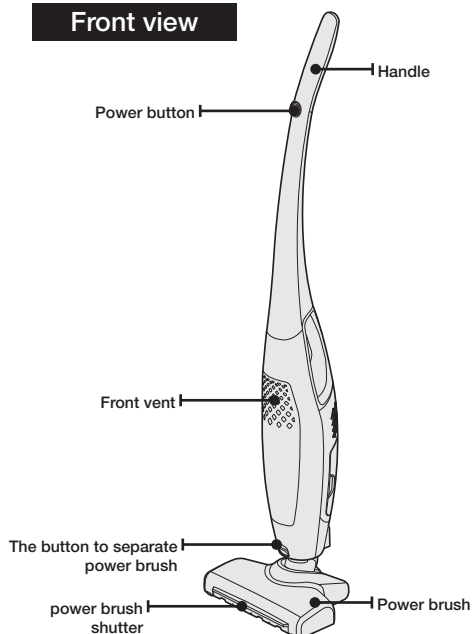


Rear view

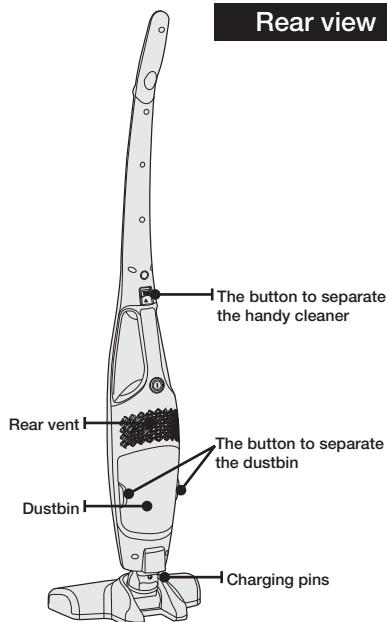 

Charger

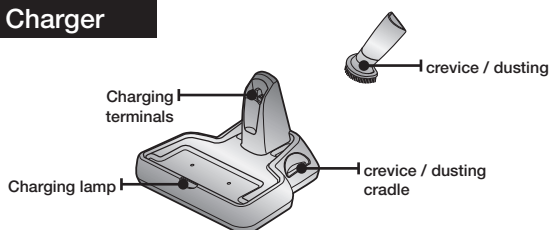 


Handy cleaner

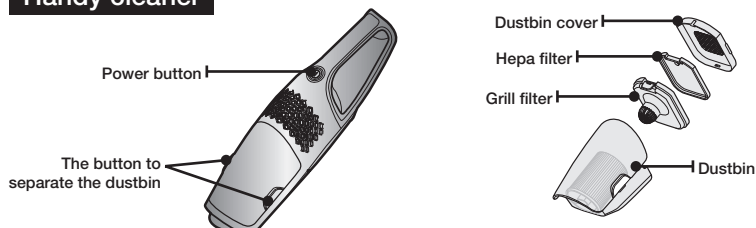 


# assembling the cleaner

 
**Check the contents of the package.**

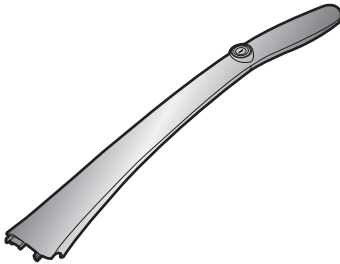


Handle

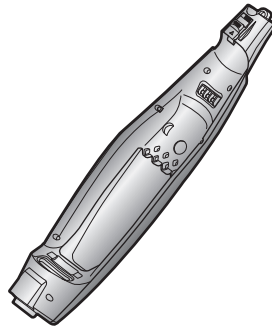 


Main body

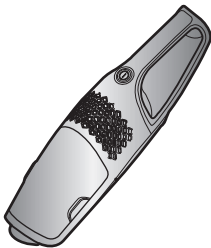 


Handy cleaner

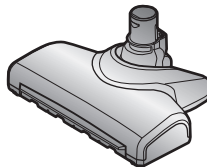 

Power brush

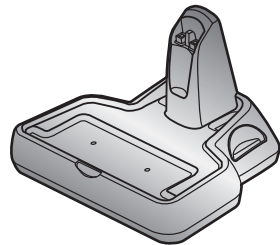 

Charger

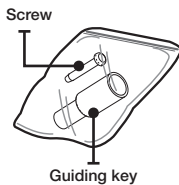 

Sub items to assemble the  
handle and the main body




User manual



Crevice / Dusting


## ASSEMBLING THE HANDLE AND THE MAIN BODY

 Insert the guiding parts of the handle as far as possible into the hole of the main body, insert the guide key into the holes of the handle and then fasten the screw with the (+) screw driver.

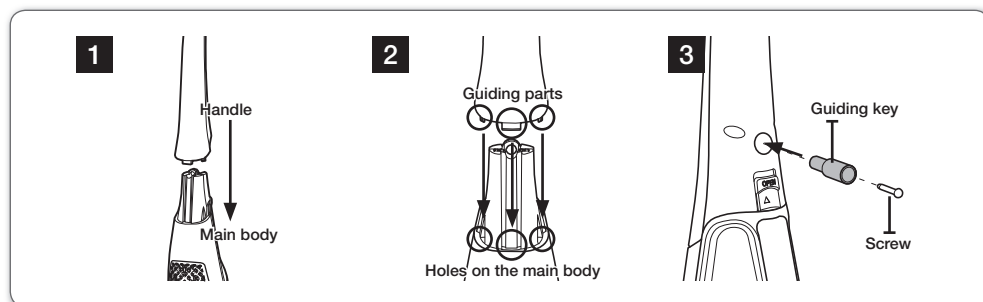


## ASSEMBLING THE MAIN BODY AND THE POWER BRUSH

 Insert the connector of the power brush into the hole of the main body until it clicks into place.

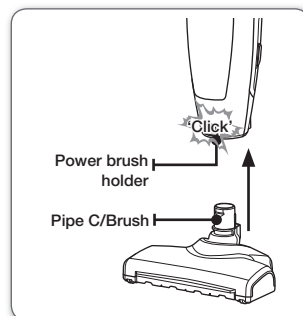

## ASSEMBLING THE MAIN BODY AND THE HANDY CLEANER

 Insert the air inlet of the handy cleaner into the air inlet of the main body and then push the handy cleaner into the main body until it clicks into place.

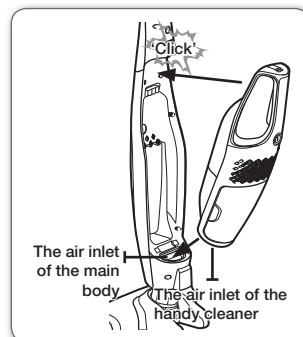


# assembling the cleaner

---

## CHARGING

---

 1. Install the charger on a flat surface and then plug the power cable.

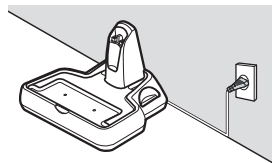


2. Turn the power buttons of the main body and the handy cleaner off.
  - The battery does not charge when the power button is on.




3. Connect the handy cleaner to the main body. (When the main body and the handy cleaner are not assembled, the stick cleaner does not work.)



 4. Install the cleaner with the charger aligning the charge pins of the cleaner with the charge terminals of the charger.
  - The charging lamp is turned on and blink regularly.

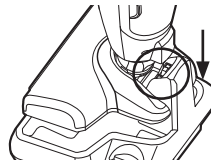

 5. While charging, the charge lamp is turned on. If the cleaner is separated, the lamp is turned off.
  - Even if charging is complete, the lamp does not turn off or change to brighter blue color. This is not a problem with the product.
  - Make sure to turn both power buttons 'Off' and then charge the battery.

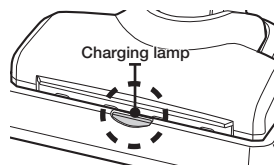






## NOTE

- Charge the product in the following cases.
  - When using the product for the first time after purchasing it or after not using it for a long period.
  - When the battery level is low and the suction power is weak.
- When you charge the cleaner after purchasing or using it, charge the product for approximately 4 hours before using it.
- To charge the battery fully when the battery is discharged takes approximately 4 hours.
- If you separate the cleaner from the charger, the battery is naturally discharged.
  - It is recommended that you keep the cleaner connected to the charger. (However, if you are going on a business trip or holiday, disconnect the power cord of the charger from the wall outlet.)

## ABOUT THE BATTERY

 - **The powerful Li-Ion battery** has been used.
- **The warranty for the battery is 6 months from the time of purchase.**
- To purchase a new battery, please contact the service center.
- Since this battery is only for this cleaner, do not use it for other appliances or purposes.
- Do not disassemble or modify the product.
- Charge the product in a well-ventilated location.
- Do not expose the battery to heat or fire.
- Do not connect metal objects to the (+) or (-) terminal.
- Keep the product indoors (0°C~40°C).
- When the battery is not working correctly, do not disassemble it. Contact your nearest Service Center.
- If the battery charge and usage time have decreased after the battery has been used a few times, please replace the battery by contacting the Service center as the battery life may have reached its end.

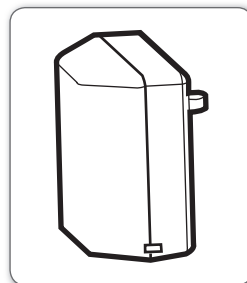


# operating the cleaner

## USING THE STICK CLEANER

 
Using the stick cleaner allows you to clean the floor without bending over.

### Stick Cleaner On / Off

- When the power button is pressed, the operation alternates between  ON / OFF.



- Only when the handy cleaner is assembled, does the stick cleaner work. (For assembling the handy cleaner: See page 7).
- When you use the stick cleaner, turn the handy cleaner power off.

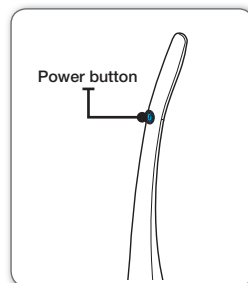


### Countermeasure when the stick cleaner is not turned off.

- Check if the handy cleaner is on.  
You can only turn the stick cleaner on or off when the handy cleaner power is turned off.


## USING THE POWER BRUSH

 - Since you can change the direction of the power brush by moving the handle of the stick cleaner left or right, cleaning is much easier.
- When you clean the floor right in front of the wall, the front shutter is activated so that you can clean the dust easily.

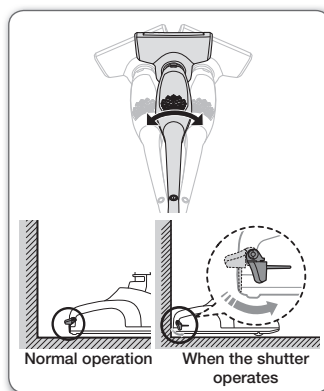

## USING THE HANDY CLEANER

 - Lift the button to separate the handy cleaner and separate the handy cleaner from the main body by pulling it in the direction of the arrow.

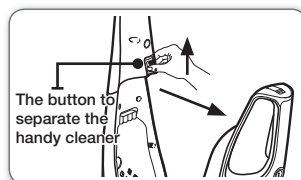


## 2. Handy Cleaner On / Off

- When the power button is pressed, the operation alternates between  ON / OFF.



 
1. Connect the handy cleaner to the main body after using it. (See page 7).
2. When you connect the handy cleaner to the main body, make sure to turn the handy cleaner off.

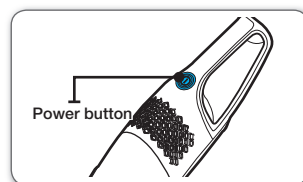

## USING THE CREVICE / DUSTING

Insert crevice/dusting into the end of the air inlet on the handy cleaner to install it. To remove it, simply pull it out.

 - After using it, please store it in the crevice/dusting cradle of the charger so that you do not lose it. (See page 5).
- Crevice : Use this to clean the dust from the grooves of window frames, corners or gaps.
- Dusting : Use this to clean the dust from the grooves of windows, corners or gaps.

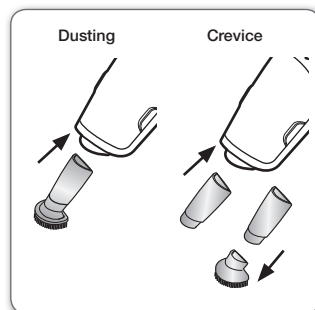

## EMPTYING THE DUST BIN

1. If the dust bin is full or the sucking power decreases, empty the dustbin.



2. Press the [buttons to separate the dustbin] with your thumb and middle finger and then pull it out.



3. Lift the dust bin cover.



# operating the cleaner

4. Empty the dust bin.



5. Close the dust bin cover.



6. Push the dust bin down until it “clicks” into place.



- Using a plastic bag

This method is recommended for people with allergies or asthma.



Cleaning the dustbin with cold water is also recommended.

# maintain tools and filter

## CLEANING THE FILTER

 
1. Press the [buttons to separate the dustbin] with your thumb and middle finger and then pull it out.



2. Lift the dustbin cover.




3. Hold the dust bin cover and separate the grill filter and the micro filter from the dust bin cover by pulling them and pressing the grill filter fixing hook.

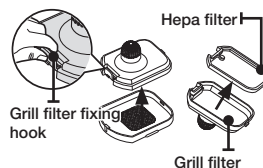


4. Shake the dust from the filters and then wash the hepa filter until it is clean.



 5. Dry the filter completely in a well-ventilated, shady location.

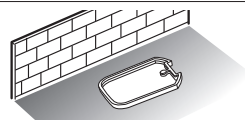

 6. After assembling the micro filter and the grill filter, hook one side of the grill filter and push the fixing hook of the dust bin cover down until it clicks into place.



7. Assemble the assembled dustbin cover and the dust bin.



Add a neutral detergent and the filter into warm water and leave it for 30 minutes. This will wash the filter more effectively.

# maintain tools and filter

---

## Maintaining the filter



 
- Do not dry it near a microwave or fire.
- Do not clean it by putting it into a washer or using an unapproved detergent. (See page 5).
- After cleaning, dry it completely in the shade.
  - If you use the filter when it is not completely dried
  - Moisture or water may enter the motor and cause a problem.
  - The dust and moisture in the inlet solidifies and this drastically decreases the sucking power.
  - The filter may smell.
- Dry the part in the shade as drying it in the sun for a long time may deform or discolor it.

## COUNTERMEASURE TO REMOVE ANYTHING CLOGGING THE CLEANER


---

- To prevent clogging while using the cleaner, avoid vacuuming big or sharp objects such as toothpicks, blades, socks, etc.
- If the cleaner is clogged while in use, the sucking power may decrease and a vibrating sound may be heard. In this case, remove the item clogging the product.
- If a foreign object is caught while you use the product, the drum will not rotate. In this case, turn the power of the cleaner off and remove the object.
- Since the safety device is activated in this case, please operate the product again after about 10 seconds.


1. Press the button to separate the air inlet and then separate the air inlet from the main body.

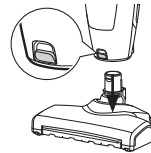

 2. Press the air inlet cover fixing hook and separate it.

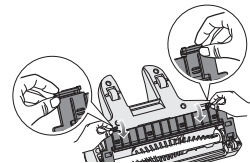

 
3. Hold the end of the drum where there is no belt and lift it up.

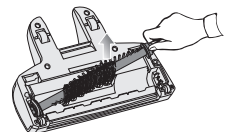


4. Remove any hairs and threads around the drum with a vacuum cleaner.



 5. Install the belt onto the drum and fix the drum using the fixing grooves.

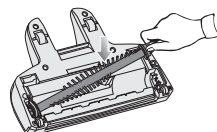

 6. After fixing the drum, insert the air inlet cover into the groove and assemble it by slightly sliding it down.

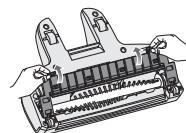**NOTE**

- Since an oil-papered or wood-covered floor may be scratched by the cleaner, please check the type of wheels of the air inlet.
- If you cannot remove foreign objects from the cleaner, please contact a service center.

# troubleshooting

---

PROBLEM	SOLUTION
Motor downs and does not start.	<ul style="list-style-type: none"><li>• Check cable, plug and socket.</li><li>• Leave to cool.</li></ul>
Suction force is gradually decreasing.	<ul style="list-style-type: none"><li>• Check for blockage and remove.</li></ul>
Low or decreasing suction.	<ul style="list-style-type: none"><li>• Please check filters. If required clean it as illustrated in the instruction.</li></ul>



memo

---



If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	<a href="http://www.samsung.com/au">www.samsung.com/au</a>
HONG KONG	(852) 3698-4698	<a href="http://www.samsung.com/hk">www.samsung.com/hk</a> <a href="http://www.samsung.com/hk_en">www.samsung.com/hk_en</a>
MALAYSIA	1800-88-9999	<a href="http://www.samsung.com/my">www.samsung.com/my</a>
SINGAPORE	1800-SAMSUNG(7267864)	<a href="http://www.samsung.com/sg">www.samsung.com/sg</a>