

VOLTA



Volta Lite U1660
Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

Thank you for choosing a Volta Vacuum Cleaner from the Electrolux Group. To ensure total satisfaction, read the instruction manual carefully. Retain for reference.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS

BEFORE USING (THIS APPLIANCE)

When using an electrical appliance, basic precaution should always be followed, including the following: Before connecting the cleaner to an electrical supply outlet ensure that the voltage marked on the rating plate (on the underside of the cleaner) is correct for your electrical supply. If it does not comply, do not use the cleaner prior to contacting the manufacturer.

WARNING – To reduce the risk of fire, electric shock, or injury:

1. Do not leave vacuum cleaner when plugged in. Unplug from outlet when not in use and before servicing.
2. To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
3. Young children should be supervised to ensure that they do not play with the appliance. Close attention is necessary when used near children.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given instruction or supervision concerning the use of this appliance by a person responsible for their safety.
5. Use only as described in this manual. Use only manufactures recommended attachments.
6. Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped in water, enter it to a service centre before using.
7. Do not pull or carry on cord, use as a handle. Do not close door on cord, or pull around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
8. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
9. Do not handle the plug or vacuum cleaner with wet hands.
10. Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
12. Turn all controls off before unplugging.
13. Use extra care when cleaning on stairs.

14. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
15. Unplug before connecting the hose.
16. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
17. Do not use without dust bag and/or filter in place.
18. Do not use extension cords or outlets with inadequate current carrying capacity.
19. We recommend you do not use your vacuum on carpet cleaning foams, sharp or heavy building materials or plaster dust. They could damage or clog dustbag and cause failures to other key parts in your vacuum cleaner and render your warranty invalid.
20. Store your cleaner indoors in a cool, dry area.
21. Keep your work area well lighted.
22. Unplug electrical appliances before vacuuming them.

SERVICE & REPAIR

It is dangerous to alter the specification or modify the product in any way. Under no circumstances should you attempt to repair the cleaner yourself. Repairs are undertaken by unauthorised or inexperienced persons may cause injury and/or serious malfunction and may void warranty.


NB! To avoid injury and prevent damage to the machine, a defective lead must only be replaced by an authorised Volta service provider approved by the manufacturer.

The cleaner should be serviced by an authorized Volta service provider and only genuine Volta spare parts should be used.

Double Insulation

Your vacuum cleaner is double insulated. This means that all external parts are electrically insulated from the mains. This is done by placing insulation barriers between the electrical and mechanical components, making it unnecessary for the cleaner to be earthed.

PARTS IDENTIFICATION

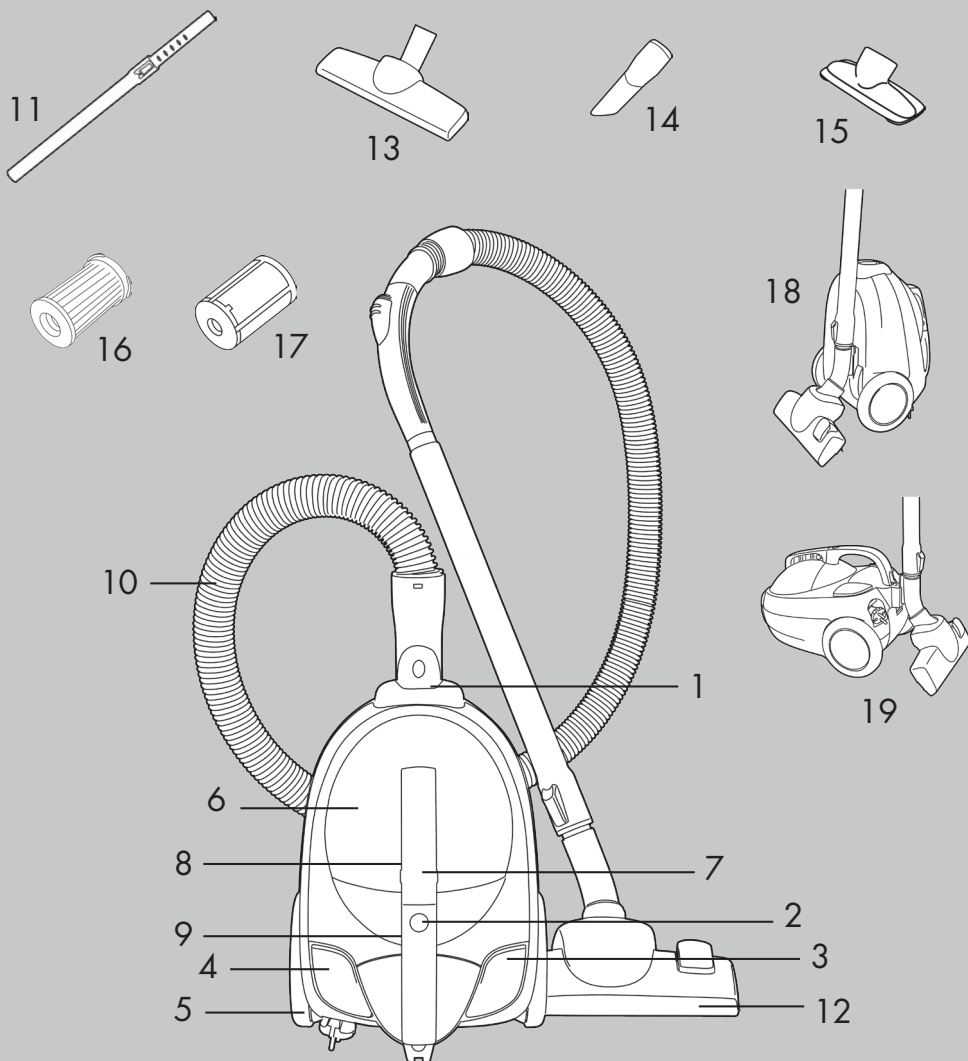

DESCRIPTION OF PARTS

- | | | |
|--------------------------------|-------------------------------|------------------------|
| 1. Hose release button | 8. Dust container open button | 15. Upholstery nozzle |
| 2. Electronic filter indicator | 9. Carrying handle | 16. Cartridge filter |
| 3. On/off switch | 10. Hose | 17. Protector mesh |
| 4. Cable rewind button | 11. Telescopic tube | 18. Vertical parking |
| 5. Wheel | 12. Combination floor nozzle | 19. Horizontal parking |
| 6. Dust container | 13. Floor nozzle | |
| 7. Dust container handle | 14. Crevice nozzle | |

INSTRUCTIONS FOR USE

- Before placing into operation make certain that the filters are in the proper position and check that the dust container is in place.
 - To connect the hose into the suction inlet push it until it clicks. To disconnect the hose from the suction inlet, push the button at the end of the hose. (Refer to the diagram on page 4, reference 33)
 - Attach the telescopic tube to the hose handle and floor nozzle by pushing and twisting together. (Twist and pull apart to dismantle).
- A.** Unwind a sufficient length of cable and insert the plug into the powersocket. A YELLOW mark on the power cable shows the ideal cable length. Do not extend the cable beyond the RED mark.
- B.** Press the ON/OFF button to switch the appliance on. On initial start up full power is reached after approximately 1-2 seconds.
- C.** Extend the cable and connect to the mains. The cleaner is fitted with cord rewind, ensure cord is not twisted before use. (Press foot pedal to rewind. Note: Please hold the plug to prevent it striking you or the machine).
Sound level: 82,5 db(A)

GETTING THE BEST RESULTS

Carpets: Use the floor nozzle with the lever in horizontal position.

Hard Floors: Use the floor nozzle with the lever in vertical position.

Loose rugs/curtains/light weight fabrics: Use the floor nozzle for loose rugs and the upholstery nozzle for curtains, cushions etc.

Confined areas: Use the crevice nozzle for crevices, corners and radiators.

Dusting brush - Use for removal of dust coverage on furniture and slatted blinds.

MAINTENANCE

REMOVING THE CONTENTS OF THE DUST CONTAINER

- Never operate the cleaner without the dust container installed.
 - Your cleaner is fitted with an electronic filter indicator. The dust container must be emptied if the window of the electronic filter indicator is illuminated when the cleaner is operating at maximum power and the nozzle is raised from the floor.
 - Please note: It is normal for the red light of the indicator to flicker on and off during use. If the dust container is emptied and the indicator is still active, it means that the cartridge filter is clogged. In this case, follow the instructions of chapter 'Replacing or cleaning the cartridge filter'.
- 22** Remove the dust container by pushing the open buttons on the two sides of the dust container handle.
- 23** Remove the contents of the dust container by pushing the orange - coloured opening button.
- 24,25** If necessary, the protector mesh also can be removed (24) in order to shake the dirt from its surface (25).
- 26** Close the dust container lid until it clicks.
- 22** Insert the dust container back into the cleaner by pressing it down until it clicks





REPLACING THE FILTERS

Filters should be replaced at least twice a year or when they become visibly soiled. Always operate the cleaner with filters installed to avoid reduced suction.


Disconnect from electrical outlet before changing the filters. Menalux branded filters are strongly recommended by Volta. Those high quality filters will ensure a long life time of your Volta vacuum cleaner. For more information about Menalux products, please visit our web site: www.menalux.com.au.

REPLACING OR CLEANING THE CARTRIDGE FILTER


- 22** Remove the dust container by pushing the open buttons on the two sides of the dust container handle.
- 23** Remove the contents of the dust container by pushing the orange - coloured opening button.
- 24** Remove the protector mesh.
- 27** Remove the cartridge filter by turning it counterclockwise.
- 25** Shake the dirt from the filter and the mesh into a bin.
- 28** If necessary the filter and mesh can be rinsed, with cold water, under a tap.
- 29** Air dry them for approximately 24 hours, to ensure it is completely dry before re-using. Avoid direct sunlight and extreme drying circumstances (e.q. hair-dryer).
- 27** Insert the cartridge filter back to the dust container and turn it clockwise until the cartridge filter locks completely.
- 24** Insert the protector mesh into its place by pushing it onto the cartridge filter.
- 26** Close the dust container lid until it clicks.
- 22** Insert the dust container back into the cleaner by pressing it down until it clicks.
Cartridge filter Menalux reference number: F110

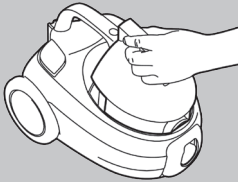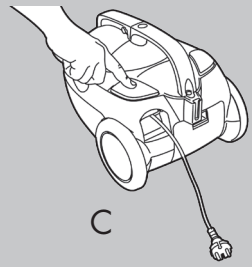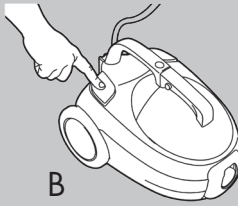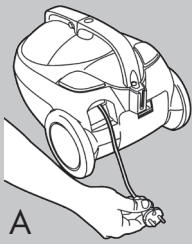


22

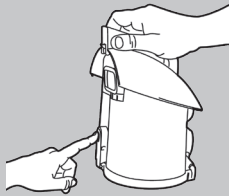


23

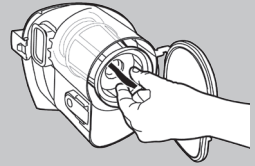


24

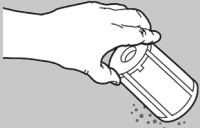


25

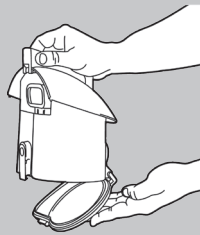


26

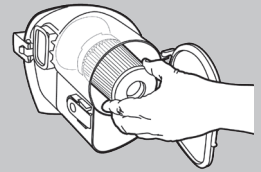


27

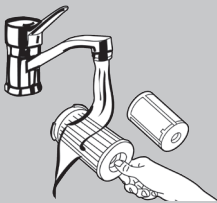


28

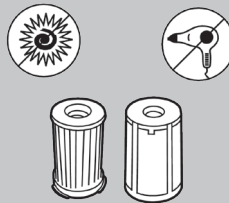


29

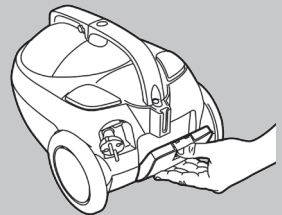


30

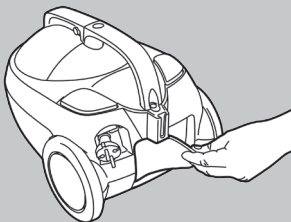

31

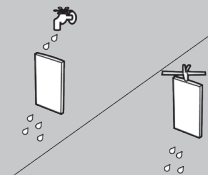

32

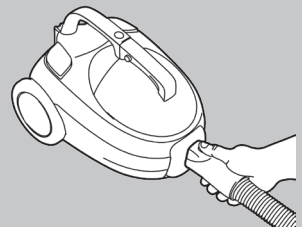

33

MAINTENANCE AND CUSTOMER INFORMATION

CLEANING THE EXHAUST FILTER

- 30 Open the filter grill.
- 31 Remove the exhaust filter.
- 32 Rinse it under tap water and dry it completely.
- 31 Put the filter back into the cleaner.
- 30 Close the filter grill.

Exhaust filter reference number: Menalux F110

TROUBLE FINDING YOUR MENALUX FILTERS?

If you do not find Menalux at yours store, please call Volta customer service on 1300 365 305 (Aus), 0508 730 730 (NZ).

OPERATING THE HOSE IN/OUT OF THE SUCTION INLET

- 33 To connect the hose into the suction inlet push it until it clicks. To disconnect the hose from the suction inlet push the button at the end of the hose.

WARNING: On collection of proprietary carpet conditioning powders, plaster/concrete dust, it is recommended that the dust container is emptied and the cartridge filter is cleaned after every use. Some of the preparations contain substances which while left in the vacuum cleaner for extended periods could create damage.

Many air fresheners, household deodorants, sprays and polishes contain highly inflammable gas propellants. Because of this it is particularly important that these products are used strictly in accordance with the relevant manufacturers instructions. It is essential that none of the above products are sprayed directly into the vacuum cleaner.

TROUBLE SHOOTING AND CUSTOMER INFORMATION

The vacuum cleaner does not start.

1. Check whether the dust container is full, if so empty and clean the cartridge filter if showing build up of dust residue, also inspect the exhaust filter, if severely discoloured it is to be replaced.
2. Check that the plug and the cable are not damaged.
3. Check for a blown fuse.

The vacuum cleaner stops when in use.

1. Check whether the dust container is full, if so empty and clean the cartridge filter if showing build up of dust residue, also inspect the exhaust filter. If severely discoloured it is to be replaced.
2. Is the nozzle, tube or hose blocked?
3. Are the filters blocked?

Blockages and dirty filters can result in the cleaner switching off in operation, due to restriction of air flow causing the activation of the thermal overload. If this does occur switch off the cleaner at the mains and remove the plug. Allow the cleaner to cool for 20 - 30 minutes. In this time check the hose, tubes and nozzle for blockages.

(a) To check for a hose blockage pass a small coin through it, on finding the blockage remove it by pressing the hose to dislodge and loosen the obstruction. However be careful in the case it has been caused by glass or needles caught inside the hose at the point of the blockage.

(b) By passing a flexible tube through the hose from the handle end the blockage can also be removed.

If the obstruction can not be removed please consult the Service Providers listing supplied with the cleaner for your closest Volta Authorised service provider. The clearing of a blocked hose is not covered by warranty.

Water has entered the vacuum cleaner.

It will be necessary to replace the motor by an authorised Volta service agent. Damage to the motor caused by the penetration of water is not covered by the warranty.

CUSTOMER INFORMATION

Should you require service or consumable spares for your Volta cleaner, please consult the service providers listing enclosed with this cleaner for your nearest Electrolux authorised service provider or contact the Customer service help line on 1300 365 305 (Aus), 0508 730 730 (NZ).

PROTECTING THE ENVIRONMENT


- Attempt to recycle packaging material and old appliances.
- The cardboard packaging can be placed in the waste paper collection.
- Deposit the plastic bag made of polyethylene (PE) at the PE collection point for recycling.
- Deposit the polystyrene foam at the PS collection point for recycling.

RECYCLING THE APPLIANCE AT THE END OF ITS LIFE:

- The plastic components all carry a material identification marking so that, like the other materials, they can be recycled at the end of the life of the appliance.
- Please inquire with your local authority.

BLOCKED AIR FLOW AND DIRTY FILTERS

- The cleaner stops automatically if a blockage occurs in the nozzle/tube/hose or if the filters are blocked with dirt.
- Disconnect from mains and allow the cleaner to cool for 20-30 minutes. Remove blockage and/or clean filters.
- Restart the cleaner.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product

WARRANTY

for sales in Australia and New Zealand

APPLIANCE: VOLTA BRAND VACUUM CLEANERS

This document sets out the terms and conditions of product warranties for Volta branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Volta appliance.

General Terms and Conditions

In this warranty Electrolux means Electrolux Pty Ltd ABN 21 000 015 136 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand; 'Appliance' means any Volta branded product purchased by you accompanied by this document; 'Warranty Period' means where you use the Appliance for personal, domestic or household purposes in Australia and in New Zealand, the period of 24 months; where you use the Appliance for commercial purposes, the period of 3 months following the date of original purchase of the Appliance; 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.

1. This warranty only applies to Volta branded appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
2. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Volta branded appliance is free from defects in materials and workmanship for the Warranty Period.
3. During the warranty period Electrolux or its Authorised Service Centre will, at no extra charge and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to bonus giveaways or batteries, drive belts, filters, accessories or similar consumable parts.
4. You are responsible for paying all service call fees and/or transport charges and/on damages and loss incurred in connection with transportation of this appliance to and from Electrolux or its duly appointed service provider's premises.
5. Parts and appliances not supplied by Electrolux are not covered by this warranty
6. Proof of purchase is required before you can make a claim under this warranty. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
 - A) The Appliance is damaged by:
 - (i) use with anything other than Volta genuine spare parts
 - (ii) accident
 - (iii) vacuuming up wet materials or construction/building materials that is not normal day to day domestic dry use
 - (iv) misuse, neglect or abuse, including failure to properly maintain or service
 - (v) normal wear and tear
 - (vi) power surges, electrical storm damage or incorrect power supply.

- (vii) incomplete or improper installation
 - (viii) incorrect, improper or inappropriate operation
 - (ix) insect or vermin infestation.
- B) The Appliance is modified without authority from Electrolux in writing.
 - C) The Appliance's serial number or warranty seal has been removed or defaced.
 - D) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.

This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the State where the Appliance is purchased if the Appliance is purchased in Australia or the law applicable in New Zealand if the Appliance is purchased there. Where the Appliance is purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

Limitation of Liability

To the extent permitted by law:

- A) Electrolux excludes all warranties other than as contained in this document;
- B) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.

Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so); in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice: Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

FOR SERVICE OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SERVICE CENTRE IN AUSTRALIA
Please call 1300.366.366.

FOR SPARE PARTS OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SPARE PARTS CENTRE IN NEW ZEALAND
Please call 0508 730 730

KEEP THIS FOR YOUR RECORDS

To be completed by the Purchaser

Model

Serial No.....

Date of Purchase.....

Retailers Name.....

Retailers Address.....

City..... State.....

Attach Your Purchase Receipt Here

Electrolux Floor Care and Small Appliances
Electrolux Pty Ltd ACN 000 015 136
13 Gilbert Park Drive, Knoxfield Victoria,
Australia, 3180. Ph: (03) 8756 7300
Customer Service Ph:1300 366 366
www.electrolux.com.au

Electrolux Floor Care and Small Appliances
A division of Electrolux (NZ) Limited
130 Cryers Road, East Tamaki, Auckland
New Zealand. Ph: (09) 273 8340
www.electrolux.co.nz

*Some models may be limited in availability or be available from certain stores only. Not all models and specifications are available at time of printing and not all models are available in NZ. See your local Volta retailer or call the above phone numbers for further information if required.

*Due to the Electrolux policy of continual product development; specifications, colours and details of our products and those mentioned in this manual are subject to change without notice.

 **From the Electrolux Group.**