


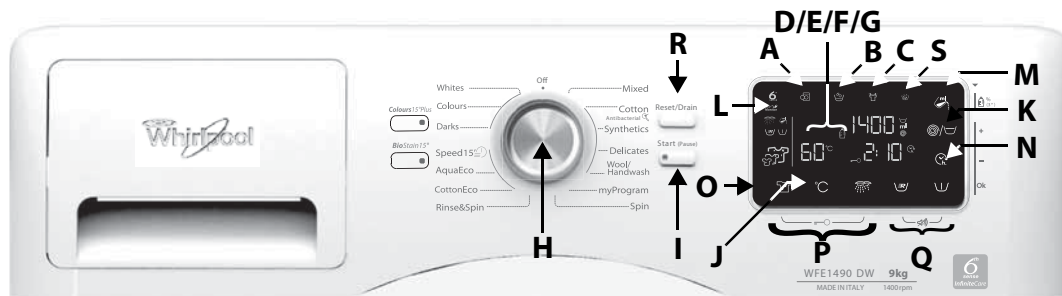




 
 
 
 







 
 





















 













 

- A. "Door free" indicator   
 B. "Wash in process" indicator   
 C. "Programme finished" indicator 

The washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

- D. "Clean pump" indicator   
 E. "Water tap closed" indicator   
 F. "Service" indicator   
 G. "Waterstop" indicator 



- H. Programme selector  
 I. "Start/Pause" button  
 J. "Temperature" key °C  
 K. "Spin" key  (including "Rinse hold" )  
 L. Eco monitor   
 M. "Dosing Aid" key   
 N. "Delay" key   
 O. "Soil level" key   
 P. "Child lock" key combination   
 Q. "Sound off" key combination   
 R. "Reset/Drain" button  
 S. Detergent overdosage indicator 

Programme		Tempe- rature °C	Care Labels	Max. Load kg	Type of wash/Notes  - Respect the manufacturer's recommendations on the care label	Detergents and additives			Selectable options						Dosing aid	Delay	Spin	
						Pre- wash 2)	Main wash	Softener	Colours 15° plus	BioStain 15°	Soil level	Intensive rinse	Rapid	Pre- wash			Spin	Max. Spin Speed rpm
Mixed		cold - 60°C	 	6.0	Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	—	Yes	*	*	*	*	*	—	—	*	*	*	max.
 Fabrics	Cotton Antibacterial 	cold - 95°C	   	8.0	Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen. At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry.	*	Yes	*	* <sup>3)</sup>	* <sup>3)</sup>	*	*	* <sup>3)</sup>	*	*	*	*	max.
	Synthetics	cold - 60°C	   	3.5	Normally soiled garments made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	*	*	max.
	Delicates	cold - 40°C	 	2.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	—	*	—	—	*	*	*	*	1000 <sup>1)</sup>
	Wool/ Handwash 	cold - 40°C	 	2.0	Woollens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable.	—	Yes	*	—	—	*	—	—	*	*	*	*	1000 <sup>1)</sup>
 Colours	Whites	cold - 60°C	   	8.0	Normally to heavily soiled and robust white cotton laundry. Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.	—	Yes	*	—	—	*	*	—	—	*	*	*	max.
	Colours	cold - 60°C	   	6.0	Normally to heavily soiled delicate and/or synthetic textiles. In case of heavy soil level, use stain remover and select “Prewash”. Also appropriate for white and light delicate laundry; for that kind of laundry you can use bleach on oxygen basis and wash it at temperatures above 40 °C (if care label allows).	*	Yes	*	*	*	*	—	—	*	*	*	*	1000 <sup>1)</sup>
	Darks	cold - 60°C	   	6.0	Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discolouration. Prefer to use a special liquid detergent for dark garments with this programme.	*	Yes	*	*	*	*	*	*	*	*	*	*	1000 <sup>1)</sup>
 Eco	Speed 15' 	cold - 30°C	 	3.0	Briefly worn clothing made of cotton, synthetic fibres and blends with cotton. Refresh programme. Use lowest recommended detergent amount.	—	Yes	*	—	—	—	—	—	—	*	*	*	max.
	AquaEco	cold - 40°C	   	3.0	Lightly soiled laundry made of synthetic fibres, or synthetics mixed with cotton garments. Saving programme with a very low water consumption. Use liquid detergent and the lowest recommended amount for 3 kg laundry. Do not use softener.	—	Yes	—	—	—	—	—	—	—	*	*	*	max.
	CottonEco	40°C cold - 30°C 50-60°C	    	9.0 8.0	Normally soiled cotton laundry. At 40°C most favourable programme in terms of combined water and energy consumption for washing cotton laundry.	—	Yes	*	—	—	*	*	—	—	*	*	*	max.

 
 









 


 
 









 
 
 

 
 








 
 

 
 
 








 
 
 
 
 









 
 











 
 
 









 
 

 
 
 








 
 









 
 




 


 

 
 

\*: optional / Yes: dosing required

<sup>1)</sup> For improved garment care, spin speed is restricted in these programmes.

<sup>2)</sup> Do not use liquid detergent for the main wash when having selected "Prewash", or when setting a delay.

<sup>3)</sup> Not selectable for Cotton 70-95°C.

## PROGRAMME CHART

Programme		Tempe- rature °C	Care Labels	Max. Load kg	Type of wash/Notes  - Respect the manufacturer's recommendations on the care label	Detergents and additives			Selectable options						Dosing aid	Cycle end <sup>2)</sup>	Spin	
						Pre- wash 2)	Main wash	Softener	Colours 15° plus	BioStain 15°	Soil level	Intensive rinse	Rapid	Pre- wash			Spin	Max. Spin Speed rpm
myProgram	P01 – LARGE ITEMS	cold - 60°C	  	3.0	Blankets made of synthetic fibers; bedcovers filled with feathers, polyester or other artificial fibers; sleeping bags, bathmats and similar items.		Yes											1000 <sup>1)</sup>
	P02 – BABY	cold - 60°C	  	5.0	Normally soiled baby clothes made of cotton and/or linen. The suds are rinsed out even more thoroughly, which helps to protect sensitive baby skin.		Yes											1000 <sup>1)</sup>
	P03 – BED LINEN	cold - 95°C	  	3.5	White or coloured bed linen made of cotton and synthetic fibers, or blends of both. Reduces microbes and gently cleans, also delicate bed linen. A thorough rinse phase helps to prevent detergent and pollen residues. Prefer powder detergent for this programme.		Yes											max
	P04 – JEANS	cold - 60°C	  	5.0	Normally soiled cotton jeans-wear and garments made of robust jeans-like material, such as trousers and jackets. For dark jeans-wear, use of special detergent for dark laundry recommended.		Yes											1000 <sup>1)</sup>
	P05 – BUSINESS	cold - 40°C	  	2.5	Shirts and blouses made of cotton, linen, synthetic fibers or their blends. Gentle programme for fine garments which have been used or which are only lightly soiled. Pre-treatment of stains recommended. Reduce ironing by selecting “rinse hold”, terminating the programme without spinning and putting the shirts/blouses on hangers dripping wet to let them dry.		Yes											1000 <sup>1)</sup>
	P06 – SPORT	cold - 30°C	 	3.5	Normally soiled and sweaty sportswear made of cotton jersey or microfibers. Programme includes a prewash cycle - add detergent also to the prewash chamber. Do not use softener.		Yes											max
	P07 – CASHMERE	cold - 40°C		2.0	High quality cashmere garments identified as machine washable or hand washable. Low spin speed recommended (400 rpm). Respect the instructions on the care label.		Yes											400
	P08 – MINI LOAD	cold - 40°C	  	1.0	Cotton and/or synthetic laundry made of robust fabric types. Ideal programme to wash a small load of laundry in an economic way. Pre-treatment of stains recommended. Not appropriate for very delicate laundry.		Yes											max
Rinse & Spin		—	—	9.0	Separate rinse and intensive spin programme. Suitable for robust laundry.		—											max.
Spin		—	—	9.0	Separate intensive spin programme. Suitable for robust laundry.		—											max.

CONSUMPTION DATA				
Programme	Temperature (°C)	Load (kg)	Approx. Programme Duration (hours : minutes) ☺	
			without "Rapid"	with "Rapid"
Mixed	40	6.0	1:00	—
Cotton / Antibacterial ☼	95	8.0	2:40	—
Cotton	60	8.0	2:20	1:45
Cotton	40	8.0	2:05	1:15
Synthetics	60	3.5	1:37	1:12
Synthetics	40	3.5	1:20	0:55
Delicates	40	2.5	0:50	—
Delicates	30	2.5	0:46	—
Wool/Handwash	40	2.0	0:40	—
Whites	40	8.0	2:20	—
Colours	40	6.0	1:20	—
Darks	40	6.0	1:40	1:15
Speed 15	30	3.0	0:15	—
AquaEco	40	3.0	1:00	—
CottonEco*	40	9.0	4:30	—
P01 – Large items	40	3.0	1:30	—
P02 – Baby	60	5.0	1:30	1:10
P03 – Bed linen	60	3.5	2:00	—
P04 – Jeans	40	5.0	1:30	1:10
P05 – Business	40	2.5	0:50	—
P06 – Sport	30	3.5	1:35	1:11
P07 – Cashmere	30	2.0	0:36	—
P08 – Mini load	30	1.0	0:45	—

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).


\* Reference programme for Energy and Water Labelling, according to the Australian Standards AS/NZS 2040.1 and AS/NZS 2040.2

## LOAD LAUNDRY AND SELECT PROGRAMME

Load the laundry, close the door and turn the programme selector to the desired programme - the "Start/Pause" indicator blinks. The temperature and spin speed shown on the display can be altered by pressing the "Temperature" or "Spin" button. If you do not use the Dosing Aid, add detergent now. The washing machine is designed to save energy; therefore, if you have selected a programme but do not start it within about a quarter of an hour, it will switch off automatically. To switch it on again, turn the programme selector to "Off/O" and then to the desired programme again.

## myProgram

This feature offers the possibility to select and save, out of a list of 8 special programmes, the one that most meets your needs. When you select the "MyProgram" position, a code ranging from "P01" to "P08" will appear on the display (see programme table to understand which programme corresponds to the displayed code). Use the "+" and "-" buttons to select the available programmes, and button "Ok" to confirm your choice. If you do not confirm it within a few seconds, the selected programme is automatically confirmed, and its default settings appear on the display. You can now select options or modify temperature / spin speed, as you do it for any other programme, according to the possibilities indicated in the programme table. Once a programme of the "MyProgram" list has been confirmed, it will be remembered next time you select "MyProgram" on the selector.

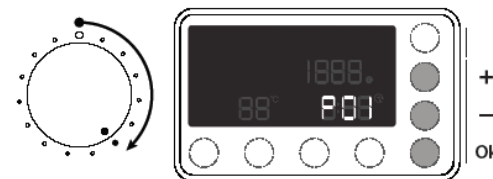

## SELECT OPTIONS IF DESIRED

If the combination programme/option or option/option is not possible, the indicator switches off automatically. For certain programmes, an option may already be preset; if you want you can deselect it.

## "Colours 15° plus" button

Helps to maintain the colours of dark and coloured laundry by pre-treatment with fabric softener, before the main wash cycle.

Your laundry will be washed with cold water; thus you save most of the energy used for water heating. Appropriate for lightly soiled dark and coloured laundry without stains, made of cotton/linen, synthetics or blends of both. Recommendable for new garments of that type which usually fade most during the first washes. - Make sure that the fabrics are suitable to be treated with softener.

Use detergent for coloured or dark laundry which is appropriate also for cold wash temperatures (15 or 20°C).

Add the recommended amount of liquid fabric softener to the PREWASH chamber \L/ of the detergent dispenser; respect the dosing recommendations on the softener bottle.

If you intend to use liquid detergent for the main wash, add the additional insert delivered with your washing machine to the MAIN WASH chamber \L/ of the detergent dispenser. Observe the indications in your Instructions for Use / Where to put Detergents and Additives.

Do not add the insert to the main wash chamber when using powder detergent for the main wash. This option will prolong the programme by about half an hour.

## "BioStain 15°" button

Supports the removal of stains.

The programme you selected will begin with a cold water wash phase; this will prolong the programme duration by about 10 minutes.

Appropriate for all kinds of stains, except grease/oil. Pre-treatment recommended for obstinate stains.

## "Soil level" key ☼

Adapts the programme duration to the soil level of your laundry (small = lightly, medium = normally, big = heavily soiled). Also influences the detergent quantity recommendation when using the "Dosing Aid" button. Not all soil levels are selectable for each programme.

## "Intensive rinse" key ☼

More water is added and rinse cycle is prolonged. Particularly suitable for areas with very soft water or for washing baby linen, and helps people with allergies.

## "Rapid" key \R/

Enables quicker washing by shortening the programme duration.

Recommendable for only lightly soiled laundry. Not selectable for Cotton 70 - 95 °C.

### “Prewash” key



Adds a prewash cycle to the wash programme selected; prolongs the programme by about a quarter of an hour.


Recommended for heavily soiled laundry (e.g. containing sand or granular dirt).

### “Spin” key (incl. “Rinse Hold” )

Select a spin speed differing from the preset one. If you select spin speed “0”, the final spinning is cancelled and the water is drained out only.

However, intermediate spin phases remain during the rinse.

If you select “Rinse hold” , the laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing and prevent colours from changing. To activate the “Rinse hold”, press the “Spin” key repeatedly until the “Rinse hold” symbol  on the display lights up.

- The wash programme stops to “Rinse hold” when the “Rinse hold” symbol  on the display blinks; the **“Start/Pause”** indicator blinks as well.
- To terminate the “Rinse hold” by spinning the laundry, press **“Start/Pause”** - the laundry will be spun with the default spin speed. You can also select another spin speed with the “Spin” key before you start the spin cycle with **“Start/Pause”**.
- To terminate the “Rinse hold” by draining the water without spinning, press the “Spin” key until spin speed “0” appears on the display; then press **“Start/Pause”** to start the draining.
- Do not leave the laundry to soak for too long in the “Rinse hold” (especially silk!).

### SET A DELAY

You can postpone your programme to complete at a later time: press the key to select in how many hours the programme shall be finished. Thus, it allows you to have your laundry ready at a particular time and to benefit from more favourable energy rates during the night, for example.

- The delay can be selected in full hour time segments (1 to 24 h). When you press the key, the shortest possible time will be displayed; keep on pressing the key to loop through all the available times. To remove it again, keep on pressing the key until you see the value “0:00”.
- When you have selected the desired delay, press **“Start/Pause”** - the countdown will begin.
- During the countdown, you can still modify the programme setting (select or deselect options, change spin speed etc.). If the modifications prolong the programme duration so that it

overruns the originally set delay, the programme will start immediately.

- Sometimes the programme may finish before the selected delay has expired (e.g. for small loads). In this case, the washing machine will tumble the laundry regularly to keep it fresh, until the selected delay has expired. During tumbling, the display will show an animation. The tumbling phase can be stopped at any time either by pressing any button or by rotating the programme selector; the animation will stop and the door will unlock in about 1 minute as indicated on the display.

### DETERGENT DOSING RECOMMENDATION

With the “Dosing Aid” key, you can make your washing machine indicate you the recommended detergent quantity for your wash load, depending on the soil level selected and the size of the load.

- Helps to save detergent and protect the environment and also sensitive skin by avoiding detergent overdosing.
- Before you use this function, you must adapt the washing machine to the dosing amounts which are recommended for the detergents you use. Also check if your region’s water hardness corresponds with the water hardness level “soft” of your washing machine - if not adapt it.
- Select programme, options and cycle end before pressing the “Dosing Aid” key.

For any details, refer to the separate “Dosing Aid” Instructions for Use.

### “DOOR OPEN” INDICATOR

Before starting and after end of a programme, the indicator lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to “Reset a running programme before the end”.

### ECO MONITOR .....

The “Eco monitor” gives you a rough feedback about the power consumption of the programme setting you selected.

As soon as you turn the programme selector to any programme, the “Eco monitor” is on. The indicator on the left is to show that the “Eco monitor” is active. The four indicators next to it show

the degree of consumption: the less power your programme setting is forecasted to consume, the less indicators will light up. This depends on the programme, temperature and options selected, and also on the size of the wash load. For that reason, the forecasted degree of power consumption may adapt when the washing machine detects the wash load.

### DRUM LIGHT

When you select a programme, the drum light will slowly go on to assure a good visibility during laundry loading.

After starting your programme with **“Start/Pause”**, the drum light will fade on and off while the washing machine detects the laundry load.

Subsequently, it will go off.

When the programme is finished, the light goes on again for a short time; afterwards it will go off automatically to save energy. If you want to switch it on again for unloading your laundry, just press any option button or turn the programme selector (but not to “Off/O”).

The drum light will blink fast when a failure is detected.


### PROGRAMME START

Open the tap and press the **“Start/Pause”** button. The **“Start/Pause”** indicator lights up. When the laundry load is detected or the programme duration is adapted, the display shows an animation.

### CHILD LOCK

Prevents children from starting a wash cycle or changing the settings of a running programme. Cannot be activated or deactivated when the programme selector is in the “Off/O” position.

To activate the child lock:

- Turn the programme selector to a programme position, or run a programme as usual.
- Press and hold the 2 buttons marked with the key symbol  simultaneously for a few seconds. A key symbol will appear on the display to indicate that the child lock is active.

Any time you try to change a programme setting with active child lock, a signal will sound; it cannot be changed anymore. The only change possible is to switch the washer off by turning the programme selector to the “Off/O” position. To deactivate the child lock, proceed in the same way as for activating it (signal will sound twice).

### SOUND OFF


Press and hold the marked keys simultaneously for a few seconds to switch off the peep sound of the buttons and at the end of the programme; a long signal sounds. To switch it on again, proceed in the same way; a short signal sounds twice.

### FAILURE INDICATORS

If one of the failure indicators lights up, or in case of any malfunction, consult the “Troubleshooting Guide” in your Instructions for Use.

**Spin speed on display blinks:** Unbalance during spinning.

### PROGRAMME END

- The “Door open” indicator  lights up. The display shows “End”. After about a quarter of an hour, the washing machine will switch off completely to save energy.
1. Turn the programme selector to the “Off/O” position.
  2. Close the water tap.
  3. Open the door and unload the machine.
  4. Leave the door ajar to allow the drum to dry.

### DETERGENT OVERDOSAGE INDICATOR

The symbol will light up at the end of the programme if you used too much detergent. Use less detergent next time.

### CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **“Start/Pause”** button to pause the programme. The indicator blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **“Start/Pause”** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

### RESET A RUNNING PROGRAMME

The **“Reset/Drain”** button cancels a running programme.

- Press and hold the **“Reset/Drain”** button for a few seconds; an animation appears on the display. The water is drained out; it may last some time until you can open the door.