

Your new dryer

Congratulations - you have chosen to buy a modern, high-quality Bosch domestic appliance. The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements → page 6. Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal
Dispose of packaging in an environmentally-responsible manner. This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment - WEEE). The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com

Contents

■ Preparation	Page 2
■ Setting the programmes	Page 2
■ Drying	Page 3/4
■ Notes on laundry	Page 5
■ Important Information	Page 6
■ Overview of programmes	Page 7
■ Installation	Page 8
■ Frost protection / Transport	Page 8
■ Care and cleaning	Page 9
■ Technical data	Page 10
■ Optional accessories	Page 10
■ Normal noises	Page 11
■ What to do if ... / After-sales service	Page 12
■ Safety instructions	Page 13

Select On/Off for buzzer at the end of the programme. **Reduced temperature for delicate fabrics** that require a longer drying time; e.g. polyacrylics, polyamide, elastane, acetate silk. Reduces creasing and prolongs the 'reduced ironing' phase after the programme has finished.

Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.

Do not leave children unsupervised near the dryer. Keep pets away from the dryer.

Preparation

Installation → page 8

Inspecting the dryer
Never start the dryer if it is damaged. Inform your after-sales service.

Connecting the mains plug
Make sure your hands are dry. Hold the plug only.

Sorting and loading laundry
Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading. See programme overview on page 7.

Programme selector

Additional functions	Display status/service	Display/Remaining time	Programme selector
Buzzer	o Dryer	h:min	Easy-Care Very Dry
Low Heat	o Iron Dry		Cupboard Dry
Reduced Ironing	o Anti-crease/End		Iron Dry
	o Container		Super Quick 40°
	o Filter		Sportswear
			Timed Progr. Warm 30'
			Woolens Finish

Start/Stop button

Press the Start/Stop button

Only use the dryer with the fluff filter inserted.

Buzzer	End of programme after 1-24 hours (button may need to be pressed several times) can always be set to the nearest full hour.
Low heat	Automatic cleaning of the heat exchanger.
Reduced ironing	Empty the condensation container. Clean the filter in the condensation container if necessary → page 9.
Container	Rinse the fluff filters under running water → page 4.
Filter	



Drying

Emptying condensation
Empty the container **after each** drying cycle, not during drying.
1. Remove the condensation container and hold it level.
2. Pour out the condensation.
3. Always push container in fully until it clicks into place.
If the **Container** indicator lamp flashes despite the container having been emptied → *Filter in condensation container*, page 9.

Cleaning the fluff filter
The fluff filter consists of two parts.
Clean the inner fluff filter **after every** drying cycle.
1. Open the door. Remove fluff from the door/door area.
2. Pull out the inner fluff filter and open it out.
3. Remove the fluff (by wiping the filter with your hand). If the fluff filter is heavily soiled or blocked, rinse it under running water and dry thoroughly.
Clean the outer fluff filter **after every 5** drying cycles:
4. Remove the outer fluff filter.
5. Open it and remove any fluff. Rinse under running water and dry thoroughly.
6. Close and re-insert the fluff filter.

Switching off the dryer
Turn the programme selector to **Off**. Do not leave laundry in the dryer.

Removing the laundry
Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **Reduced ironing** function is selected).

End of programme as soon as the **Anti-Crease/End** indicator lamp lights up.

Interrupt programme Adding or removing laundry.
The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.
1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

Do not pull out/empty the condensation container when drying is in progress.

Information on laundry ...

Labelling of fabrics
Follow the manufacturer's care information.
☑ Dry at normal temperature.
☑ Dry at low temperature → in addition, select **Low heat**.
☑ Do not machine dry.

Drying tips
- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7 **Wool finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Very Dry** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

Environmental protection/energy-saving tips
- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Important Information

Never operate the dryer without the fluff filters and/or condensation container with filter.

Fluff filters
During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process. The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → page 4.

Filter in the condensation container
The filter in the condensation container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensation container before cleaning the filter → page 4/9.

Fabrics
Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc. Empty all pockets. Do not dry non-breathable fabrics. Avoid drying items that produce a lot of fluff. Woollens should be refreshed only, using the woollens programme.

Programme overview

After drying, laundry is to be ...

Programme	max. 6 kg	max. 3 kg	max. 2 kg	max. 1.5 kg	max. 3 kg	max. 3 kg	max. 3 kg
Cottons	☑	☑	☑	☑	☑	☑	☑
Easy-Care	☑	☑	☑	☑	☑	☑	☑
Super Quick 40°	☑	☑	☑	☑	☑	☑	☑
Sportswear	☑	☑	☑	☑	☑	☑	☑
Woolens Finish	☑	☑	☑	☑	☑	☑	☑
Timed progr. Warm 30'	☑	☑	☑	☑	☑	☑	☑

Suitable for cottons, coloureds and linens.
For non-iron laundry made of synthetic fibres and mixed fabric, cotton.
For laundry made of synthetic fibres, cotton or blended fabrics (for example, that needs to be dried quickly). The values may differ from those specified depending on the type of fabric, composition of the laundry to be dried, residual moisture in the fabric and size of the load.
For fabrics with a membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry removable internal lining from jackets/trousers separately).
For mixed items of laundry made of cotton and easy-care fabrics.
For woollen fabrics suitable for washing machines. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.
For pre-dried, multi-layered fabrics or small, individual items of laundry. Also for subsequent drying.


Installation

- Scope of delivery: dryer, installation and operating instructions.
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.

1. Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.

Take all accessory parts out of the drum. The drum must be empty.

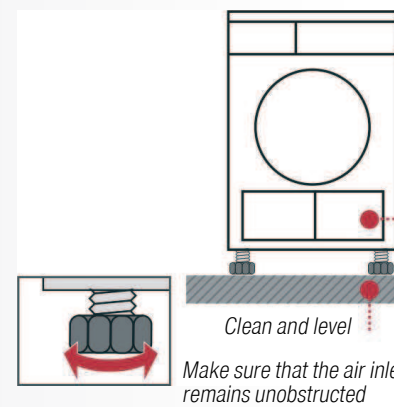

2. Mains connection

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection

Do not operate the dryer if there is a danger of frost.

Preparation

1. Empty the condensation container → page 4.
2. Select any programme using the programme selector.
3. Press the Start/Stop button → condensed water is pumped into the container
4. Wait 5 minutes and then empty the condensation container again.
5. Turn the programme selector to Off.

Transport

- Prepare the dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.

The dryer contains residual water; this can flow out if the dryer is tilted.

Care and cleaning

Appliance must be switched off.

Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. Cln appears in the display panel. Do not pull out the condensation container during the cleaning process.

Dryer housing, control panel, air intake

Remove detergent residues immediately. Wipe with a soft, damp cloth.

Filter in the condensation container

The filter is cleaned automatically when the condensation container is emptied. However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.

1. Pull out the condensation container.
2. Pull the filter out of its snap-in lock.
3. Clean the filter under running water or in the dishwasher.
4. Refit the filter.
5. Insert the condensation container so that it locks into place.

Only operate the dryer with the filter inserted.

Moisture sensor

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.

1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.

Do not use steel wool or abrasive materials.

Technical data

- **Dimensions (DxWxH)** 60 x 60 x 85 cm (height adjustable)
- **Weight** approximately 51 kg
- **Max. capacity** 6 kg
- **Condensation container** 4.0 l
- **Connection voltage** 220-240 V
- **Connected load** max. 1000 W
- **Fuse protection** 10 A
- **Ambient temperature** 5 - 35 °C
- **Product number** under the door
- **Production number** under the door

The rating plate can be found on the back of the dryer. These are guide values determined under standard conditions.

	Spin speed in rpm (residual moisture)	Drying time in min.**	Energy consumption in kWh**
Cottons 6 kg			
☐ Cupboard Dry*	1400 (approx. 50 %)	111	1.42
	1000 (approx. 60 %)	132	1.70
	800 (approx. 70 %)	153	1.98
☑ Iron Dry*	1400 (approx. 50 %)	81	1.05
	1000 (approx. 60 %)	102	1.33
	800 (approx. 70 %)	123	1.60
Easy-Care 3 kg			
☐ Cupboard Dry*	800 (approx. 40 %)	54	0.57
	600 (approx. 50 %)	68	0.72

*Test programs according to DIN EN 61121
**The values may differ from those given, depending on overvoltage and undervoltage, the type of fabric, composition of the laundry to be dried, the residual moisture in the fabric and the size of the load.

- **Drum interior light (depending on the model) (bulb E14, 25 W)**
The drum lights up after the door is opened or closed, and after the programme starts, and switches off automatically. Changing the bulb → page 12.

Optional accessories (from after-sales service using order number)

WMZ 20460 Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.


WTZ 11310 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer must be fastened to the washing machine using this connection set.

WTZ 11300
Same as WTZ 11310, but with pull-out worktop.

WTZ 10290 Installation underneath the worktop
Instead of the appliance covering plate, you must have a metal cover fitted by a specialist.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

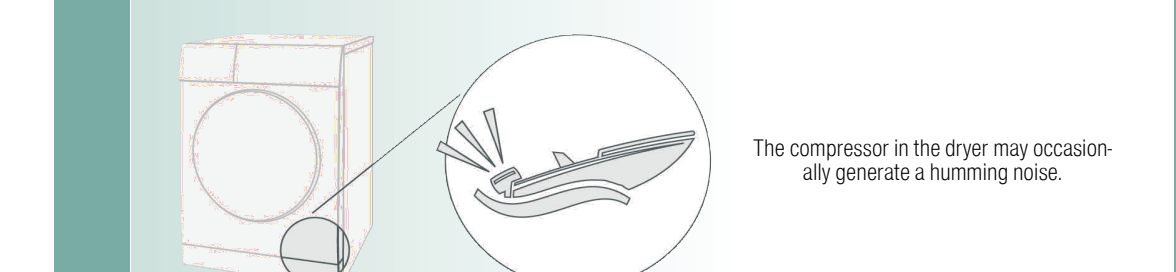


The compressor in the dryer may occasionally generate a humming noise.



The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

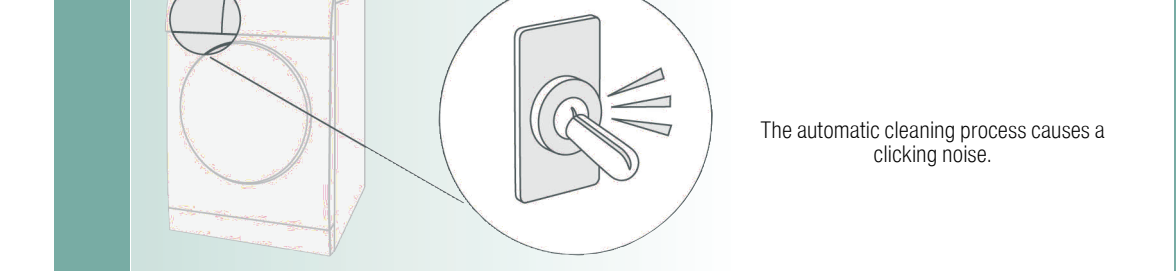

The automatic cleaning process causes a clicking noise.

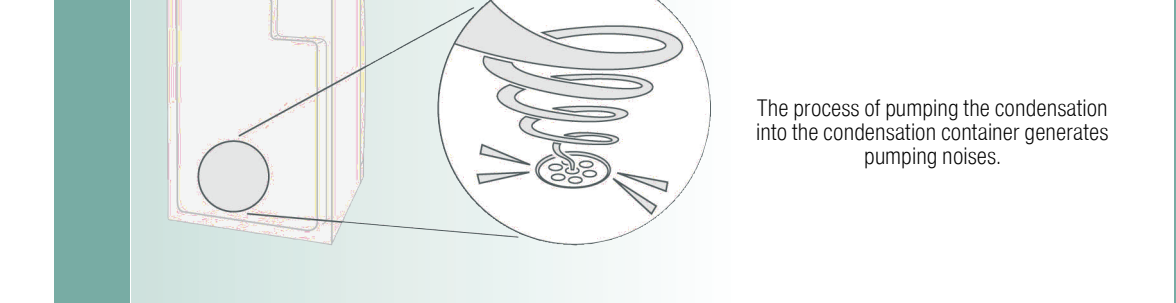

The process of pumping the condensation into the condensation container generates pumping noises.

What to do if...

If you cannot rectify a fault yourself, please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:
– GB 0844 8928979 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
– IE 01450 2655

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door). Turn the programme selector to Off and unplug the mains plug from the socket.

- The Start/Stop indicator lamp does not light up. Mains plug plugged in? Programme selected?
- The Container indicator lamp and the Start/Stop button are flashing. Empty the condensation container → page 4. Clean the condensation container filter if necessary → page 9. Dryer transported? → Wait 2 hours and start again.
- The Filter indicator lamp and Start/Stop button are flashing. Rinse the fluff filter under running water → page 4.
- Cln appears in the display panel. Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensation container.
- Dryer does not start. Start/Stop button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
- Water is leaking out. Make sure the dryer is level.
- The door opens by itself. Push the door closed until you hear it click into place.
- The required degree of dryness was not achieved or the drying time was too long. Rinse the fluff filters under running water → page 4. Empty the condensation container. Check the water drainage (if applicable). Ambient temperature greater than 35 °C? → Ventilate the room. Air inlet may be blocked → Keep clear. Was an unsuitable programme selected? → page 7. Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Power failure → Restart dryer. Fine layer of limescale on the moisture sensors → Clean the sensors → page 6.
- Laundry damp. Select the next drying programme up or use the Timed programme as a supplement → page 7. Warm laundry feels damper than it really is.
- The humidity in the room increases significantly. Make sure the room is sufficiently ventilated. Air inlet blocked? → Keep clear.
- Power failure. Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate.
- Other intermittent noises and vibrations. Not an error. Normal noises → page 11.
- Loud humming noise for several seconds. Has the condensation container been properly inserted? → Push the condensation container all the way in. Not an error. Normal noises → page 11.
- The interior light (depending on the model) is not working. Pull out the appliance plug, remove the cover cap in the interior above the door (use Torx 20 screwdriver) and replace the bulb → page 10. Close the cover cap. Never operate the dryer without a cover cap.

Safety instructions

Emergency ONLY use the dryer...
– Pull the appliance plug out of the socket immediately or disconnect the fuse.
– In rooms inside the house.
– To dry fabrics.

The dryer must NEVER...
– Be used for purposes other than those described above.
– Be modified in terms of its technology or properties.
– The dryer must not be used by children or persons who have not been instructed in its use.
– Do not leave children unsupervised near the dryer.
– Keep pets away from the dryer.
– Remove all objects from pockets, and lighters in particular → Risk of explosion.
– Do not lean or sit on the door → Risk of tipping.

Installation
– Secure loose cables → Risk of tripping.
– Do not operate a dryer if there is a risk of frost.
– Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
– The cable cross-section must be sufficient.


Mains connection
– Only use earth-leakage circuit breakers with the following symbol:

Operation
– The appliance plug and socket must be compatible.
– Do not use multiple plugs/connectors and/or extension cables.
– Do not touch or hold the appliance plug with wet hands → Risk of electric shock.
– Never pull the appliance plug out of the socket by its cable.
– Do not damage the mains lead → Risk of electric shock.

Defect
– Only load the drum with laundry.
– Check the contents before you switch the dryer on.
– Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → Risk of fire/explosion.
– Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → Risk of explosion
– Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material.
– When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → Risk of fire/explosion.
– Switch off the dryer once the programme has ended.
– The water from condensation is not drinking water and may be contaminated with fluff.

Spare parts
– Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service.
– Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.

Disposal
– Always pull the mains plug out of the socket before changing the bulb for the interior light → Risk of electric shock.
– Only use genuine spare parts and accessories for safety reasons.
– Pull out the appliance plug, then cut off the mains cable from the appliance. Dispose of at a municipal waste disposal facility.
– Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg.
– Packaging: Keep all packaging out of reach of babies and children → Risk of suffocation.
– All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.

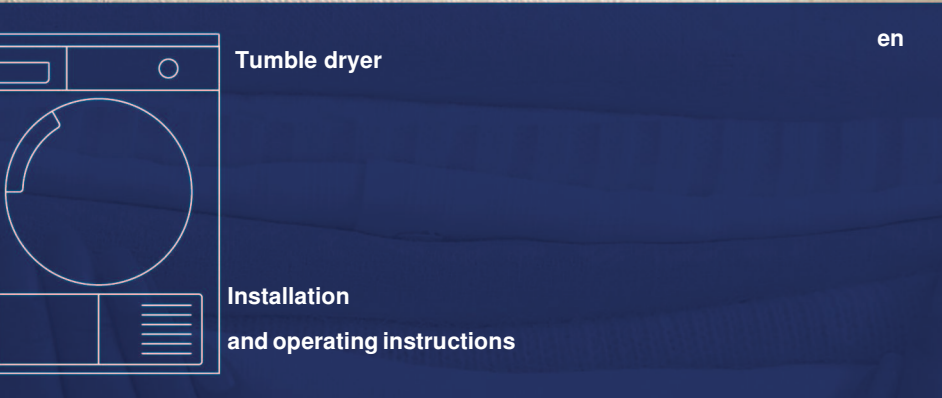

Observe the safety instructions on page 13.
Read these instructions before operating the dryer.

Your new dryer

Congratulations - you have chosen to buy a modern, high-quality Bosch domestic appliance.


The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements → page 6.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive  2002/96/EC which governs waste electrical and electronic equipment - WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com

Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.



Do not leave children unsupervised near the dryer.
Keep pets away from the dryer.


Preparation Installation → page 8



Never start the dryer if it is damaged.
Inform your after-sales service.



Make sure your hands are dry.
Hold the plug only.

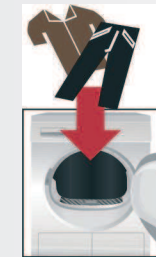

Sorting and loading

Remove all items from pockets.
Check for cigarette lighters.
The drum must be empty prior to loading.

See programme overview on page 7.

Selecting and adjusting the programme





 

 









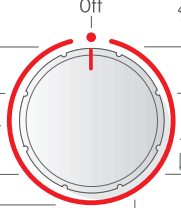






Select the programme

... and adapt to individual requirements

Contents

Page

■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Important Information	6
■ Overview of programmes	7
■ Installation	8
■ Frost protection / Transport	8
■ Care and cleaning	9
■ Technical data	10
■ Optional accessories	10
■ Normal noises	11
■ What to do if ... / After-sales service	12
■ Safety instructions	13

Additional functions	Display status/service	Display/Remaining time	Programme selector
Buzzer  Low Heat  Reduced Ironing 	<input type="radio"/> Drying  <input type="radio"/> Iron Dry  <input type="radio"/> Cupboard Dry  <input type="radio"/> Anti-crease/End  <input type="radio"/> Container  <input type="radio"/> Filter 		<div style="display: flex; justify-content: space-between;"> <div> <p>Easy-Care Very Dry </p> <p>Cupboard Dry </p> <p>Iron Dry </p> <p>Super Quick 40' </p> <p>Sportswear </p> <p>Timed Progr. Warm 30' </p> </div> <div style="text-align: center;"> <p>Off</p>  </div> <div> <p>Cottons Very Dry </p> <p>Cupboard Dry </p> <p>Iron Dry </p> <p>Mix Cupboard Dry </p> <p>Woolens Finish </p> </div> </div>
<input type="checkbox"/> Buzzer <input type="checkbox"/> Low heat <input type="checkbox"/> Reduced ironing	<input type="checkbox"/> Container <input type="checkbox"/> Filter	<p>h:min </p> <p>CIn</p>	<p>End of programme after 1-24 hours (button may need to be pressed several times) can always be set to the nearest full hour.</p> <p>Automatic cleaning of the heat exchanger.</p> <p>Empty the condensation container. Clean the filter in the condensation container if necessary → page 9.</p> <p>Rinse the fluff filters under running water → page 4.</p>



All buttons are sensitive and need to be touched gently.

Press the () button



Only use the dryer if the plug is inserted.

Select On/Off for buzzer at the end of the programme.

Reduced temperature for delicate fabrics that require a longer drying time; e.g. polyacrylics, polyamide, elastane, acetate silk.

Reduces creasing and prolongs the 'reduced ironing' phase after the programme has finished.

Inspecting the dryer

Connecting the mains plug


Loading laundry

Selecting the programme

Individual requirements

Start/Stop button

with the fluff filter

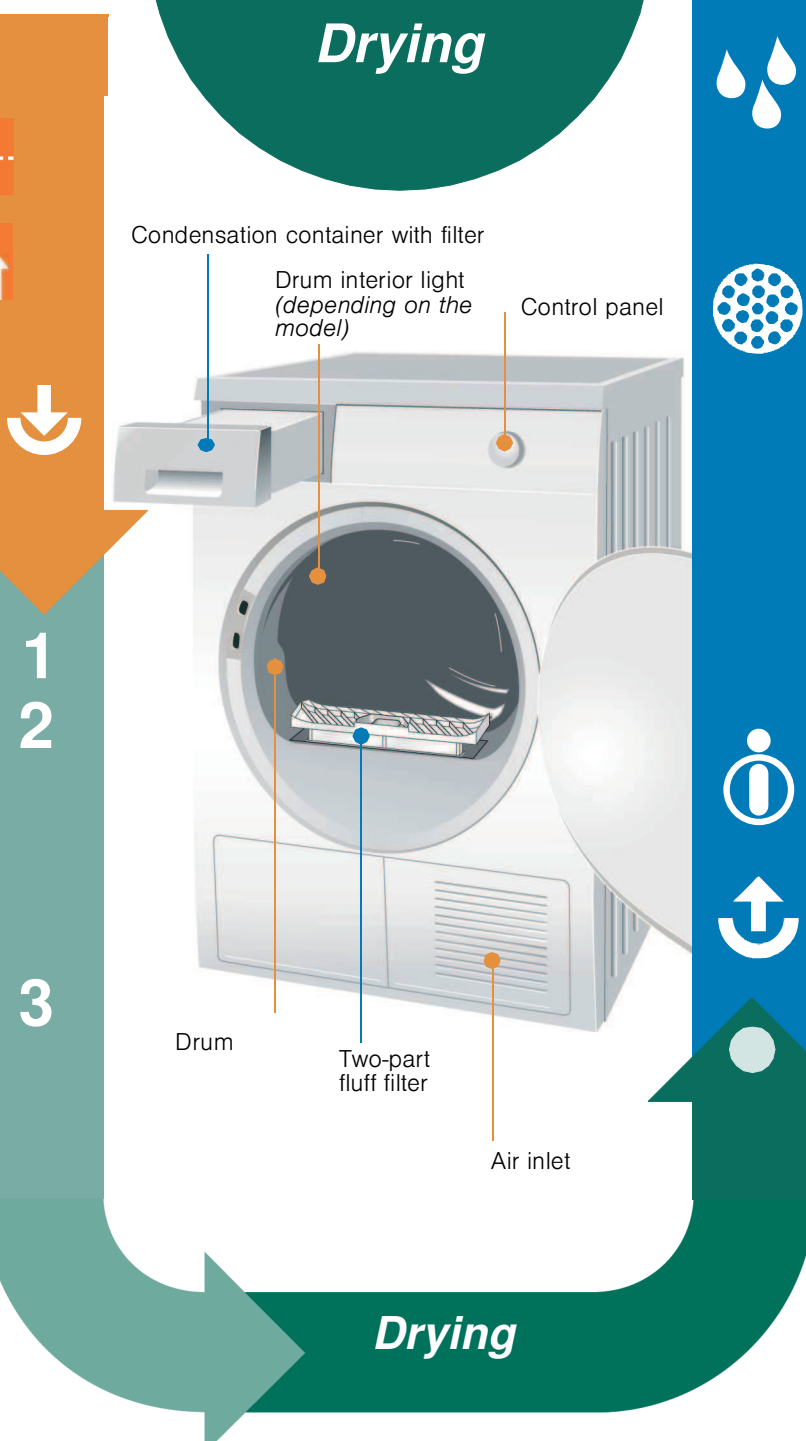

Drying

Drying

Do not pull out/empty the condensation container when drying is in progress.




Emptying condensation

Empty the container **after each** drying cycle, not during drying.

1. Remove the condensation container and hold it level.
2. Pour out the condensation.
3. Always push container in fully until it clicks into place.

If the **Container** indicator lamp flashes despite the container having been emptied → *Filter in condensation container, page 9.*

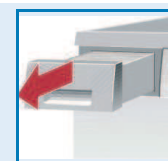

Cleaning the fluff filter


The fluff filter consists of two parts.

Clean the inner fluff filter **after every** drying cycle.

1. Open the door. Remove fluff from the door/door area.
2. Pull out the inner fluff filter and open it out.
3. Remove the fluff (by wiping the filter with your hand).
If the fluff filter is heavily soiled or blocked, rinse it under running water and dry thoroughly.


Clean the outer fluff filter **after every 5** drying cycles:

4. Remove the outer fluff filter.
5. Open it and remove any fluff.
Rinse under running water and dry thoroughly.
6. Close and re-insert the fluff filter.

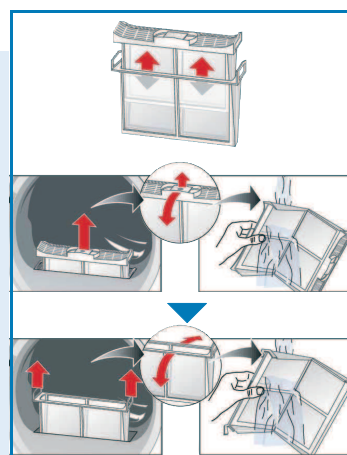

Switching off the dryer

Turn the programme selector to **Off**.
Do not leave laundry in the dryer.

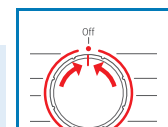

Removing the laundry

Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **Reduced ironing** function is selected).

End of programme as soon as the **Anti-Crease/End** indicator lamp lights up.



Interrupt programme

Adding or removing laundry.

The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.

1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- Dry at normal temperature.
- Dry at low temperature → in addition, select **Low heat**.
- Do not machine dry.



Always observe the safety instructions on page 13.

Do not tumble-dry the following fabrics, for example:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.



Drying tips

- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7 **Wool finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Very Dry** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Important Information

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensation container must be cleaned regularly.



Never operate the dryer without the fluff filters and/or condensation container with filter.

Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process.

The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → page 4.

Filter in the condensation container

The filter in the condensation container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensation container before cleaning the filter → page 4/9.

Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc. Empty all pockets.

Do not dry non-breathable fabrics.

Avoid drying items that produce a lot of fluff.

Woollens should be refreshed only, using the woollens programme.

Programme overview

see also page 5.



After drying, laundry is to be ...	T-shirt	Shirts	Trousers	Skirts/dresses	Sportswear	Work clothing	Anoraks	Towelling gowns	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/ towels
<ul style="list-style-type: none"> ironed lightly ironed not ironed mangled 														
Cottons max. 6 kg	Suitable for cottons, coloureds and linens.													
Iron Dry	✓		✓	✓		✓			✓		✓	✓		✓
Cupboard Dry									✓	✓	✓		✓	✓
Very Dry								✓	✓	✓	✓		✓	✓
Easy-Care max. 3 kg	For non-iron laundry made of synthetic fibres and mixed fabric, cotton.													
Iron Dry		✓	✓	✓	✓	✓			✓					
Cupboard Dry		✓			✓									
Very Dry							✓				✓	✓		
Super Quick 40' max. 2 kg	For laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric, composition of the laundry to be dried, residual moisture in the fabric and size of the load.													
Sportswear max. 1.5 kg	For fabrics with a membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry removable internal lining from jackets/trousers separately).													
Mix max. 3 kg	For mixed items of laundry made of cotton and easy-care fabrics.													
Woolens Finish max. 3 kg	For woollen fabrics suitable for washing machines. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.													
Timed progr. Warm 30' max. 3 kg	For pre-dried, multi-layered fabrics or small, individual items of laundry. Also for subsequent drying.													

1 010 / 9000576497



Robert Bosch Hausgeräte GmbH
Carl-Wery-Str. 34
81739 München, Germany

WTW84360AU

Installation



- Scope of delivery: dryer, installation and operating instructions.
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.


1.

Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.



Take all accessory parts out of the drum. The drum must be empty.

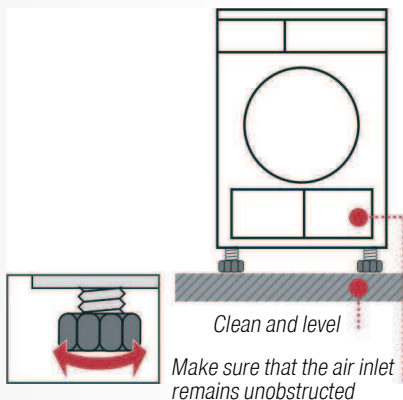

Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening. This will prevent a potentially fatal danger to children from locking themselves in.



2.

Mains connection see Safety instructions → page 13.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection



Do not operate the dryer if there is a danger of frost.



Preparation

1. Empty the condensation container → page 4.
2. Select any programme using the programme selector.
3. Press the **Start/Stop** button → condensed water is pumped into the container
4. Wait 5 minutes and then empty the condensation container again.
5. Turn the programme selector to **Off**.

Transport



- Prepare the dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.



The dryer contains residual water; this can flow out if the dryer is tilted.

Care and cleaning



Appliance must be switched off.



Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. **Cln** appears in the display panel. Do not pull out the condensation container during the cleaning process.



Dryer housing, control panel, air intake


Remove detergent residues immediately. Wipe with a soft, damp cloth.




Filter in the condensation container

The filter is cleaned automatically when the condensation container is emptied. However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.

1. Pull out the condensation container.

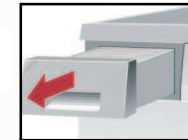


2. Pull the filter out of its snap-in lock.

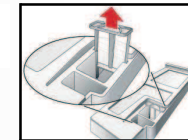

3. Clean the filter under running water or in the dishwasher.



4. Refit the filter.

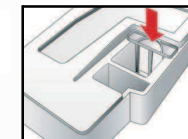

5. Insert the condensation container so that it locks into place.



Only operate the dryer with the filter inserted.



Moisture sensor

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.

1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



Do not use steel wool or abrasive materials.


 
 

 


Technical data

● Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approximately 51 kg
Max. capacity	6 kg
Condensation container	4.0 l
Connection voltage	220-240 V
Connected load	max. 1000 W
Fuse protection	10 A
Ambient temperature	5 - 35 °C
Product number	
Production number	under the door

The rating plate can be found on the back of the dryer.

- **Consumption rates** These are guide values determined under standard conditions.

	Spin speed in rpm (residual moisture)	Drying time in min.**	Energy consumption in kWh**
 Cottons 6 kg  Cupboard Dry*	1400 (approx. 50 %)	111	1.42
	1000 (approx. 60 %)	132	1.70
	800 (approx. 70 %)	153	1.98
 Iron Dry*	1400 (approx. 50 %)	81	1.05
	1000 (approx. 60 %)	102	1.33
	800 (approx. 70 %)	123	1.60
 Easy-Care 3 kg  Cupboard Dry*	800 (approx. 40 %)	54	0.57
	600 (approx. 50 %)	68	0.72

*Test programs according to DIN EN 61121

**The values may differ from those given, depending on overvoltage and undervoltage, the type of fabric, composition of the laundry to be dried, the residual moisture in the fabric and the size of the load.

- **Drum interior light** (depending on the model) **(bulb E14, 25 W)**

The drum lights up after the door is opened or closed, and after the programme starts, and switches off automatically. Changing the bulb → page 12.

Optional accessories (from after-sales service using order number)

WMZ 20460 Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.


WTZ 11310 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set.

WTZ 11300
Same as WTZ 11310, but with pull-out worktop.


WTZ 10290 Installation underneath the worktop
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

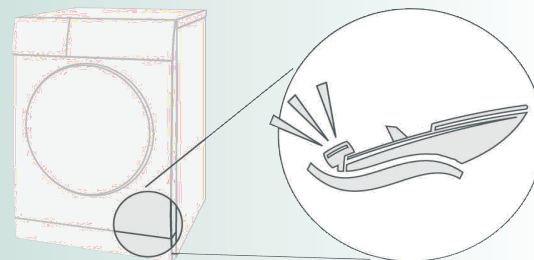


The compressor in the dryer may occasionally generate a humming noise.

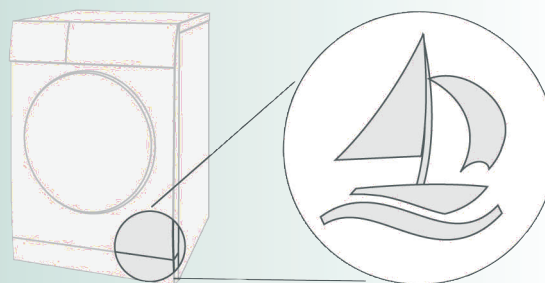

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

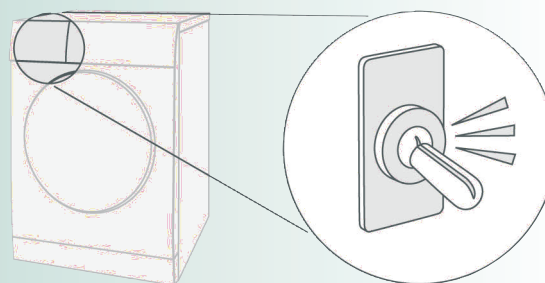

The automatic cleaning process causes a clicking noise.

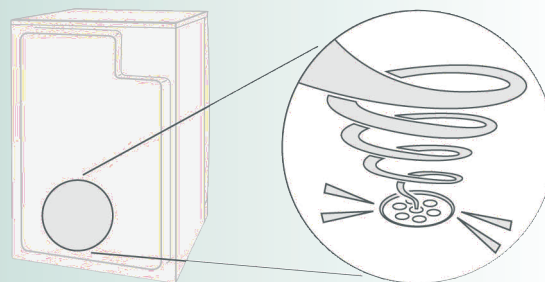

The process of pumping the condensation into the condensation container generates pumping noises.

What to do if...



If you cannot rectify a fault yourself, please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:

- **GB** 0844 8928979 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
- **IE** 01450 2655

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door).


Turn the programme selector to **Off** and unplug the mains plug from the socket.

● The Start/Stop indicator lamp does not light up.	Mains plug plugged in? Programme selected?
● The Container indicator lamp and the Start/Stop button are flashing.	Empty the condensation container → <i>page 4</i> . Clean the condensation container filter if necessary → <i>page 9</i> . Dryer transported? → Wait 2 hours and start again.
● The Filter indicator lamp and Start/Stop button are flashing.	Rinse the fluff filter under running water → <i>page 4</i> .
● CIn appears in the display panel.	Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensation container.
● Dryer does not start.	Start/Stop button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
● Water is leaking out.	Make sure the dryer is level.
● The door opens by itself.	Push the door closed until you hear it click into place.
● The required degree of dryness was not achieved or the drying time was too long.	Rinse the fluff filters under running water → <i>page 4</i> . Empty the condensation container. Check the water drainage (if applicable). Ambient temperature greater than 35 °C? → Ventilate the room. Air inlet may be blocked → Keep clear. Was an unsuitable programme selected? → <i>page 7</i> . Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Power failure → Restart dryer. Fine layer of limescale on the moisture sensors → Clean the sensors → <i>page 6</i> .
● Laundry damp.	Select the next drying programme up or use the Timed programme as a supplement → <i>page 7</i> . Warm laundry feels damper than it really is.
● The humidity in the room increases significantly.	Make sure the room is sufficiently ventilated. Air inlet blocked? → Keep clear.
● Power failure.	Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate.
● Other intermittent noises and vibrations.	Not an error. Normal noises → <i>page 11</i> .
● Loud humming noise for several seconds.	Has the condensation container been properly inserted? → Push the condensation container all the way in. Not an error. Normal noises → <i>page 11</i> .
● The interior light (<i>depending on the model</i>) is not working.	Pull out the appliance plug, remove the cover cap in the interior above the door (use Torx 20 screwdriver) and replace the bulb → <i>page 10</i> . Close the cover cap. Never operate the dryer without a cover cap.

Safety instructions



Emergency ONLY use the dryer...	– Pull the appliance plug out of the socket immediately or disconnect the fuse. – In rooms inside the house. – To dry fabrics.
The dryer must NEVER...	– Be used for purposes other than those described above. – Be modified in terms of its technology or properties.
Hazards	– The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from pockets, and lighters in particular → Risk of explosion . – Do not lean or sit on the door → Risk of tipping .
Installation	– Secure loose cables → Risk of tripping . – Do not operate a dryer if there is a risk of frost.
Mains connection	– Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol: – The appliance plug and socket must be compatible. – Do not use multiple plugs/connectors and/or extension cables. – Do not touch or hold the appliance plug with wet hands → Risk of electric shock . – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead → Risk of electric shock .
Operation	– Only load the drum with laundry. Check the contents before you switch the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → Risk of fire/explosion . – Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → Risk of explosion – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material. – When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → Risk of fire/explosion . – Switch off the dryer once the programme has ended. – The water from condensation is not drinking water and may be contaminated with fluff.
Defect	– Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service. – Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service. – Always pull the mains plug out of the socket before changing the bulb for the interior light → Risk of electric shock .
Spare parts	– Only use genuine spare parts and accessories for safety reasons.
Disposal	– Pull out the appliance plug, then cut off the mains cable from the appliance. Dispose of at a municipal waste disposal facility. – Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg. – Packaging: Keep all packaging out of reach of babies and children → Risk of suffocation . – All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.

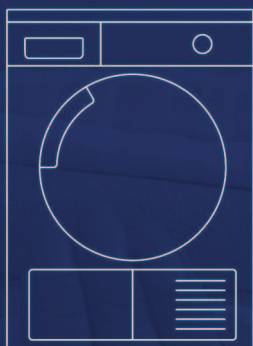

Tumble dryer

en

Installation
and operating instructions



BOSCH



Observe the safety instructions on page 13.



Read these instructions before operating the dryer.