

Thinking of you

Electrolux

THE BOSS

Cordless Upright **Z570B**

- Bagless
- Rechargeable
- Motor driven brush roll



Index

Important safeguards	2
General Information	3
Identifying Parts	4
How to Assemble	5
How to Use	6
How to Maintain	7, 8
Warranty Information	9

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the below:

Read all instructions before using this vacuum cleaner.

WARNING

To reduce the risk of fire, electrical shock or injury:

- Do not use outdoors or on wet surfaces.
- Do not operate the vacuum cleaner or use the charger if either are damaged in any way. If the vacuum cleaner is not working as it should be, has been dropped, damaged, left outdoors or exposed to water return it to an Electrolux service centre.
- To avoid excessive heat and damage to the unit or batteries, do not operate the vacuum cleaner while charging.
- This vacuum cleaner is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised at times when near this vacuum cleaner to ensure they do not play with it.
- Use only as described in this manual.
- Only use the charger provided to recharge; Electrolux model MEC-B5519
- Only use the battery pack provided.
- Do not pull or carry the charger by the cord, use the cord as a handle, close a door on the cord or pull the cord around any sharp edges or corners. Keep the cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Do not handle the vacuum cleaner or charger with wet hands.
- **DO NOT MUTILATE OR INCINERATE BATTERIES AS THEY WILL EXPLODE AT HIGH TEMPERATURES.**
- Leaks from battery cells can occur under extreme usage or temperature conditions. If battery liquid is exposed to skin, 1. wash quickly with soap and water, 2. neutralise with mild acid such as lemon juice or vinegar. If liquid gets into eyes, flush them immediately with clean water for 10 minutes and seek medical attention.
- The terminal on the vacuum cleaner should be kept free of objects and clean. While there is no shock hazard from the terminal, a burn could occur if metal objects are inserted into the terminal area.
- This vacuum cleaner creates suction. Keep hair, loose clothing, fingers, and all body parts away from opening and moving parts.
- Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
- Do not use without a filter in place. When servicing the unit, never put fingers or other objects into the fan chamber in case the unit could accidentally be turned on.
- Use extra care when cleaning stairs.
- Do not pick up flammable or combustible liquids such as gasoline, or in use where areas where such liquids may be present.
- Locate charger indoors in a cool, dry area not exposed to the weather to avoid electrical shock and/or cleaner damage.
- Keep your work area well lit.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS

GENERAL INFORMATION

This cordless vacuum cleaner is the answer for quick, convenient and easy vacuum cleaning. Use this cleaner for smaller cleaning tasks rather than using a larger size cleaner.

To get the maximum life from the batteries, be sure to charge for 14 -16 hours before the first use.

It is best to charge the batteries when the temperature is between 0 and 40 degrees Celsius. Other temperatures could damage the batteries.

When charging the charger unit may become warm to touch, this is a normal condition and does not indicate a problem.



DO NOT OIL. The motor has lubrication and a permanent seal.

Rating Plate

The model number is indicated on the rating plate which is located on the underside of the vacuum cleaner. For prompt and complete service, always refer to these numbers:

Model and Type No. _____

Serial No. or Data Code: _____

MODEL	TYPE	SERIAL NO.
VOLTS	WATTS	HERTZ
Electrolux Made in China		

Important Battery Disposal Information for Nickel-Metal Hydride Batteries



Ni-MH



Your vacuum cleaner uses nickel-metal hydride batteries in a removable pack. To protect our environment, please dispose of the battery pack when the batteries no longer hold a charge. Please refer to your local city council guidelines for safe battery disposal methods.

NOTE: Remove the battery pack only when the batteries no longer hold a charge and you plan to dispose of them.

IDENTIFYING PARTS

NOTE: The charger and battery are in the packing material on the shipping carton.



- 1. Body
- 2. Floor Nozzle
- 3. Handle
- 4. On/ Off Switch
- 5. Dust Cup Latch
- 6. Dust Cup
- 7. Filter Assembly
- 8. Battery Pack
- 9. Charger Connection
- 10. Charger Light for Battery
- 11. Charger Plug
- 12. Charger
- 13. Stair Cleaning Hand Grip
- 14. Handle Button

HOW TO ASSEMBLE

Attach Handle

1. Locate the handle and body
2. Line up the handle with the hole in the top of the body. The handle loop should be facing forward.
3. Push the handle down into the body while pressing the button on the back of the body. The handle will click into place.
4. There are two handle positions available; the handle fully extended upwards, or down against the body.
5. The button needs to be depressed to raise and lower the handle

Insert Battery

Hold the battery so your thumb is positioned on the thumb grip button and push completely into the body until the battery clicks into place.

To Remove Battery


Grasp the end of the battery using the thumb grip and pull out of the body.

NOTE: To get the maximum life from the batteries, be sure to charge for 14 -16 hours before the first use. When charging the charger unit may become warm to touch, this is a normal condition and does not indicate a problem.

NOTE: For extended battery run time and to prevent long fringes of some area rugs from wrapping around the brush roll, place switch on 'Floor' (brush roll off) position.

NOTE: Cleaner will not run when charger is connected and the battery is in the unit.


CAUTION: To avoid risk of fire, only use genuine Electrolux replacement battery packs. To purchase battery packs please contact your local Electrolux service center or call Electrolux on 1300 365 305.

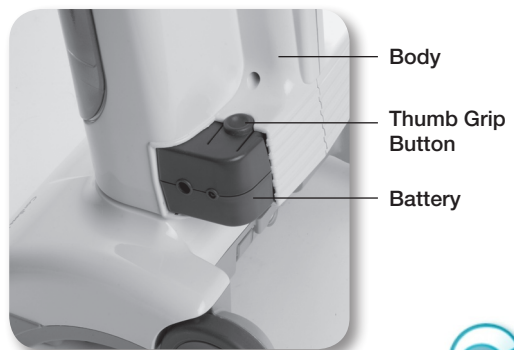

HOW TO USE

Power Switch

The power switch has three positions Off, Floor (for hard surface cleaning) and Carpet.

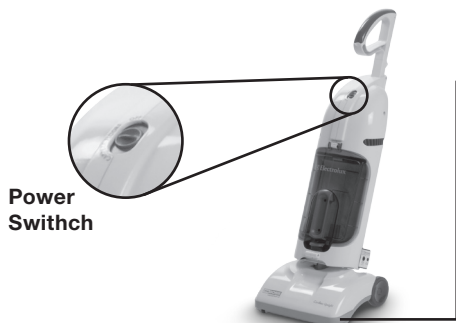

Nozzle with Edge Cleaner

Airflow under the nozzle automatically directs suction to the edges and corners for maximum full width cleaning.

Experiment with the 'Carpet' setting on your hard floor surfaces, sometimes the brush roll function can improve cleaning efficiency.

Dual Uses

Push the handle button to release the handle lock. The handle will slide freely until it finds one of the two available handle positions, where it will automatically lock into place. With the handle collapsed the unit is ideal for cleaning stairs, and for compact storage. With the handle fully extended, the unit is ideal for floor cleaning.



HOW TO MAINTAIN

The instructions given in this booklet serve as a guide to routine maintenance to keep the cleaner operating at top efficiency. Be sure to empty the dust cup after each use.

Empty Dust Cup



1. Pull dust cup latch up.
2. Swing dust cup out from body and up off the dust cup hook on the body.
3. Leaving the dust cup filter in the dust cup, shake contents of dust cup into a waste container. If you are vacuuming up much loose carpet or pet hair, remove the filter (to clean dust cup filter refer to dust cup filter section).
4. To replace dust cup, fit dust cup down onto hook.
5. Swing down and push gently into the body until the dust cup clicks into place.


HOW TO MAINTAIN (continued)

Cleaning the Dust Cup Filter

Cleaning of the dust cup filter is recommended to maintain maximum cleaner performance and life span.

1. Remove the dust cup.
2. Slide the dust cup filter out of the dust cup.
3. Shake or brush the dust and dirt from the filter. On the back of the dust cup is a scraper that will help remove debris from the filter. It is recommended that this be done outdoors.
4. Replace the filter with the top facing up to ensure proper filter installation.

If the filter is damaged or torn replace with a new one. To purchase filters please contact your local Electrolux service centre or call Electrolux on 1300 365 305.

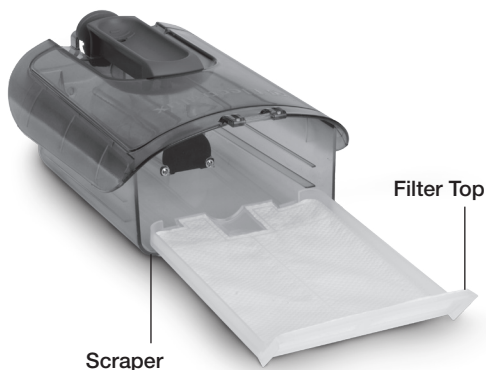

Maintaining a Charge in the Battery

The charger can be used in two different ways. One way is with the battery installed in the unit, the other is with the battery out of the unit, sitting on a counter/ shelf next to an outlet. Once the battery is connected to the charger and the charger is plugged in to an outlet, the charger light will glow to indicate the battery is charging.

Battery Charged in Unit



Battery Charged Out of Unit



NOTE: The power switch should be in the OFF position while the battery is charging.

NOTE: If the battery is charged while in the unit, be certain to disconnect the charger plug from the battery before lowering the handle.

NOTE: The cleaner will not run while the charger is connected and the battery is in the unit.

NOTE: The charger light indicates power is going to the battery. If the battery is connected to the charger and the light is not on, please contact your local Electrolux service centre or Electrolux customer service on 1300 365 305.

NOTE: It is OK to leave the cleaner on a constant charge so it is always ready for use, but not necessary. If the cleaner will not be used for several weeks, it is advised to unplug the cleaner.


HOW TO MAINTAIN (continued)

Brush Roll

NOTE: Turn off your vacuum cleaner and remove the battery before inspecting the brush roll.

The brush roll is designed to efficiently remove embedded dirt from carpeted surfaces. Through normal use hair, thread, string, etc can wrap around the revolving brush roll and result in reduced performance.

To check the brush roll for debris turn the cleaner nozzle over and inspect the brush roll for wrapped debris. Use a pair of scissors to remove the debris. When the brush roll is clean re-install the battery and resume cleaning.

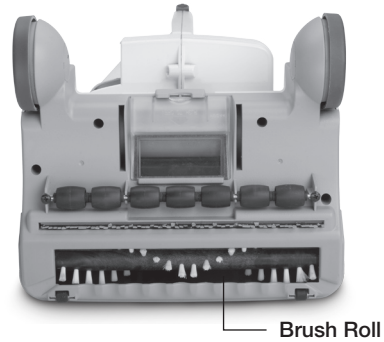

How to Check for Blockages

NOTE: Turn off your vacuum cleaner and remove the battery before inspecting the cleaner for blockages.

If suction performance diminishes and the battery is still strong, see below for how to check for blockages in the suction path.




1. Remove the dust cup and set aside, remove the battery and set aside.



2. Re-install the dust cup.



3. Inspect for blockages inside hole area at base of body opening. Use a pointed object to remove any blockages.

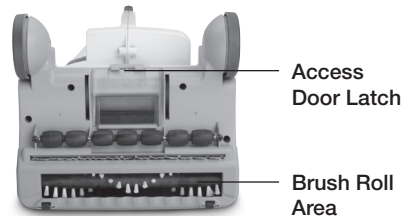

4. Turn the vacuum cleaner over and inspect the dirt channel in the brush roll area. An access door can be removed by pulling back on access door latch and lifting up. Remove any blockages and re-install the access door to resume cleaning.

WARRANTY for sales in Australia and New Zealand

APPLIANCE: Electrolux Floorcare

This document sets out the terms and conditions of product warranties for Electrolux or Volta branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your appliance.

General Terms and Conditions

1. In this warranty
 - (a) 'Electrolux' means Electrolux Pty Ltd ABN 21 000 015 136 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
 - (b) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
 - (c) 'Warranty Period' means
 - (i) where you use the Appliance for personal, domestic or household purposes in Australia the period of 24 months and in New Zealand the period of 24 months;
 - (ii) where you use the Appliance for commercial purposes, in Australia the period of 3 months and in New Zealand the period of 3 months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
 - (d) 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
 - (a) The Appliance is damaged by:
 - (i) accident;
 - (ii) misuse or abuse, including failure to properly maintain or service;
 - (iii) normal wear and tear;
 - (iv) power surges, electrical storm damage or incorrect power supply;

- (v) incomplete or improper installation;
 - (vi) incorrect, improper or inappropriate operation;
 - (vii) insect or vermin infestation.
 - (b) The Appliance is modified without authority from Electrolux in writing.
 - (c) The Appliance's serial number or warranty seal has been removed or defaced.
 - (d) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
8. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

Limitation of Liability

9. To the extent permitted by law:
 - (a) Electrolux excludes all warranties other than as contained in this document;
 - (b) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.
10. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):
 - (a) in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
 - (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice: Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

This document sets out the terms and conditions of product warranties for Electrolux or Volta branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your appliance.

FOR SERVICE & SPARE PARTS OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SERVICE CENTRE IN AUSTRALIA, Please call 1300 366 366 or visit www.electroluxservice.com.au.

FOR SERVICE & SPARE PARTS OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SPARE PARTS CENTRE IN NEW ZEALAND, Please call 0508 730 730.

Thinking of you

 **Electrolux**

Z570B

IFU Part Number: 70424B

appl
Austr