




Thinking of you
Electrolux

ZAS1000A


AIRSPEED TECHNOLOGY

High
velocity
airflow

 Powerful
cleaning
performance

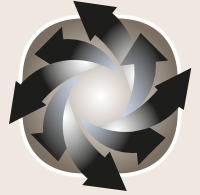

 AIRSPEED TECHNOLOGY
Airspeed Technology for
high velocity airflow

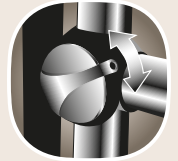

DIRECTIONAL SUCTION VALVE
Directs air to floor or hose for optimal
cleaning of different surfaces



MOTORISED BRUSH ROLL
For deep down carpet cleaning
and pet hair pick up

airspeed

High velocity airflow. Powerful cleaning performance.

Important safeguards 3

Before using your vacuum cleaner 4

Identifying parts of your vacuum cleaner 5

How to use your accessories 6

How to empty the dust container
and maintain the HEPA filters 7

How to maintain your vacuum cleaner (cleaning the
brush roll, mini turbo nozzle, how to clear a blockage) 8

Trouble shooting 10

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

WARNING

To reduce the risk of fire, electric shock, or injury:



- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum when plugged in.** Turn off the switch and unplug the electrical cord when not in use and before servicing.
- This appliance is not intended for use by any persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service centre before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- Do not run vacuum over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- This vacuum creates suction and contains a revolving brushroll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not place vacuum on furniture or stairs as the brushroll may cause damage. Use extra care when cleaning on stairs. Place vacuum on floor with the handle in storage position while using attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dustbin or filter(s) in place.
- Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your vacuum indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.
- Unplug before connecting turbo nozzle.

PLEASE SAVE THESE INSTRUCTIONS

WARNING

The brush in the cleaning head rotates at high speed and can cause damage to the mains supply cable if the vacuum passes over it during cleaning operations.

Care should be taken to ensure that this does not happen. If the cleaning head has accidentally passed over the mains supply cable the following action should be taken:

1. Switch off and remove the plug from the socket outlet.
2. Examine the mains supply cable for damage (only after removing the plug from the socket outlet).
3. If there is any sign of damage to the supply cable it **MUST** be renewed. The repair **MUST** be carried out by an Electrolux Service Agent or a similar qualified person.
4. **NEVER** use the machine with a damaged mains supply cable.

Safety requirement and warning

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are given supervision or instructions concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Always disconnect the plug from the mains before cleaning or maintaining the appliance. Never use the vacuum cleaner without its filters.

Caution This appliance contains electrical connections:

- Never vacuum any liquid.
- Do not immerse in any liquid for cleaning.
- The hose should be checked regularly and must not be used if damaged.

The above can cause serious damage to the motor, which is not covered by the warranty.

 
Never use vacuum cleaner

- Close to flammable gases, etc.
- On sharp objects.
- On hot or cold cinders, lit cigarette butts, etc.
- On fine dust, for instance plaster, concrete, flour.

Power cord precautions

- Regularly check that the plug and cord are not damaged. Never use the vacuum cleaner if the cord is damaged.
- If the cord is damaged, it must be replaced only by an authorized Electrolux service centre in order to avoid a hazard. Damage to the vacuum cleaner's cord is not covered by the warranty.
- Never pull or lift the vacuum cleaner by the cord.

All servicing and repairs must be performed by an authorized Electrolux service centre. Store the vacuum cleaner in a dry place.

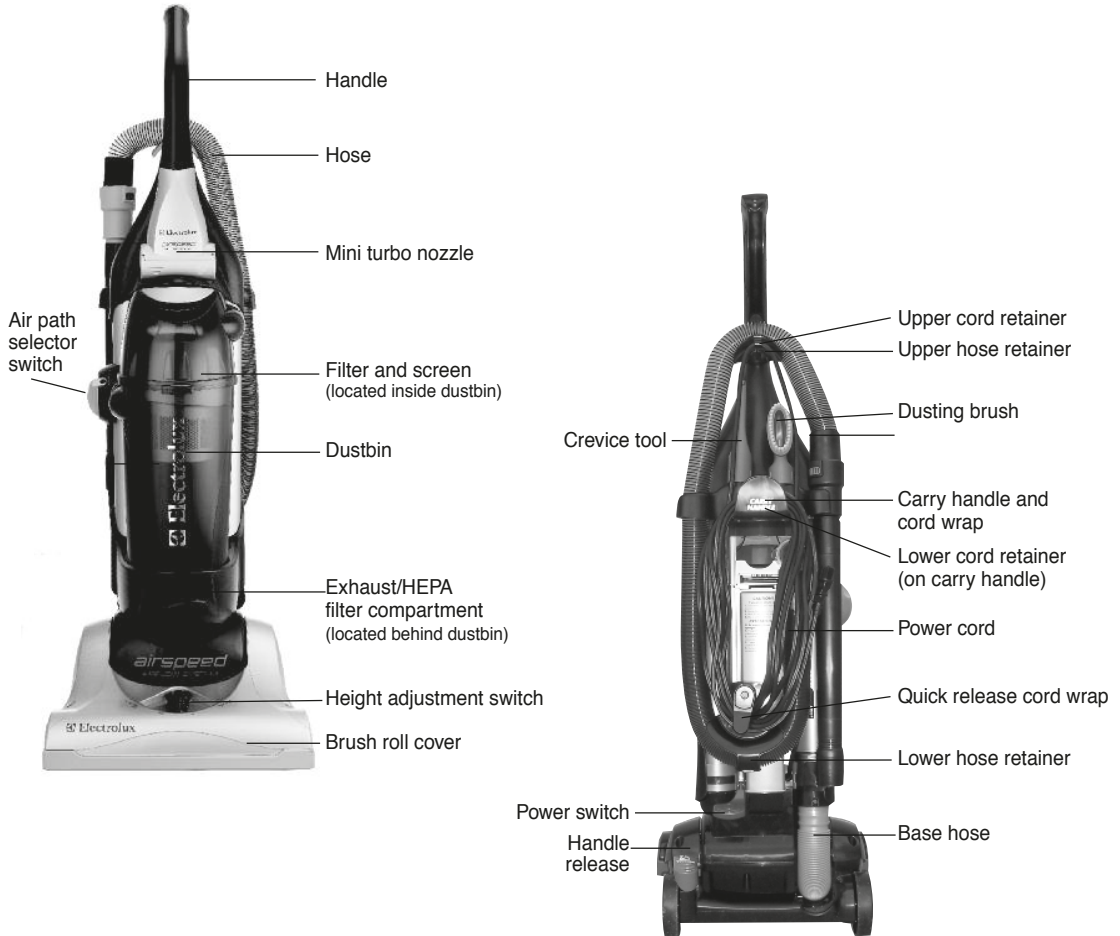

Use Care to Dispose or Recycle Properly

 
 
This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



CAUTION: Do not place the cleaner on furniture or steps for any period of time as the brushroll may cause damage. Place the cleaner on the floor with the handle in the upright/storage position while using accessories. Do not allow the cleaner to tilt forward when using accessories.

Before using accessories



- 1) Handle must be in upright position.
- 2) Raise height adjustment to 'high carpet.'
- 3) Turn air path selector knob to 'tools.'

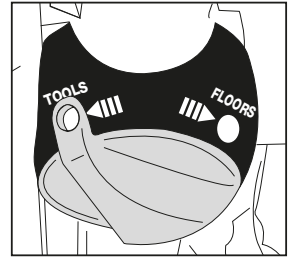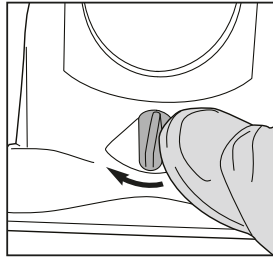

3-Position wand

Loosen wand and hose from back of vacuum.

  - Push tool onto end of wand.
- For longer wand, slide off wand 2 and turn over, then push opposite end onto wand 1.
- For short wand, push hose release button to remove wand 1. Attach tool to end of hose.

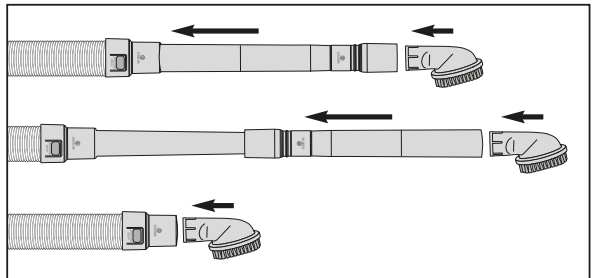

Crevice tool

Use for baseboards, corners and tight spaces.



 
 
 
 
Dusting brush

Use for furniture, drapes and vents.



Mini turbo nozzle


Use for furniture and stairs.

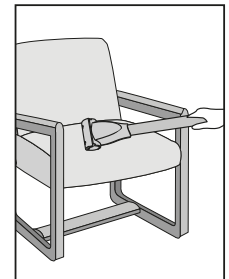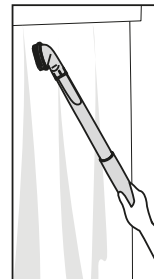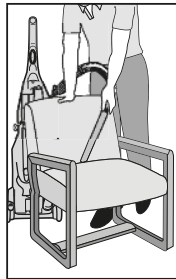


Bare floor nozzle and wand

(with some models or available for purchase)

 Use for hard surfaces.

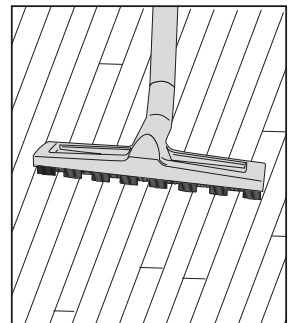

 
 READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER. Moving parts! Power switch is marked  for ON-OFF.

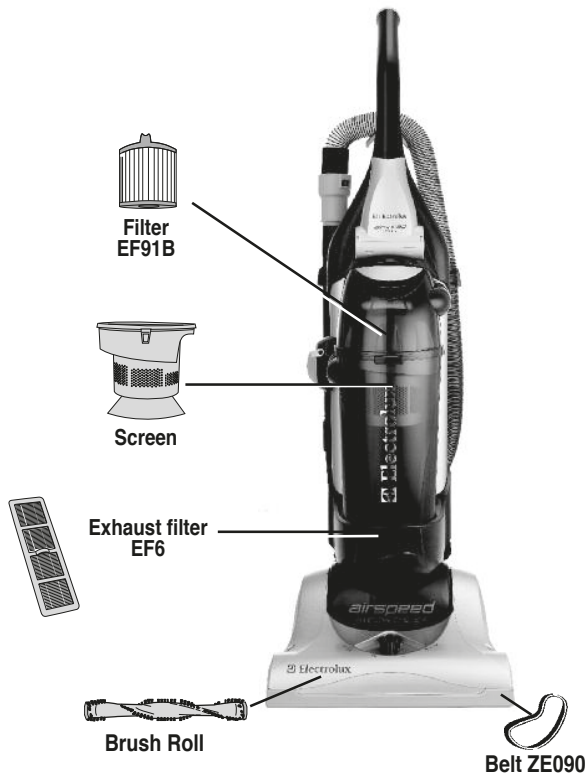

DUSTBIN – Empty after each use




 Press lever to release bottom lid.
Debris will empty.




Close bottom lid
until it clicks.

 FILTER EF91B – Replace or clean regularly with filter brush to maintain suction



 Empty dustbin. Pull For quick clean: tap filter. To clean thoroughly: grasp back latch to lift off lid. filter and twist to remove from lid. Shake dust from filter




Remove screen. Rinse screen, filter and dustbin. Dry thoroughly.

Align tab with slot to reinstall screen.

Reinstall filter. Align lid at front; press down until lid snaps into place.

 EXHAUST FILTER EF6 – Replace every 6 months

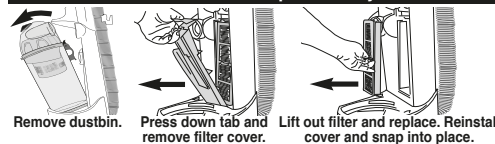

Remove dustbin.

Press down tab and remove filter cover.

Lift out filter and replace. Reinstall cover and snap into place.

BRUSH ROLL – Clean monthly



BELT ZE090 – Replace worn, cut or out of shape belt

Proprietary Carpet Conditioning and Air Freshening Materials

After using proprietary carpet conditioning powders, it is recommended that the filters be changed. Some of these preparations contain substances which if left in the vacuum for extended periods could damage the plastic mouldings which form the structure of the vacuum.

Many air fresheners, household deodorants, sprays and polishes contain a highly flammable gas propellant. Because of this, it is particularly important that these products are used strictly in accordance with the relevant manufacturer's instructions.

It is essential that none of the above products are sprayed directly into the vacuum or any of its filters, hose assembly, dustbag chamber or dustbin.

⚠ Make sure vacuum cleaner is turned off and power cord is unplugged.

Maintain brush roll



Motor pulley can become hot with normal use.

Remove hair and threads from brush roll periodically. Do not remove end caps.

⚠ Check belt ZE090. Replace if worn, cut or out of shape. Avoid touching the motor shaft when checking brush roll or belt.

How to replace brush roll or belt

- 1) Step on handle release to lower handle flat onto floor (Fig.1).
- 2) Remove 4 screws from brush roll cover. (Fig. 2).
- 3) Lift off brush roll cover. (Fig. 3).
- 4) Remove brush roll and belt. Thread new belt around motor shaft and brush roll (Fig. 4).
- 5) Insert left end of brush roll first. Make sure end cap fits into base. Pull right side of brush roll to stretch belt and insert right end cap into base (Fig. 5). Make sure it slides into position.
- 6) Rotate brush roll 2 turns to center belt.
- 7) Replace brush roll cover (Fig. 3).
- 8) Replace 4 screws (Fig. 6).

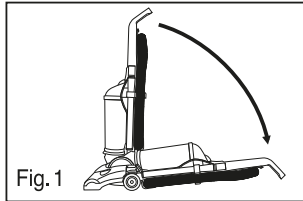 


Fig. 1

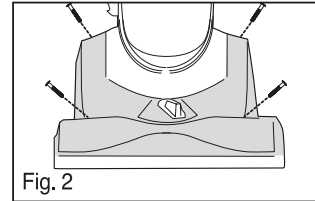 


Fig. 2

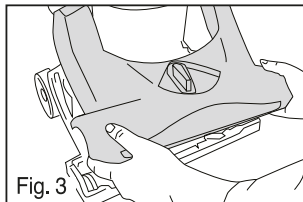 


Fig. 3

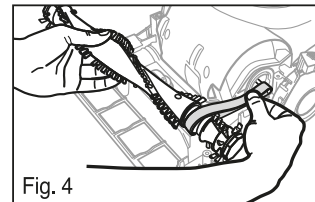 


Fig. 4

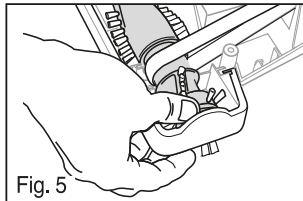 


Fig. 5

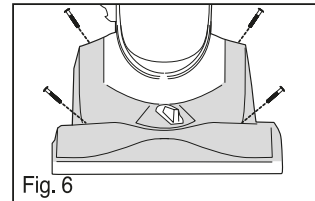 


Fig. 6

⚠ How to Clear a Blockage
Make sure vacuum is turned off and power cord is unplugged.

Hose blockage

- 1) Remove hose from hose retainer. Flex the hose to loosen any blockage (Fig.1).
- 2) Remove dustbin. Set air path knob to 'floors.' Use finger to check for debris. (Fig 2)
- 3) **Base hose** – Pull down to loosen end of base hose. Use finger to clear blockage. Snap hose end back up into position (Fig 3).
- 4) **Hose connector** – Pull out on left side tab to remove connector. Remove debris. Align tab at right and snap connector back into place (Fig. 4).

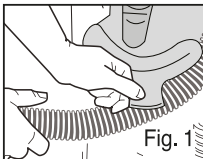 


Fig. 1

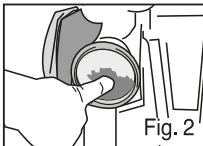 


Fig. 2

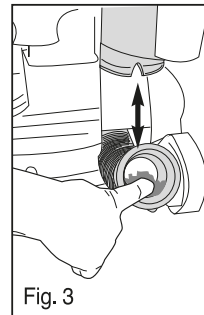 


Fig. 3


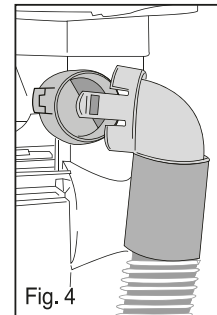 



Fig. 4

How to Maintain Mini turbo nozzle

 
- 1) Turn nozzle onto back side. Remove 1 screw.

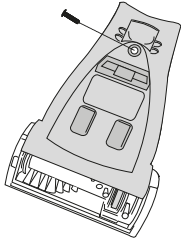

 
- 2) Rotate lower part of cover down over brush and lift off cover.

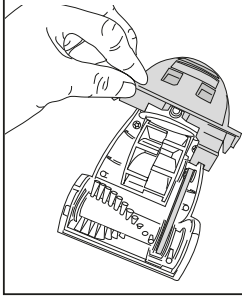

 - 3) Clear blockage from brush roll area. Use scissors to clip threads or hair.

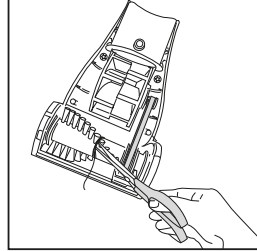

 - 4) Place cover back into position. Tighten screw.

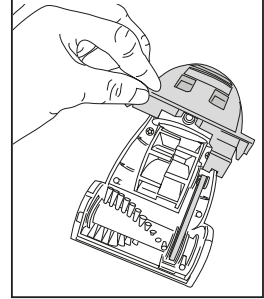

Thermal Cut-Off

This vacuum has a special thermostat that protects the vacuum in case of motor overheating. If the vacuum switches off, turn the switch to off position and unplug the vacuum. Check the vacuum for a possible source of overheating such as a full dustbin, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum. After the 30 minute period, plug the vacuum back in and push the on/off switch On (I). If the vacuum still does not run, please call Electrolux Customer Care Helpline.

Service

Should you require service on your Electrolux vacuum, please telephone Electrolux Customer Care HELPLINE on 1300 365 305 (Aus) or 0508 730 730 (NZ). Before requesting service, please check whether your problem can be resolved in the Trouble shooting section on page 10.

New filter pads, brush rolls and drive belts can be obtained from Electrolux Retailers. If difficulty is experienced in obtaining spares, please contact Electrolux Customer Care HELPLINE.

Service Checklist

- If your vacuum will not operate, check the plug connection, plug fuse and mains fuse.
- Never allow the dustbin to become so full that it impedes the air flow, thus reducing the cleaning efficiency of the machine. The character of household dust and its effect on the air flow through the machine may vary considerably. Fluffy dust allows air to pass through readily whereas fine powdery dust or proprietary cleaning powders pack tightly in the dustbin, offering greater resistance to air flow and will reduce cleaning efficiency if the cup becomes overloaded.
- Always store your vacuum and spare dust filters in a dry place.
- Renew the filter pads regularly. This is essential to ensure continued high filtration of dust particles.

- Sucking up such items as stockings, clippings of cloth, sizeable pieces of paper, wrappings from cigarette packets or sweets etc., may block the hose. Electrolux regrets that the clearing of blocked hoses cannot be regarded as service that can be given free of charge, under the guarantee. Should a blockage occur, first disconnect the vacuum from the electricity supply, refer to section headed "How to Clear a Blockage." If these operations are not successful, contact Electrolux Customer Care HELPLINE 1300 365 305 (Aus), 0508 730 730 (NZ).
- Never pick up hot cinders or lighted cigarette ends.
- **Make certain that your vacuum does not come into contact with water or any other liquid. It is not designed as a wet pick up vacuum, and must never be used on damp carpets or wet floors.**

Important – in the event of the mains supply cable of this vacuum requiring replacement, we recommend that this be carried out by Electrolux Service Staff.

Spares

New filters, brush rolls and drive belts can be obtained from Authorised Electrolux Dealers and electrical retailers. If difficulty is experienced in obtaining spares please call Electrolux Customer Care HELPLINE 1300 365 365 (Aus), 0508 730 730 (NZ). or visit our website at www.electrolux.com.au



Make sure vacuum cleaner is turned off and power cord is unplugged.


Problem	Cause	Solution
Motor will not start.	Power plug	<ul style="list-style-type: none"> • Push plug securely into outlet, try another outlet or check circuit breaker.
	Power switch	<ul style="list-style-type: none"> • Step on power switch to turn vacuum on.
	Thermal cut-off	<ul style="list-style-type: none"> • See above.
Vacuum does not clean carpet or bare floor.	Dustbin and filter	<ul style="list-style-type: none"> • Empty dustbin, clean and/or change filter. • Clean or replace filters regularly to maintain suction. Page 7 • If picking up fine dust, the dustbin may not look full, but a fine substance tends to reduce suction when it blocks air flow through the filter and screen. Refer to page 7 for filter maintenance. Make sure filter, screen and dustbin are installed properly.
	Air path selector	<ul style="list-style-type: none"> • Turn selector knob to 'floors.'
	Belt	<ul style="list-style-type: none"> • Replace a worn, cut or out of shape belt. Page 8
	Hose	<ul style="list-style-type: none"> • Remove clogs from the hose that restrict the airflow. Make sure hose is replaced into hose retainer. Page 8
	Bare floor setting	<ul style="list-style-type: none"> • For bare floor cleaning, turn height adjustment knob to bare floor position.
	Carpet height setting	<ul style="list-style-type: none"> • Turn height adjustment knob to another position.
No suction at the end of hose.	Dustbin and filter	<ul style="list-style-type: none"> • Empty dustbin, clean and/or change filter. • Clean or replace filters regularly to maintain suction. Page 7 • If picking up fine dust, the dustbin may not look full, but a fine substance tends to reduce suction when it blocks air flow through the filter and screen. Refer to page 7 for filter maintenance. Make sure filter, screen and dustbin are installed properly.
	Air path selector	<ul style="list-style-type: none"> • Turn selector knob to 'tools.'
	Hose	<ul style="list-style-type: none"> • Remove clogs from the hose that restrict the airflow. Make sure hose is replaced into hose retainer. Page 8
Turbo nozzle will not turn.	Rotating brush	<ul style="list-style-type: none"> • Check turbo nozzle for debris. Page 9 • If no suction at end of hose, turn selector knob to 'tools.'
Vacuum is hard to push.	Vacuum height setting	<ul style="list-style-type: none"> • Adjust knob to a higher position.
	Belt	<ul style="list-style-type: none"> • Replace a worn, cut or out of shape belt.
Burning smell; brush roll will not turn.	Belt	<ul style="list-style-type: none"> • Check brush roll for debris. Page 8 • Replace broken or out of shape belt. Page 8



Thinking of you
Electrolux



 MINI TURBO NOZZLE
For cleaning furniture and upholstery

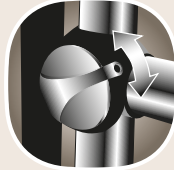

DIRECTIONAL SUCTION VALVE
Directs air to floor or hose for optimal cleaning of different surfaces



HEPA FILTRATION
For a healthier home environment



BAGLESS
No need to purchase bags



POWERFUL MOTOR
For powerful suction



MOTORISED BRUSH ROLL
For deep down carpet cleaning and pet hair pick up



Electrolux Floor Care and Small Appliances

Electrolux Pty Ltd ACN 000 015 136
57 - 63 Fairchild Street, Heatherton, VIC 3202, Australia
Ph: (03) 8581 7300 Customer Service - Ph:1300 366 366
www.electrolux.com.au

Electrolux Floor Care and Small Appliances

A division of Electrolux (NZ) Limited
3 - 5 Niall Burgess Road, Mt. Wellington, Auckland, New Zealand
Ph: (09) 9573 2220 Customer Service - Ph: 0508 730 730
www.electrolux.co.nz

*Due to the Electrolux policy of continual product development; specifications, colours and details of our products and those mentioned in this manual are subject to change without notice.