
LIEBHERR

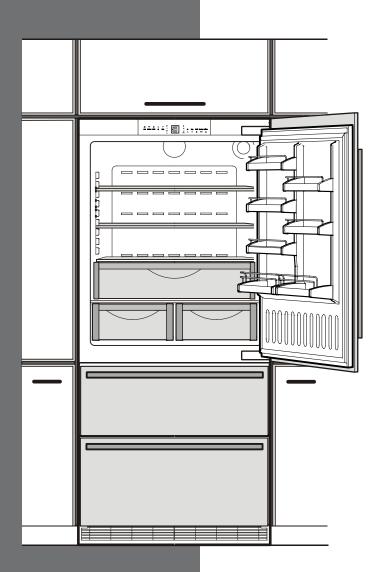

Installation Instructions

For Fully Integrated NoFrost Combined Refrigerator-Freezers

Instructions de montage

Pour le réfrigérateurs-congélateurs combinés NoFrost encastrés, pour une utilisation intégrée

Instrucciones de instalación

Para combinados frigoríficocongelador NoFrost incorporados, para uso integrado

Parlez-vous français? Voir page 18

Habla español? Véase página 34

MPORTANT

PLEASE READ AND FOLLOW THESE INSTRUCTIONS

These instructions contain Warning and Caution statements. This information is important for safe and efficient installation.

Always read and follow all Warning and Caution statements!



Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Caution indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

IMPORTANT

This highlights information that is especially relevant to a problem-free installation.

Make sure incoming voltage is the same as the unit rating.

To reduce the risk of fire, electric shock, or personal injury, installation work and electrical wiring must be done by a qualified electrician in accordance with all applicable codes and standards, including fire-rated construction.

TO THE INSTALLER

It is very important that the guidelines and instructions are followed in the manual to ensure proper installation and operation of the unit. The Installation Guidelines section contains important information for making sure the installation is correct. Read and understand all the information in Installation Guidelines and in this manual before the unit is installed.

⚠ CAUTION

Always wear protective devices such as protective gloves and eye shields when installing the appliance. Also use hearing protection when drilling holes into concrete floors.

Contents	Page
Planning Information	
Unit dimensions	4
Unit Venting	
Cabinet opening dimensions	
Panel Dimensions -	
Framed Cabinet Design	6
Panel Dimensions -	
Frameless Cabinet Design	7
Blocking For Safety	
Mounting the anti - tipping device on conc	rete
floors	8
Mounting the anti - tipping device on wood	den
floors	8
Mounting the anti tipping device at cabine	ts
deeper than 24"	9
Cover strips	
Ice Maker	
Safety instructions and warnings	10
Water connection	
Connection to the water supply	
Installation	
Leveling the Refrigerator	12
Fasten the appliance in the recess	
Before mounting the door panels	
Mounting the attachment brackets	
onto the door panels	13
Mounting the freezer drawer panels	
Mounting the refrigerator door panels	
Mounting the ventilation grille	

Installation Guidelines

Area Requirements

Verify the following:

- Floors can support refrigerator's weight plus approximately 1200 pounds (544 kg) of food weight.
- Finished kitchen floor height is level. Appliance must be shimmed level if the floor heights are not equal to make sure air vents are not obstructed.
- Remove anything attached to rear or side walls that can obstruct appliance opening.
- · Cutout dimensions are accurate.
- Electrical outlet is in correct location.

Do not install this refrigerator-freezer next to any other refrigerator. Installing this refrigerator-freezer next to any other refrigerator or freezer can cause condensation or cause damage to the appliance.

Electrical Requirement

If codes require a separate grounding circuit to be used, have a qualified electrician install the circuit.



Do not ground to a gas pipe. Check with a qualified electrician if you are not sure the appliance is properly grounded. Do not have a fuse in the neutral or grounding circuit.



ELECTRIC SHOCK HAZARD

- Electrically ground appliance.
- · Do not use an extension cord.
- Failure to follow these instructions could result in fire or electric shock.



ELECTROCUTION HAZARD

Electrical grounding required. This appliance is equipped with a three-prong (grounding) polarized plug for your protection against possible shock hazards.

- Do not remove the round grounding prong from the plug.
- Do not use a two-prong grounding adapter.
- Do not use an extension cord to connect power to the unit.



To protect the appliance from possible damage, allow the appliance to stand 1/2 to 1 hour in place before turning the electricity on. This allows the refrigerant and system lubrication to reach equilibrium.

Customer's Responsibility

A 115 Volt, 60 Hz, 15 Amp fused electrical supply is required. We recommend using a dedicated circuit for this appliance to prevent electrical overload. Follow the National Electrical Code and local codes and ordinances when installing the receptacle.

Blocking for Safety


The anti tipping brackets must be installed to prevent the unit from tipping after it is installed. Refer to Blocking for Safety.

Unit Venting

Do not restrict the air flow. Air flow must be provided for the unit to operate.

PLANNING INFORMATION

Unit Dimensions - Figure 1

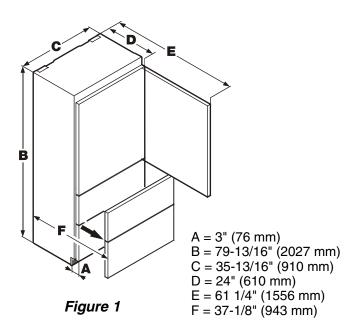

Door swing clearence - Figure 2

Please allow for door swing clearance at locations next to a wall.

The illustrated measurement is without mounted front panels. Be sure to add your panel thickness and handle depth to this measurement in order to avoid interferences.

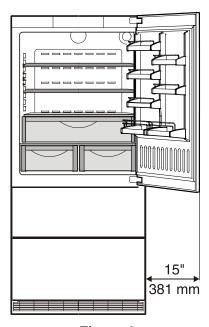


Figure 2

Unit Venting - Figure 3

HC 2060/2061 appliances do not require any ventilation openings in the cabinet. The required airflow is directed through the toe kick area.

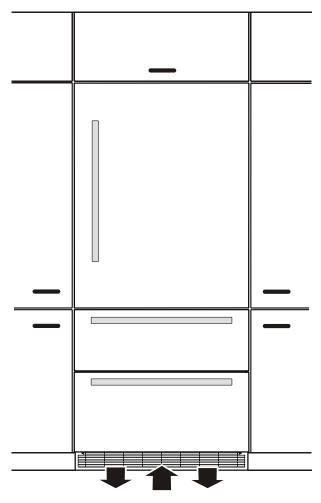



Figure 3

It is important to use the provided cover grille for the ventilation opening. This opening must not be covered with a cabinet base.

Cabinet Opening Dimensions - Figure 4

Cabinet Height C	Framed cabinet Depth B	Frameless cabinet Depth B
80"	24 3/4"	24"
84"	24 3/4"	24"

A = 36" (914 mm)

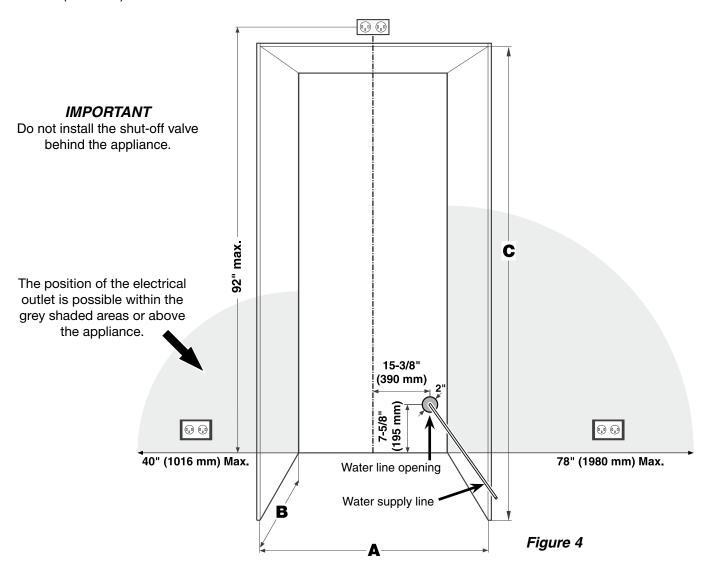

IMPORTANT

At 24" cabinets, the water line opening must be in the location as shown in *Figure 4*.

At cabinets deeper than 24" there is room to fit the pipe behind the appliance and the wall so there are no requirements for the water line lead out position.

IMPORTANT

The free length of the water supply line must be at least 31 - 1/2" (800 mm) when the tube comes out of the prescribed opening.

PLANNING INFORMATION

Panel Dimensions - Framed Cabinet Design - Figure 5

The panels should be at least 5/8 inch (16 mm) thick to allow the connecting rails to be fastened to them.

Cabinet Opening A	Refrigerator door panel B
80" (2032 mm)	45 - 1/4" (1150 mm)
84" (2134 mm)	49 - 1/4" (1251 mm)

IMPORTANT

The maximum panel thickness is 3/4" (19 mm).

You can order stainless steel panels for framed cabinet design.

Refrigerator door panel 80"- article-number 9900 333-00 Refrigerator door panel 84"- article-number 9900 331-00 Freezer drawer panels - article-number 9900 323-00

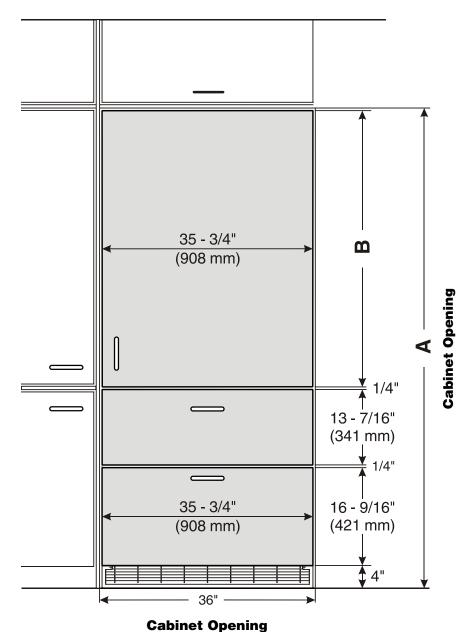


Figure 5

PLANNING INFORMATION

Panel Dimensions - Frameless Cabinet Design - Figure 6

The gap between all panels at frameless cabinet design is 1/4" (6 mm). The panels should be at least 5/8 inch (16 mm) thick to allow the connecting rails to be fastened to them.

Cabinet Opening C	Refrigerator door panel D
80" (2032 mm)	45 - 3/4" (1162 mm)
84" (2134 mm)	49 - 3/4" (1264 mm)

IMPORTANT

The maximum panel thickness is 3/4" (19 mm).

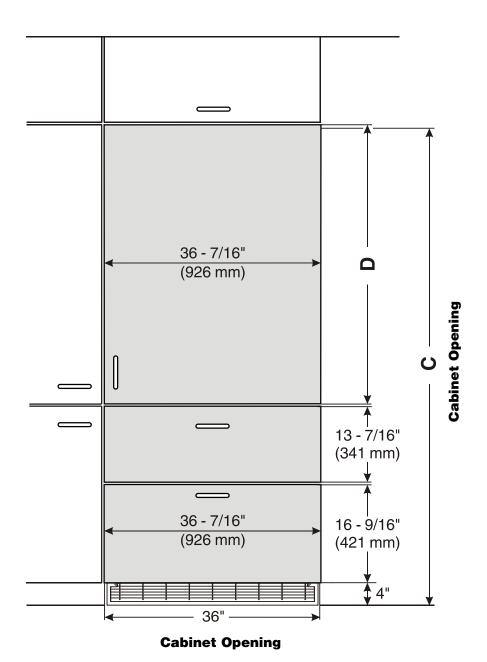


Figure 6

BLOCKING FOR SAFETY

Mounting the anti tipping device on concrete floors - Figure 7 - 8

Secure the appliance in place so it does not tip forward when the fully stocked door is opened. The anti tipping bracket is provided with the appliance.

1. Mark the center line of the appliance on the back wall. Align the anti tipping bracket center to this line.



Be sure that there is no plumbing or electrical wiring located in this area which screws or drills could damage.

2. Drill a 3/8" diameter hole in any position as shown in *Figure 5* using a carbide drill bit.

The depth of the holes must exceed the overall length of the anchors provided.

Clean the holes after drilling.

3. Attach washer and screw on hex nut to the end of each anchor.

Drive in all 3 anchors.

Align the bracket center to the center line on the back wall again.

Fasten the anchors by turning the hex nut.

4. Fasten bracket with 3 screws (1/4" x 2-1/8") into the wall plate *(Figure 8).*


Mounting the anti tipping device on wooden floors - Figure 9


 Mark the center line of the appliance on the back wall. Align the anti tipping bracket center to this line.

∕!\ WARNING

Be sure that there is no plumbing or electrical wiring located in this area which screws or drills could damage.

- 2. Fasten bracket to the wooden floor using 5 screws (1/4" x 2-1/8"). Drill pilot holes if necessary.
- 3. Fasten bracket with 3 screws (1/4" x 2-1/8") into the wall plate.

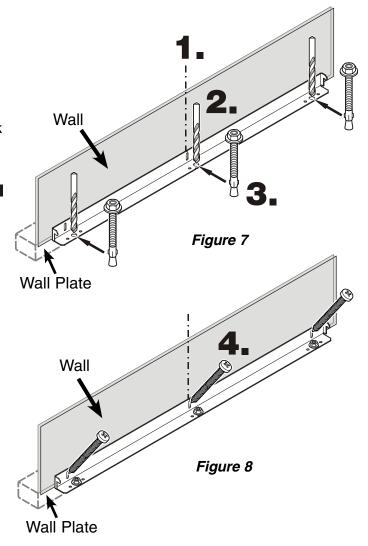

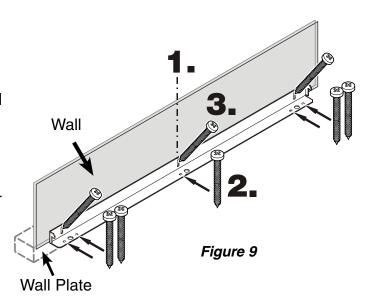

BLOCKING FOR SAFETY

Mounting the anti tipping device in cabinets deeper than 24" -

Figure 10 - 11

To ensure the compressor mounting plate reaches the anti tipping bracket at cabinets deeper than 24", a wooden spacer must be mounted between the appliance back and the wall. The anti tipping bracket will be fastened to the floor downwards and to the spacer backwards.



Be sure the wooden spacer is fastened securely to the floor.

Measuring for mounting the wooden spacer at framed kitchen cabinets - Figure 10


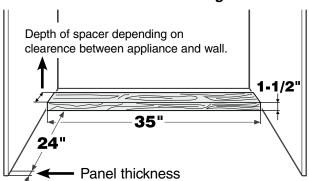


Figure 10

Measuring for mounting the wooden spacer at frameless kitchen cabinets - Figure 11

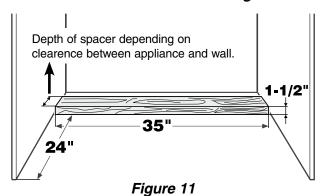

Cover strips - Figure 12

Before connection to the water supply, the cover strips provided must be fitted to the appliance. It is necessary because the appliance will be moved into its recess.

 Remove the cover band from the strips and stick them to the left and right front edge of the appliance housing (Figure 12).

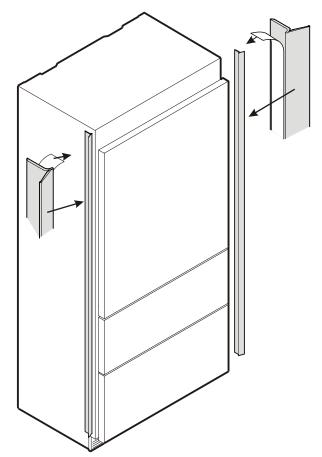


Figure 12

IceMaker

The icemaker for the combined refrigerator-freezer is located in the freezer compartment. These instructions only refer to the installation of the icemaker. Please refer to the Use and Care Manual provided with the appliance for operation instructions. The combined refrigerator-freezer must be level for the icemaker to function properly.

Safety Instructions and Warnings

- Do not install the water connection while the combined refrigerator-freezer is connected to an electrical outlet.
- The connection to the water supply may only be made by a trained and licensed plumber.
- The water quality must comply with the drinking water regulations for the geographical area where the appliance is located.
- All equipment and devices used to supply the water to the appliance must comply with the current regulations for your geographical area.

Water Connection

- The water supply pressure requirements are different based on whether or not the supplied Liebherr water filter is installed. With the filter installed, the pressure must be in the range of 40-90 psi (2.8-6.2 bar). Without the filter installed the acceptable pressure range is 22-87 psi (1.5-6 bar). Failure to meet these requirements will likely result in ice maker malfunction and possibly cause a water leakage that can damage flooring and surrounding furniture.
- Use a 1/4" OD copper line to connect the water supply to the solenoid valve. This is not supplied with the refrigerator (Figure 13).
- A shut-off valve, such as the saddle valve illustrated here, must be installed between the hose line and the



Figure 13

main water supply so the water supply can be stopped if necessary.

Do not install the shut-off valve behind the refrigeration unit.

- The solenoid valve has a metric R3/4 male connector. A R3/4 (metric) to a 1/4" OD adapter is supplied with the ice maker.
- Insert the water strainer provided into the OD adapter with the cavity downwards.




IMPORTANT

Be sure the strainer is inserted with the cavity downwards. Otherwise the strainer could be damaged when mounting the OD adapter onto the solenoid valve.

Connection to the Water Supply

- Move the appliance towards the final position and leave enough space to work behind.
- 2. Insert the water supply line into it's intended opening at the back of the appliance (Figure 14).

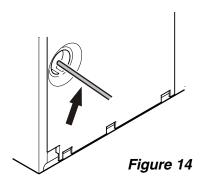


3. Move the power supply line to the area of the electrical outlet.





Do not connect to the electrical outlet before the installation is completed and the water line is connected to the solenoid valve. 4. Push the appliance slowly to the back wall until the compressor mounting plate makes contact with the anti-tipping bracket *(Figure 15)*.

To prevent the appliance from tipping forward the compressor mounting plate must have contact with the anti tipping bracket (Figure 15).

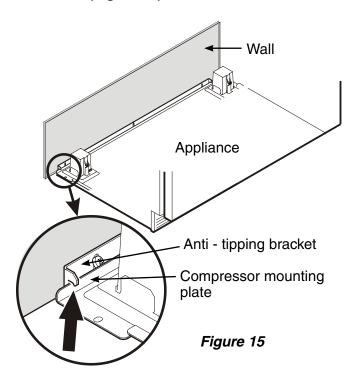

- 5. Remove the cover from the valve connector *(Figure 16)*.
- 6. The water line is visible at the front of the aplliance. Connect the water line with the OD adapter *(Figure 16)*.
- 7. Bleed the air from the water line by opening the water supply temporarily.
- 8. Screw the OD adapter onto the solenoid valve *(Figure 17)*.

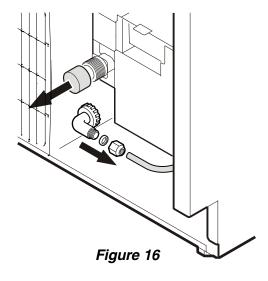

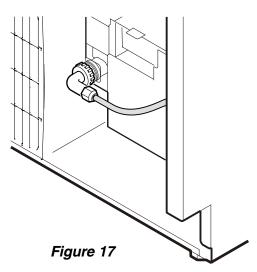

9. Open the shut-off valve for the water supply and check the entire water system for leaks.

IMPORTANT

After starting up the appliance, the water pipe system must be purged of any air. Refer to chapter "Bleeding the ice maker" in the operating instructions.

INSTALLATION

Leveling the appliance - Figure 18

- 1. The height can be adjusted in front by twisting the leveling feet ① .
- 2. Twist the adjusting bolt ② to set up the back of the appliance.
- 3. Rotate leveling feet ① until firmly in place against the floor.

⚠ WARNING I

To prevent the appliance from tipping forward the leveling feet ① (Figure 19) must have contact with the floor.

4. Align appliance with sides of kitchen cabinets by adjusting leveling feet and the supports.

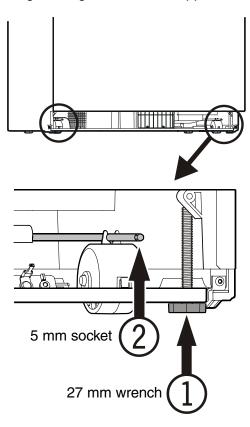


Figure 18

Fasten the appliance in the recess - Figure 19

Fasten the appliance in the recess through the premounted supports at left and right on the appliance housing using screws 4 x 16 mm.

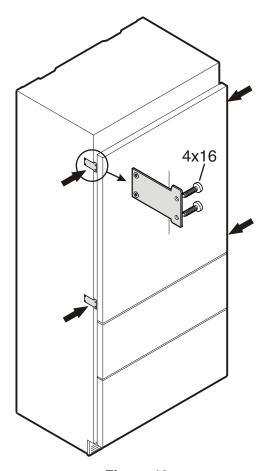



Figure 19

Before mounting the door panels

- Figure 20


Remove cover ① and unscrew the upper and lower attachment bracket ② of the refrigerator door *(Figure 20)*. This brackets will be mounted onto the refrigerator door panel.

IMPORTANTThe nuts are needed to fit the premounted panels onto the refrigerator doors.

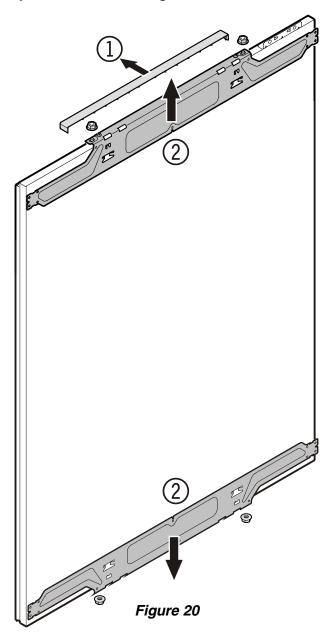

Unscrew the attachment brackets of both freezer drawers. These brackets will be mounted onto the freezer drawer panels (*Figure 21*).

IMPORTANTThe screws are needed to fit the premounted panels onto the freezer drawers.

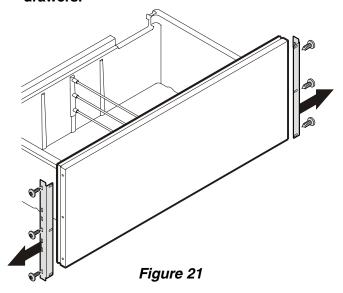

INSTALLATION

Mounting the attachment brackets onto the door panels - Figure 22

Mark a line with a distance of 41" and 4-1/4" from the bottom of the refrigerator door panel (Figure 22).

Align one of the dismounted brackets of the refrigerator door to the line on the refrigerator door panel as shown in *Figure 22 a.* Fasten the bracket with any hole wherever possible using a minimum of 6 screws 4 x 16 mm.

Align the second bracket of the refrigerator door to the bottom line on the refrigerator door panel as shown in *Figure 22 b.* Fasten the bracket with any hole wherever possible using a minimum of 6 screws 4 x 16 mm

Fasten the brackets provided onto the freezer drawer panels using three screws (4 x 16 mm) for each bracket considering the measurement in *Figure 22 c*.


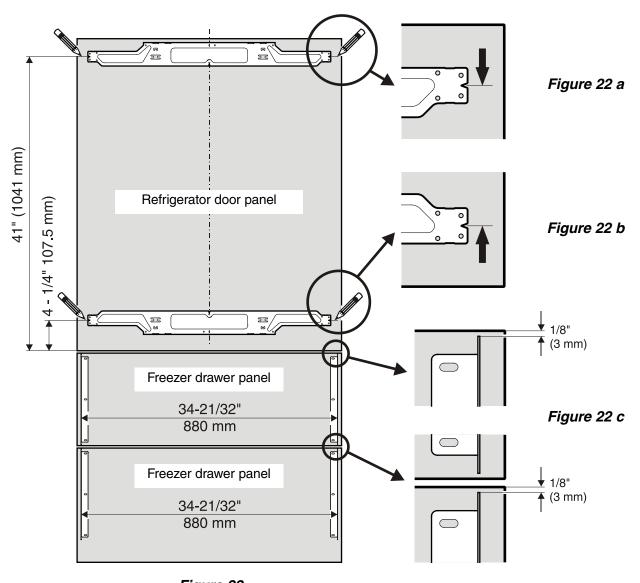



Figure 22

Mounting the refrigerator door panels


1. Turn in the adjusting bolts on the bottom of the refrigerator door as far as possible (*Figure 23*).

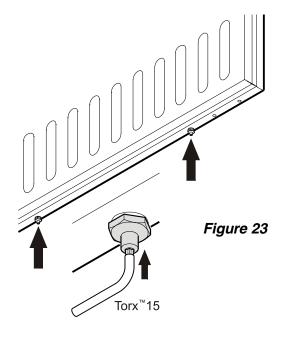

- 4. Close the door and check the height of the panel.
- 5. Align the panel in its vertical position if necessary. Loosen the hex nuts and turn the adusting bolts *(Figure 25)*.

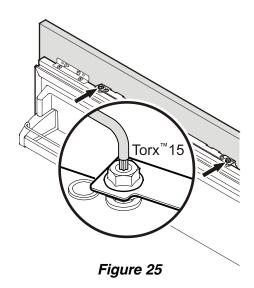

- 2. Open the refrigerator door and hang the panel on the adjusting bolts (*Figure 24*).
- 3. Screw on the hex nuts to the adjusting bolts and finger tighten temporarily *(Figure 24)*.

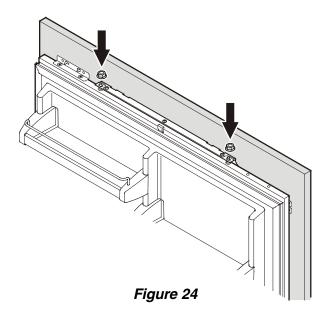

- 6. Align the panel horizontally (with the long holes in the attachment bracket) *(Figure 26)*.
- 7. Tighten the hex nuts.


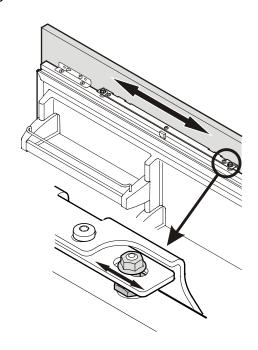


Figure 26

INSTALLATION

8. Turn the adjusting bolts (bottom refrigerator door) until they make contact with the attachment bracket *(Figure 27)*.

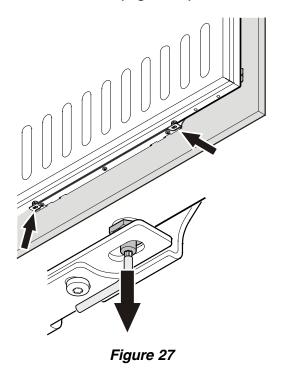

10. Loosen the three screws on the top of the attachment bracket, align the panel as shown in *Figure 29* and tighten the screws. This can also be done with the lower attachment bracket.


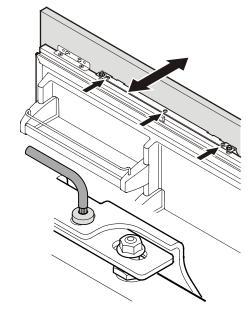


Figure 29

9. Screw on the hex nuts and tighten (Figure 28).

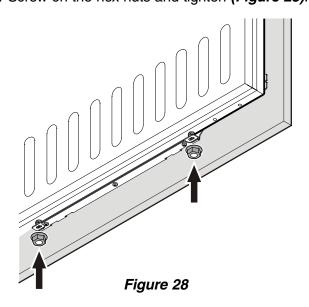

11. Click cover into place (Figure 30).

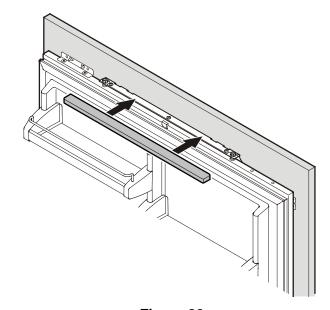


Figure 30

Mounting the freezer drawer panels - Figure 31

- 1. Pull out the upper freezer drawer and screw on the panel with three screws at left and right hand side using the screws as shown in *Figure 31*.
- Close the drawer and check the position to the surrounding cabinet panels. Align the panel in vertical direction by loosening the screws left and right. Finally tighten the screws.



Do not overtighten. Do not use a power driver.

- 3. Pull out the lower freezer drawer and fasten the lower panel in the same way.
- 4. Finally cover the gap between the drawer and the panel of both freezer drawers with the strips provided. Remove the foil from the adhesive surface of the strip and stick on the top of the appliance drawer (*Figure 31*) making sure the flexible gasket is fully inserted in the gap.


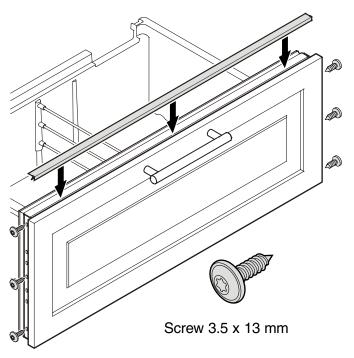


Figure 31

Mounting the ventilation grille -

Figure 32, 33

- 1. Pull out the bottom freezer drawer.
- Remove the blue protection film from the dust filter provided and insert the filter into its opening in the toe kick area as shown in *Figure 32*. Attach the filter at the bottom, press down the button and click into place.

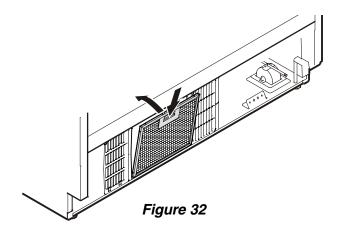

3. Mount the ventilation grille as shown in Figure 33.

IMPORTANT

Only use the ventilation grille provided with the appliance. This grille is required for proper operation of the appliance.

The ventilation opening must not be covered with a cabinet base.

Failure to use the supplied grille can result in product failure and will void the warranty.

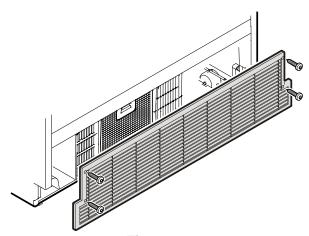


Figure 33

For Service in the U.S.: Liebherr Service Center

15545 N. 77th Street Scottsdale, AZ 85260 Phone: (480) 998-0141 Fax: (480) 998-7877

Toll Free: **1-866-LIEBHERR or 1-866-543-2437**

E-mail: Liebherr@adcoservice.com

For Service in Canada: EURO PARTS

579 Campbell Street P.O. Box 759 Lucknow, Ontario, N0G 2H0 Phone: (519) 528-5005 Fax: (519) 528-5001

Toll Free: **1-888-LIEBHERR or 1-888-543-2437**

www.euro-parts.ca

www.liebherr-appliances.com