

Window Wall (Electronic) Room Air Conditioner User Manual KWH20HRB, KWH26CRB, KWH26HRB, KWH39CRB, KWH39HRB



# Congratulations

Congratulations and thank you for choosing our Electric Window Wall room air conditioner. We are sure you will find your new air conditioner a pleasure to use. Before you use the air conditioner, we recommend that you read through the entire user manual, which provides the description of the air conditioner and its functions.


To avoid the risks that are always present when you use an electrical appliance, it is important that the air conditioner is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the air conditioner please check it is not damaged. If in doubt, do not use the air conditioner but contact your local Electrolux Customer Care Centre.



# Information on disposal for users

- Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this air conditioner, please contact your local authorities and ask for the correct method of disposal.

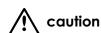

- The air conditioner is not intended for use by young children or infirmed persons without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- Contact an authorised installer for installation of this unit.
- Contact an authorised service technician for repair or maintenance of this unit.
- If the power cord is to be replaced, replacement work must be performed by authorised personnel only.
- Installation work must be performed in accordance with the national wiring Standards by authorised personnel only.

# Conditions of use

This appliance is intended to be useed in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels, and other residential type environments
- Bed and breakfast type environments

# Contents

Safety precautions	3
Unit parts identification	5
Operating instructions	5
nstallation instructions	9
Troubleshooting	12
Specifications	12

# Important notes



# caution

- Contact the authorised service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or infirmed persons without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- This air conditioner should be installed in accordance with AS/NZS 3000:2000 and your electricity suppliers rules.
- There are local council rules regarding maximum allowable noise levels emitted by air conditioners.
- If the power cord is to be replaced, replacement work shall be performed by authorised personnel only.
- Installation work must be performed in accordance with the national wiring standards by authorised personnel only. Wrong connection can cause over heating or fire.

# Safety precautions

Inside you will find many helpful hints on how to use and maintain your air conditioner properly.

Just a little preventative care on your part can save you a great deal of time and money over the life of your air conditioner. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of Troubleshooting Tips first, you may not need to call for service. Meanings of symbols used in this manual are shown below:



### warning

This symbol indicates information concerning your personal safety



# /!∖ caution

This symbol indicates information on how to avoid damaging the appliance



# ( i ) tips and information

This symbol indicates tips and information about use of the appliance



# environmental tip

This symbol indicates tips and information about economical and ecological use of the appliance



This symbol indicates never to do this



This symbol indicates always do this



Always do this

# warnina



Connect with power properly. Otherwise, it may cause electric shock or fire due to excess heat generation.



Do not operate or stop the unit by switching on or

It may cause electric shock or fire due to heat generation. Do not damage or use an unspecified power cord.



It may cause electric shock or fire. If the power cord is damaged, it must be replaced by the manufacturer or an authorised service centre or a



Do not modify power cord length or share the outlet with other appliances.

Do not operate with wet hands or in damp environment.

It may cause electric shock or fire due to heat generation.

similarly qualified person in order to avoid a hazard.



It may cause electric shock. Do not direct airflow at room occupants only.



Always ensure effective earthing. No earthing may cause electric shock.

This could damage your health.



Do not allow water to run into electric parts. It may cause failure of machine or electric shock.



Always install circuit breaker and a dedicated



Disconnect the power if strange sounds, smell, or smoke comes from the unit.



It may cause fire and electric shock.



Do not use the socket if it is loose or damaged. It may cause fire and electric shock.



Do not open the unit during operation. It may cause electric shock.



Keep firearms away. It may cause a fire.



Do not use the power cord close to heating appliances. It may cause fire and electric shock



Do not use the power cord near flammable gas or combustibles, such as gasoline, benzene, thinner, etc. It may cause an explosion or fire.



Ventilate room before operating air conditioner if there is a gas leakage from another appliance. It may cause explosion, fire and burns.



Do not disassemble or modify unit. It may cause failure and electric shock

# **Prior to Operation**

# caution



When the air filter is to be removed, do not touch the metal parts of the unit.

It may cause an injury.



Do not clean the air conditioner with water. Water may enter the unit and degrade the insulation. It may cause an electric shock.



Ventilate the room well when used together with a stove, etc.

An oxygen shortage may occur.



Do not put a pet or house plant where it will be exposed to direct air flow. This could injure the pet or plant.



Do not use for special purposes. Do not use this air conditioner to preserve precision devices, food, pets, plants, and art objects. It may cause deterioration of quality, etc.



Stop operation and close the window in storm or hurricane.

Operation with windows opened may cause wetting of indoor and soaking of household furniture.



Hold the plug by the head of the power plug when taking it out.

It may cause electric shock and damage.



Turn off the main power switch when not using the unit for a long time.

It may cause failure of product or fire.



Do not place obstacles around air-inlets or inside

It may cause failure of appliance or accident.



Ensure that the installation bracket of the appliance is not damaged due to prolonged exposure. If bracket is damaged, there is concern of damage due to falling of unit.



Always insert the filters securely. Clean filter once every two weeks.

Operation without filters may cause failure.



Do not use strong detergent such as wax or thinner but use a soft cloth.

Appearance may be deteriorated due to change of product colour or scratching of its surface.



Do not place heavy object on the power cord and ensure that the cord is not compressed. There is danger of fire or electric shock.



If water enters the unit, turn the unit off and disconnect the power, contact a qualified service technician.



Use caution when unpacking and installing. Sharp edges could cause injury.



Do not drink water drained from air conditioner. It contains contaminants and could make you sick.

### Preparing for operation

- 1 Contact an installation specialist for installation.
- 2 Plug in the power plug properly.
- Do not use a damaged or non-standard power cord.
- Do not share the same outlet with other appliances.
- Do not use an extension cord.
- Do not start/stop operation by plugging /unplugging the power cord.

#### Usage

- 1 Exposure to direct airflow to occupants, pets or plants for an extended period of time could be hazardous to your health.
- 2 Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.

### Cleaning and maintenance

- Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
- 2 Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
- When cleaning the unit, first make sure that the power and circuit breaker are turned off.

# Operating temperature

# **Cooling Mode**

Ind	oor	Out	door
Max.	Min.	Max.	Min.
32°C	17°C	43°C	17°C


### **Heating Mode**

Ind	oor	Out	door
Max.	Min.	Max.	Min.
10°C	1°C	24°C	27°C


Note: Performance may be reduced outside of these operating temperatures.

# Unit parts identification

- Front panel
- 2 Air filter
- Frame
- 4 Cabinet
- Air inlet grille (outdoor side)
- Air outlet grille
- Electronic control keypad
- Power supply cord and plug
- Remote control

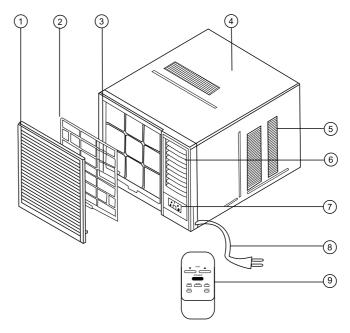

- 1 Power cord conductors are distinguished according to colour as follows (see Fig.1)
- 2 For your safety and protection, this unit is earthed through the power cord (see Fig.2)
  - Please contact the manufacturer or its service agent or a similar qualified person if you want to replace it.
- Be sure that the unit is being correctly grounded. The wall outlet (Air-Break Switch) should be provided with reliable earth wire.
- 4 The unit should be provided with an individual circuit and the circuit breaker/fuse rating should be the same as that of the power cord and wall outlet.

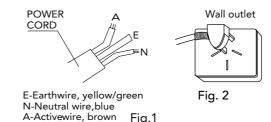


# **Operating instructions**

#### Controls


The electronic control keypad will look like one of the following:

# Reverse Cycle Models

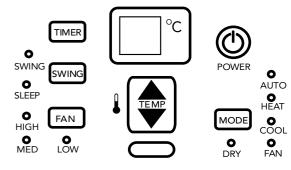

\*SWING button is not applicable for KWH20HRB.

# Cooling only models

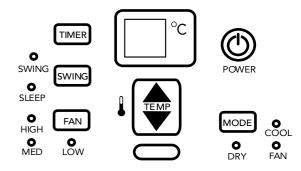


#### Vent control


The vent control is located above the control knobs. The operation method is different on different models (see the following figures).

For maximum cooling efficiency, CLOSE the vent. This will allow internal air circulation.

OPEN the vent to discharge stale air.

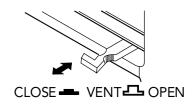

To open the vent, pull the lever toward you To close it, push it in.

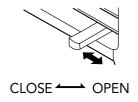

To open the vent, set the lever to the right position To close it, set the lever in the left position.

#### Operating instructions

#### Power:

Press the POWER keypad to turn the unit on/off. (The TIMER keypad controls the auto start/stop feature of the unit.)

#### Mode:

Press the "MODE" keypad to select the appropriate operating mode. For the Reverse Cycle models (cooling & heating), the mode selection will alternate between AUTO, HEATING, COOLING, FAN and DRY. For the Cooling only models, select the operating mode from COOLING, FAN and DRY. The green indicator light beside the "MODE" option will illuminate, identifying the mode selected.

When using the DRY and AUTO mode, you cannot select a fan speed. The fan motor operates on LOW speed in DRY mode and on MED speed in AUTO mode.

#### ▲ Temperature settings up:

Press the **A** keypad to increase the set (operating) temperature of the unit.

Each time the keypad is pressed the temperature increases as follows:

1°C (Celsius Scale) Maximum Setting 31°C

### ▼ Temperature settings down:

Press the ▼ keypad to decrease the set (operating) temperature of the unit.

Each time the keypad is pressed the temperature decreases as follows:

1°C (Celsius Scale) Minimum Setting 16°C

#### Fan:

Press this keypad button to activate the appropriate fan speed setting. Each press of the button will alternate through LOW, MED, HIGH fan speed options. The green indicator light beside the FAN speed option will illuminate, identifying the fan speed selected.

#### Swing:

Press the "SWING" keypad to activate the automatic air swing (oscillation) feature.

The green indicator light adjacent to the "SWING" keypad will illuminate, identifying that the selected mode is operational. The vertical louvers will oscillate back and forth (side to side) automatically sweeping air alternatively for comfortable cooling/heating. To stop the air swing feature, pressing the "SWING" keypad again, the green indicator light adjacent to the keypad will go off.

Pressing the "SWING" keypad for 2 seconds will activate the SLEEP mode which can reduce noise creating a comfortable sleeping environment.

When the SLEEP mode is activated, the green indicator light beside the "SLEEP" function will illuminate.

\*SWING button is not applicable for KWH20HRB.

#### Timer:

Press the "TIMER" keypad to activate the "auto start/auto stop" timer function.

Auto start/stop programs can be set from  $0\sim12$  hours. Each press of the "TIMER" keypad will increase the selected time in 1 hour increments.

#### Dry:

In the Dry mode, the air conditioner will generally operate in the form of a dehumidifier.

Since the conditioned space is a closed or sealed area, some degree of cooling will continue.

#### Cooling

The temperature settings are adjustable between  $16^{\circ}$ C to  $31^{\circ}$ C. Cooling begins automatically when the room temperature is  $1^{\circ}$ C above the set point, and stops when the room temperature is  $1^{\circ}$ C below the set point. The fan will not stop running.

#### Heat:

The temperature settings are adjustable between  $16^{\circ}$ C to  $31^{\circ}$ C in heating mode.

The default temperature setting is 24°C in heating mode and the fan speed is optional.

#### Notes:

- When changing the temperature setting, the fan motor operates at LOW speed for 3 minutes first for compressor protection feature before heating begins.
- When heating stops, there may be a slight delay of 30 seconds for the fan motor to stop.
- If the condensor temperature is below 35°C, the fan will run in LOW speed despite the FAN setting.
- If the condenser temperature is above 38°C, the fan will run at the FAN setting.
- If the compressor is shut down by a malfunction, the fan will immediately shut down with the compressor.

#### Auto:

The fan motor remains on MED speed in AUTO mode. The unit will select the appropriate operating mode from FAN, COOL or HEAT based upon the temperature difference between the actual and desired room temperature. If the actual room temperature is 2°C above the set point, the unit operates in cooling mode. When the actual room temperature is not 2°C or higher above the set point and not 1°C or lower below the set point, the unit will select the FAN mode. When the actual room temperature is 2°C below the set point, the unit will operate in HEAT mode.

Note: When activating the SLEEP mode when the unit is in AUTO mode, the fan motor will change into LOW speed mode immediately.

#### Sleep:

Press and hold the "SWING" keypad for 2 seconds or use the remote control to activate the "SLEEP" feature . Press and hold the "SWING" keypad or use the remote control again for 2 seconds to deactivate the "SLEEP" feature. In the Cooling mode, the cooling temperature set point will increase 1°C per hour after the "SLEEP" mode is selected. Two hours later, the set point will continue at this temperature and the fan motor will remain on LOW speed. In the Heating mode, the heating temperature set point will decrease 1°C per hour after the "SLEEP" mode is selected. Two hours later, the set point will continue at this temperature and the fan motor will remain on LOW speed. Using the "SLEEP" mode will reduce noise creating a comfortable sleeping environment.

Note: When activating the SLEEP mode in AUTO mode, the set temperature will not change over time.

# Remote control features

The hand held remote control unit allows you to control all operational aspects of your Air Conditioner, from the convenience of your favourite armchair. Here are some things you should know about how to operate your Air Conditioner with the hand held remote control.

#### emp:

Increases / Decreases operating TEMPERATURE only.

#### Power:

Turns the power to the main unit "on/off" only.

#### Mode

Activates the "AUTO" (if applicable), "HEAT" (if applicable), "COOL", "FAN" or "DRY" function.

#### Timer:

Activates the "auto START" or "auto STOP" program from 0-12 hours (1 hour increments).

#### Sleep:

Activates the "SLEEP" mode.

#### Swing:

Activates the automatic air SWING (vertical) louver oscillation) feature. \*SWING button is not applicable for KWH20HRB.

#### Fan:

Activates the FAN speed settings (HIGH, MED, LOW).

#### Ratteries.


To operate the hand held remote control, you will require two AAA 1.5Volt batteries (included).

NOTE: Batteries should be replaced when:

- a) No signal (beep) is heard from the main unit when initiating program commands from the remote control to the main unit.
- b) The main unit does not respond to the remote control program commands.

#### **Battery Replacement:**

- 1 Slide the lower (battery) cover down (Located on rear of remote control unit).
- 2 Insert two "AAA" Batteries inside the battery chamber (as depicted inside the battery chamber).
- 3 Re-install lower battery cover.
- 4 If the remote control is not being used for extended time periods, (vacation, off season) the batteries should be removed from the remote control unit.

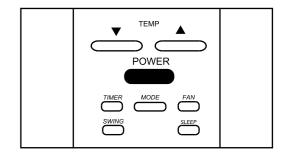

### **Remote Control Operating Instructions:**

The hand held remote control unit operates within a range of 7 metres (23ft) from the receiver located inside the unit. Any obstruction between the receiver and the hand held remote may cause signal interference, limiting the ability to program the main unit.

Each time a remote control button is pressed, a beep will sound indicating a command (signal) is transmitted and received on the unit. When the command is received, the appropriate function will be displayed (temporarily) in the LED display window and the green indicator light corresponding to the selection mode will illuminate on the main control panel.

NOTE: the LED display will default to show the ambient room temperature within 10 seconds of all program commands.

### Power:

To turn the (air conditioner) power on/off, aim the remote control at the receiver (window) on the unit and press the "POWER" button.

#### Mode:

Press the "MODE" button to select either "AUTO", "HEATING", "COOLING", "FAN" or "DRY" mode (Cooling & Heating model) or "COOLING", "FAN" or "DRY" mode (Cooling only model).

#### Set cooling/heating/auto temperature:

Press the "TEMP" (up/down) buttons to select (increase/decrease) the required operating temperature, the selected temperature will appear (temporarily) in the LED display.

The temperature settings are adjustable between 16°C and 31°C.

#### Fan:

Press the "FAN" button to select the required operating fan speed (HIGH, MED or LOW).

# Swing:

Press the "SWING" button to activate the swing feature (the vertical louvres will oscillate automatically from side to side). Press the "SWING" button again to deactivate the "SWING" feature. \*SWING button is not applicable for KWH20HRB.

#### Timer:

Press the "TIMER" button to activate the "auto start/auto stop" timer function. Auto start/stop programs can be set from 0~12 hours. Each press of the "TIMER" button will increase the selected time in 1 hour increments.

### Sleep:

In the Cooling mode, the cooling temperature set point will increase 1°C per hour after the "SLEEP" mode is selected. Two hours later, the set point will continue at this temperature and the fan motor will remain on LOW speed. In the Heating mode, the heating temperature set point will decrease 1°C per hour after the mode is selected. Two hours later, the set point will continue at this temperature and the fan motor will remain on LOW speed. Using the "SLEEP" mode will reduce noise creating a comfortable sleeping environment.



# caution

NEVER operate the air conditioner without the air filter, as dust/dirt particles can contribute to equipment failure.


### Vertical air flow adjustment (manually)

To adjust the vertical air flow direction, adjust any one of the horizontal louvre blades. When adjusting the horizontal louver blades up or down, always keep the top or bottom blades horizontal. This can effectively prevent water droplets condensing on the front panel of the unit.



#### Air Filter

The air filter behind the inlet grille should be checked and cleaned at least once every 2 weeks (or as necessary) to maintain optimal performance of the air conditioner.

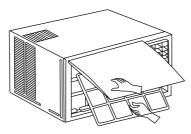

# How to remove the air filter

- 1 Hold the slot under the front panel, then uplift it outwards, and remove the front panel.
- 2 Pinch the handle under the air filter and make the air filter arched, remove it from the slot from underside to upside.
- 3 Clean the filter with warm, soapy water. The water should be below 40°C to prevent distortion of the filter.
- 4 Rinse off and gently shake off excess water from the filter. Allow the filter to dry before replacing it. To prevent distortion of the filter, do not dry in direct sunlight.




#### Drainage

To meet different requirement of different type of air conditioner, there are two kinds of methods for your choice to treat the condensed water.

### For cooling only models:

You can choose back drainage or non-drainage. See the following procedure to perform back drainage:


- 1 Fit the seal onto the drain joint (provided with your air conditioner accessory).
- 2 Remove the rubber plug from the back of the unit.
- 3 Attach the drain joint to the back of the cabinet where you remove the plug and rotate 90 degrees to securely assemble them.
- Connect the drain joint with an extension drain hose (Locally purchased).

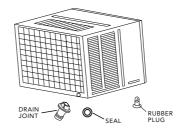

# For Reverse Cycle Models:

You can choose bottom drainage. See the following procedure to perform bottom drainage:

- 1 Take out the drain pan and screws (provided with your air conditioner accessory).
- 2 Install the drain pan at the bottom of the unit and secure with screws provided.
- 3 Connect the drain hose to the outlet located at one side of the drain pan. You can purchase the drain hose or tubing locally to satisfy your particular needs (Drain hose is not supplied).

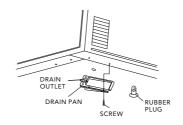

# Installation instructions


#### Select the best location


- 1 To avoid vibration and noise, make sure the unit is installed securely and firmly.
- 2 Install the unit where the sunlight does not shine directly on the unit.
  - If the unit receives direct sunlight, build an awning to shade the cabinet.
- 3 There should be no obstacle, such as a fence or wall, within 50cm from the back of the cabinet because it will prevent heat radiation of the condensor.
  - Restriction of outside air will greatly reduce the cooling and heating efficiency of the air conditioner.
- 4 Install the unit a little obliquely outward not to leak the condensed water into the room (about 10mm or 1/4 bubble with level).
- 5 Install the unit with its bottom portion 75~150cm above the floor level.
- 6 The power cord must be connected to an independent circuit. The yellow/green wire must be grounded.



# caution

All side louvers of the cabinet must remain exposed to the outside of the structure.

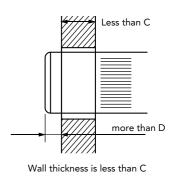

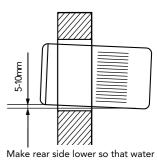

will drain out smoothly

#### Installation of the Housing

### Step 1

Remove the air conditioner from its packaging, remove fixing screws and slide the air conditioner out of its housing (Refer to Installation Steps).


#### Step 2

Prepare the hole in the wall so that the bottom of the housing is well supported, the top has minimum clearance and the air inlet louvers have clearance as shown below in options A and B. Holes from the outside through to the cavity should be sealed. The housing should slope down towards the rear by about 5mm to allow water formed during operation to drain.

#### Step 3

Install the housing into the wall and secure. Ensure the foam seals are not damaged. Flash, seal or fill gaps around the inside and outside to provide satisfactory appearance and protection against the weather, insects and rodents.

Note: unit may be supported by a solid frame from below or by a hanger from a solid overhead support.

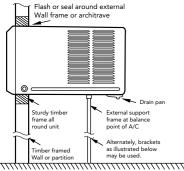


Preferred method of installation into a timber framed wall, partition or window.


# Installation of the unit into the Housing


- 1 Slide the unit into the housing until it is firmly against the rear of the housing. Care is required to ensure the foam sealing strips on the housing remain in position.
- 2 Connect the air conditioner to the power and position excess cord length beneath the air conditioner base.
- 3 Engage the chassis fixing brackets into the bottom housing rail and secure to the base with the screws provided.
- 4 Remove the front panel from it's carton and plastic bag and fit as per the Installation Instruction.
- 5 Switch unit on. Check for operation of the unit and check for vibration in the installation.
- 6 Fit the drain pan to the housing and run a drain line to a suitable location if required.

Note: unit may be supported by a solid frame from below or by a hanger from a solid overhead support.

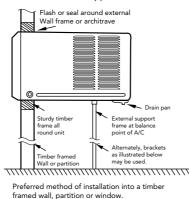

Installations of the unit into the wall

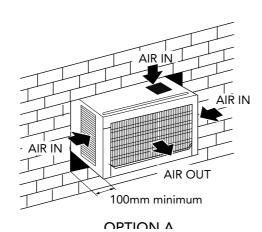


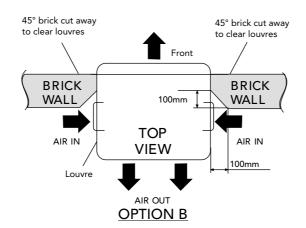



#### **Installation Steps**


#### Step 1. Remove the front panel and the air filter


- 1 Hold the slot under the front panel, then uplift it outwards, and remove the front panel (See Fig.1).
- 2 Pinch the handle under the air filter and make the air filter arched, remove it from the slot from underside to upside (See Fig.2).

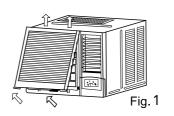


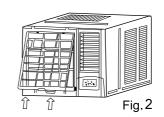

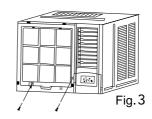

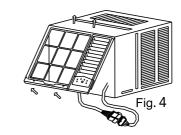

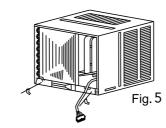

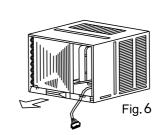


Step 2. Re move the frame.


- 1 Remove the two fixing screws from the frame (See Fig.3).
- 2 Grasp the left corner of the frame's underside, release the coupler plugs, then loosen the frame (See Fig.4).


# Step 3. Installation.

- 1 Remove the two fixing screws on the chassis fixing brackets, then remove the chassis fixing brackets (See Fig.5).
- 2 Grasp the handle on the chassis and carefully slide the air conditioner out of the cabinet (See Fig.6).
- 3 Make sure the discharge points to the drain pan are aligned before the chassis is pushed into the cabinet (See Fig.7).
- 4 Push the unit chassis into the cabinet (See Fig.8).

5 Install the two chassis fixing brackets using the two fixing screws (See Fig.5).

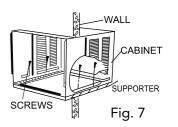

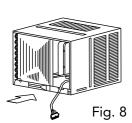

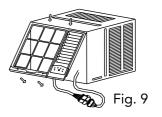


#### Step 4. Install the frame.

- 1 Install the frame and connect the coupler plugs, making sure not to interfere with the temperature sensor cable (See Fig.9).
- 2 Fix the screws on the frame (See Fig.3).

# Step 5. Install the air filter and front panel.

- 1 Install the air filter into the frame's slot from upside to underside (See Fig.2).
- 2 Hang the front panel on the frame's buckle, then press the front panel into the frame's slot until you hear a click (See Fig10).

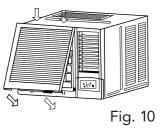

10 installation instructions Kelvinator Air Conditioning

# **Troubleshooting**

### **Troubleshooting Tips**

Save time and money! Review the chart below first and you may not need to call for service.

### Normal operation

- You may hear a pinging noise caused by water being picked up and thrown against the condenser on rainy days or when the humidity is high. This design feature helps remove moisture and improve efficiency.
- You may hear the thermostat click when the compressor cycles on and off.
- Water will collect in the base pan during high humidity or on rainy days. The water may overflow and drip from the outdoor side of the unit.
- The fan may continue to operate when the compressor has cycled off.

#### Abnormal operation

Abhornal operation			
Problem	Possible causes	What to do	
Air conditioner does not start	The air conditioner is unplugged.	Make sure the air conditioner plug is pushed completely into the outlet and switched on.	
	The fuse is blown/circuit breaker is tripped.	Check the house fuse/circuit breaker box and replace the fuse or reset the breaker.	
	Power failure.	If power failure occurs, switch off and disconnect/unplug the power cord. When power is restored, reconnect (plug in) the power cord, switch on the power and wait 3 minutes to restart the air conditioner to prevent tripping of the compressor overload.	
Air conditioner does not cool as it should	Airflow is restricted.	Make sure there are no curtains, blinds, or furniture blocking the front of the air conditioner.	
	The air filter is dirty.	Clean the filter at least every 2 weeks. See the operating instructions section.	
	The room may have been hot.	When the air conditioner is first turned on you need to allow time for the room to cool down.	
	Cold air is escaping.	Check for open furnace floor registers and cold air returns. Set the air conditioner's vent to the closed position.	
	Cooling coils have iced up.	See Air Conditioner Freezing Up below.	
Air conditioner freezing up	Ice blocks the air flow and stops the air conditioner from cooling the room	Set the fan at MED or HIGH until the ice melts.	

# Failure Indicator Display:

Indicates a malfunction of the indoor room temperature sensor

Indicates a malfunction of the evaporator temperature sensor

Indicates a malfunction of the outdoor condenser temperature sensor

Note: When one of the above malfunctions occurs, turn off the unit, and check for any obstructions. Restart the unit, if the malfunction is still present, turn off the unit and unplug the power cord. Contact the manufacturer or its service agents or a similar qualified person for service.

Indicates frosting protection (Turn off the unit and restart it to return to normal operation).

# **Specifications**

#### Unit dimensions:

Model kW (Btu/h)	Body dimension (mm) (WxHxD)
< 2.6 kW (9000)	452x342x550
2.6 kW (9000) <model< (12000)<="" 3.5="" kw="" td=""><td>600x380x560</td></model<>	600x380x560
3.5 kW (12000) <model< (18000)<="" 5.3="" kw="" td=""><td>660x430x687</td></model<>	660x430x687
> 5.3 kW (18000)	660x428x770

# Suggest minimum wire size (AWG:American Wire Gage):

Appliance Amps	AWG Wire Size
10	18
13	16
18	14
25	12
30	10

12 troubleshooting Kelvinator Air Conditioning Specifications 13

Notes	

# ☼ Electrolux Warranty

FOR SALES IN AUSTRALIA
APPLIANCE: WINDOW WALL AIR CONDITIONER

This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

- 1. In this warranty
  - (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
  - (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No. 2) 2010:
  - (c) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
  - (d) 'ASC' means Electrolux' authorised serviced centres;
  - (e) 'Electrolux' means Electrolux Home Products Pty Ltd of 163
     O'Riordan Street, Mascot, NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia;
  - (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period;
  - (g) 'Warranty Period' means:
  - (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia for 24 months following the date of original purchase of the Appliance;
  - (ii) where the Appliance is used for commercial purposes (including being used to directly assist a business or where the Appliance is used in a multi-family communal or share type environment), the Appliance will then be warranted against manufacturing defects in Australia for 3 months, following the date of original purchase of the Appliance.
  - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
- This warranty only applies to Appliances purchased and used in Australia and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia.
- 3. During the Warranty Period Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
- Parts and Appliances not supplied by Electrolux are not covered by this warranty.
- You will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of:
  - (a) travel of an authorised representative;
  - (b) transportation and delivery of the Appliance to and from Electrolux or its ASC.

In all instances, unless the Appliance is transported by Electrolux or an Electrolux authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC.

- Proof of purchase is required before you can make a claim under this warranty.
- You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
- (a) the Appliance is damaged by:
  - (i) accident
  - (ii) misuse or abuse, including failure to properly maintain or service
  - (iii) normal wear and tear
  - (iv) power surges, electrical storm damage or incorrect power supply
  - (v) incomplete or improper installation
  - (vi) incorrect, improper or inappropriate operation
  - (vii) insect or vermin infestation
  - (viii) failure to comply with any additional instructions supplied with the Appliance;
- (b) the Appliance is modified without authority from Electrolux in writing;
- (c) the Appliance's serial number or warranty seal has been removed or defaced:
- (d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC.
- This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased.
- To the extent permitted by law, Electrolux excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
- 10. For Appliances and services provided by Electrolux in Australia, the Appliances come with a guarantee by Electrolux that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
- 11. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
- 12. To enquire about claiming under this warranty, please follow these steps:(a) carefully check the operating instructions, user manual and the terms of this warranty;
  - (b) have the model and serial number of the Appliance available;
- (c) have the proof of purchase (eg an invoice) available;
- (d) telephone the numbers shown below.
- 13. You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

### Important Notice

Before calling for service, please ensure that the steps listed in point 12 above have been followed.

#### FOR SERVICE

or to find the address of your nearest state service centre in Australia PLEASE CALL 13 13 49

For the cost of a local call (Australia only)

SERVICE AUSTRALIA

Electrolux

ELECTROLUX HOME PRODUCTS www.electrolux.com.au

FOR SPARE PARTS or to find the address of your nearest state spare parts centre in Australia PLEASE CALL 13 13 50

For the cost of a local call (Australia only)

GWWAC\_Warr\_Apr11



If you'd like further information about Kelvinator appliances, please visit your retailer, phone or email our Customer Care team or visit our website.

telephone: 1300 363 640 fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.kelvinator.com.au

Kelvinator. We are part of the Electrolux family. Share more of our thinking at www.electrolux.com.au